5-6675-200-25 P

TM 5-6675-200-25P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT AND GENERAL SUPPORT,
AND DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST

THEODOLITE: DIRECTIONAL 5.9 IN. LG, TELESCOPE, DETACHABLE TRIBRACH W/ACCESSORIES AND TRIPOD (WILD HEERBRUGG MODEL T-16) FSN 6675-542-1683

This copy is a reprint which includes current pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JANUARY 1967

copy available

D 101.11:

CHANGE
No. 1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., *28 September 1967*

Organizational, Direct and General Support, and Depot Maintenance Repair Parts and Special Tools List

THEODOLITE: DIRECTIONAL 5.9 IN. LG, TELESCOPE DETACHABLE TRIBRACH W/ACCESSORIES AND TRIPOD (WILD HEERBRUGG MODEL T-16-0.2 MIL) FSN 6675-542-1683

TM 5-6675-200-25P, 26 January 1967, is changed as follows:

All changes, additions, or deletions of Federal stock numbers or manufacturer's part numbers within this change should be appropriately reflected in the index.

SECTION 5
REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE

Page	Line	Action	(1) Source, maintenance, and recoverability code: Source	Maintenance	Recoverability	(2) Federal stock No.	(3) Description	(4) Unit of issue	(5) Quantity incorporated in unit pack	(6) Quantity incorporated in Unit	(7) 30 Day DS/GS maint allowances: 1-20	21-50	51-100	(8) 1-year allowances per 100 equipments/ contingency planning purposes	(9) Depot maint allowance per 100 equipments	(10) Illustrations: Figure No.	Item or symbol No.
							PART I										
							6702 — OPTICS										
14	0103	Ch source colm 1; add maintenance colm 1.	X2	F	....	.....	CLIP, RETAINING										
	0105	Ch maintenance colm 1.	....	F	....	6675-377-4907	MIRROR										
	0106	Ch maintenance colm 1.	....	F	....	6675-378-9517	PIN										
	0107	Ch maintenance colm 1.	....	F	....	5305-560-6343	SCREW										
	0108	Ch maintenance colm 1.	....	F	....	5305-378-9534	SETSCREW										

By Order of the Secretary of the Army:

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

Distribution:

Active Army:

USASA (2)
ACSI (1)
DCSLOG (1)
CNGB (1)
TSG (1)
CofEngrs (3)
CC-E (1)
Dir of Trans (1)
CofSptS (1)
USAMB (1)
USA Arty Bd (2)
USA Armor Bd (2)
USAIB (2)
USARADBD (2)
USAAESWBD (2)
USAAVNTBD (2)
USCONARC (3)
OS Maj Comd (5) except
USARJ (1)
USASETAF (2)
USAMECOM (48)
USASMC (1)
USACDCEC (10)
MDW (1)
Armies (2)
Corps (2)
USAC (1)
Div (2)
Engr Bde (1)
USMA (2)
Svc Colleges (2)
Br Svc Sch (2)
Gen Dep (10)
Engr Dep (10)
Army Dep (2) except
TOAD (3)
USA Tml Comd (2)
Army Tml (1)
Div Engr (2)
Engr Dist (2)
USA Engr R&D Lab (3)
Engr Cen (5)
USAREUR Engr Proc Cen (2)
USAREUR Engr Sup Con Agcy (10)
Engr FLDMS (2)
Ft Knox FLDMS (10)
Fld Comd, DASA (8)
AMS (3)
USACOMZEUR (2)
MAAG (1)
JBUSMC (1)
Units org under fol TOE:—2 ea. UNOINDC

5-48	6-566
5-237 (5)	6-595
5-262 (5)	6-715
5-278 (5)	6-716
5-279	
1-47	
6-215	
6-315	
6-316	
6-455	
6-456	
6-558	

NG: State AG (3).

USAR: Same as active Army except allowance is one copy to each unit. For explanation of abbreviations used, see AR 320-50.

TECHNICAL MANUAL
No. 5-6675-200-25P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., *26 January 1967*

ORGANIZATIONAL, DIRECT AND GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

THEODOLITE: DIRECTIONAL 5.9 IN. LG, TELESCOPE, DETACHABLE TRIBRACH W/ACCESSORIES AND TRIPOD (WILD HEERBRUGG MODEL T-16) FSN 6675-542-1683

		Paragraph	Page
SECTION 1.	INTRODUCTION		
	Scope	1	iv
	General	2	iv
	Explanation of columns	3	iv
	Special information	4	vi
	Instructions for locating repair parts	5	vi
	Abbreviations	6	vi
	Index of Federal supply codes	7	vi
	Reporting of equipment publication improvements	8	vi
2.	PRESCRIBED LOAD ALLOWANCE		vi
SECTION 3.	REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE		
Part I.			
Group 18.	Body, Cab, Hood and Hull		
1808	Straps, carrying cases		1
22.	Body, Chassis or Hull, and Accessory Items		
2202	Accessory items		1
67.	Precision Instruments and Systems, Mechanical		
6702	Optics		2
6704	Batteries		2
6705	Lamps		2
6712	Mounted connecting devices and contacts		2
6717	Power supply		2
6719	Tripods		2
99.	Parts Peculiar		
9901	Parts peculiar with more than one application		3
Part II.			
Group 22.	Body, Chassis or Hull and Accessory Items		
2202	Accessory items		4
67.	Precision Instruments and System Mechanical Electrical		
6701	Telescope assembly		4
6702	Optics		4
6717	Power supply		5
6718	Compass and level		5
6719	Tripods		5
95.	General Use Standardized Parts		
9501	Bulk material		6

*This manual supersedes TM 5-6675-200-25P, 14 June 1963 and C1, 18 March 65.

Page

Part III.
Group 22. Body, Chassis or Hull and Accessory Items
2202 Accessory items ---- 7
67. Precision Instruments and Systems, Mechanical
6701 Telescope assembly ---- 7
6702 Optics ---- 7
6718 Compass and level ---- 8
95. General Use Standardized Parts
9501 Bulk material ---- 8

SECTION 4. SPECIAL TOOLS, TEST AND SUPPORT FOR ORGANIZATIONAL MAINTENANCE

Part I.
Group 26. Tools and Test Equipment
2604 Special tools ---- 9

Part II.
Group 26. Tools and Test Equipment
2604 Special tools ---- 10

Part III. Tools and Test Equipment
2604 Special Tools ---- 11

SECTION 5. REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE

Part I.
Group 18. Body, Cab, Hood and Hull
1808 Straps, carrying cases ---- 12
22. Body, Chassis or Hull, and Accessory Items
2202 Accessory items ---- 12
67. Precision Instruments and Systems, Mechanical
6701 Telescope assembly ---- 13
6702 Optics ---- 13
6703 Mechanical, structural, and precision parts ---- 16
6704 Batteries ---- 21
6705 Lamps ---- 21
6712 Mounted connecting devices and contacts ---- 22
6717 Power supply ---- 23
6718 Compass and level ---- 24
6719 Tripods ---- 25
99. Parts Peculiar
9901 Parts peculiar with more than one application ---- 26

Part II.
Group 22. Body, Chassis or Hull, and Accessory Items
2202 Accessory items ---- 27
67. Precision Instruments and Systems, Mechanical Electrical
6701 Telescope assembly ---- 27
6702 Optics ---- 28
6703 Mechanical, structural, and precision parts ---- 29
6717 Power supply ---- 30
6718 Compass and level ---- 31
6719 Tripods ---- 33
95. General Use Standardized Parts
9501 Bulk material ---- 34

Part III.
Group 22. Body, Chassis or Hull, and Accessory Items
2202 Accessory items ---- 35
67. Precision Instruments and Systems, Mechanical
6701 Telescope assembly ---- 35
6702 Optics ---- 36
6703 Mechanical, structural, and precision parts ---- 37
6718 Compass and level ---- 38

Page

95. General Use Standardized Parts
9501 Bulk material ---- 41

SECTION 6. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE

Part I.
Group 26. Tools and Test Equipment
2604 Special tools ---- 42

Part II.
Group 26. Tools and Test Equipment
2604 Special tools ---- 43

Part III.
Group 26. Tools and Test Equipment
2604 Special tools ---- 44

SECTION 7. FEDERAL STOCK NUMBER AND PART NUMBER INDEX ---- 76

SECTION I

INTRODUCTION

1. Scope

This manual contains a list of repair parts and special tools, required for the performance of organizational, direct support, general support, and depot maintenance of the theodolite.

2. General

This repair parts and special tools list is divided into seven principal sections.

a. Section II, Prescribed Load Allowance List (PLA), is a consolidated listing of repair parts quantitatively allocated for initial stockage at the organizational level. *This is a mandatory stockage allowance.*

b. Section III, Repair Parts List, is a list of repair parts authorized for the performance of maintenance at the organizational level.

c. Section IV, Special Tools, Test and Support Equipment List, is a list of special tools, test and support equipment authorized for the performance of maintenance at the organizational level.

d. Section V, Repair Parts List, is a list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

e. Section VI, Special Tools, Test and Support Equipment List, is a list of special tools, test and support equipment authorized for the performance of maintenance at direct support, general support, and depot level.

f. Section VII, Federal stock number and Manufacturer's Part number Index, is an index of Federal stock numbers and manufacturer's part numbers to page and manufacturer's codes.

g. Allowances are based on 1,000 hours operation per year.

h. Part I provides unit quantities and allowances for repair parts applicable to all models. Indented components and subassemblies, although common to more than one model, serial range, etc., are included in the part or parts in which the applicable assembly appears.

Part II provides unit quantities and allowances for repair parts applicable to serial numbers 69778 through 70279, 70780 through 70990, and 78550 through 78647.

Part III provides unit quantities and allowances for repair parts applicable to serial numbers 82262, 82263, 82360 through 82459, 82560 through 82659 and 82677 through 82759.

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists.

a. Source, Maintenance, and Recoverability Codes.

(1) Source Code indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories.
M	Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.
X1	Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or components.

X2	Applied to repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain them through cannibalization, if not obtainable through cannibalization, such repair parts will be requisitioned with supporting justification through normal supply channels.

Note. Source code is not shown on common hardware items known to be readily available in Army supply channels and through local procurement.

(2) Maintenance Code indicates the lowest category of maintenance authorized to maintain the listed item. The maintenance level codes are:

Code	Explanation
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

b. Federal stock number indicates the Federal stock number for the item.

c. Description column indicates the Federal item name and a brief description of the item. A five-digit manufacturer's or other service code is shown in parentheses followed by the manufacturer's part number. Repair parts quantities included in kits, sets, and assemblies that differ from the actual quantity used in the specific item, are listed in parentheses following the repair part name.

d. Unit of Issue indicates the unit used as a basis of issue, e.g., ea, pr, ft, yd, etc.

e. Quantity Incorporated in Unit Pack indicates the actual quantity contained in the unit pack.

f. Quantity Incorporated in Unit indicates the actual number of parts used in the application. A zero is shown when components of kits or sets are listed that are not applicable to the specific end item.

g. Fifteen-Day Organizational Maintenance Allowance.

(1) The allowance columns are divided into four subcolumns. Indicated in each subcolumn is the quantity of items authorized for the number of equipments supported. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for organizational level of maintenance represents one initial prescribed load for a 15-day period for the number of equipments supported. Units and organizations authorized additional prescribed loads will multiply the number of prescribed loads authorized by the quantity of repair parts reflected in the appropriate density column to obtain the total quantity of repair parts authorized.

(3) Subsequent changes to allowances will be limited as follows: No change in the range of items is authorized. If additional items are considered necessary, recommendation should be forwarded to Mobility Equipment Command for exception or revision to the allowance list. The range of items authorized will be made by this Command based upon engineering experience, demand data, or TAERS information.

h. Thirty-Day DS/GS Maintenance Allowance.

(1) The allowance columns are divided into three subcolumns. Indicated in each subcolumn is the quantity of items authorized for a number of equipments supported. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for DS/GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

i. One-Year Allowances Per 100 Equipments/Contingency Planning Purposes indicates the quantity of items required for distribution and contingency planning purposes.

j. Depot Maintenance Allowance Per 100 Equipments indicates the total quantity of items recommended for depot maintenance of 100 equipments. Items recommended for immediate use only are identified with an asterisk in the allowance column.

k. Illustration.

(1) Figure Number indicates the figure number of the illustration in which the item is shown.

(2) Item or Symbol Number indicates the callout number used to reference the item in the illustration.

4. Special Information

The following publications pertain to the theodolite and its components.

TM 5-6675-200-15 OPERATOR, ORGANIZATIONAL, FIELD AND DEPOT MAINTENANCE MANUAL

5. Instructions for Locating Repair Parts

a. When Federal Stock Number or manufacturer's part number is unknown.

(1) *First.* Using the index of contents, determine the functional group or subgroup, i.e., engine, engine assembly, transmission, transmission assembly, within which the repair part belongs. Locate the appropriate page in the manual and identify the part.

(2) *Second.* Locate the repair part and the illustration figure and item number as shown in the last two columns of the repair parts listing.

(3) *Third.* Identify the repair part on the illustration.

b. When Federal Stock Number or manufacturer's part number is known.

(1) *First.* Use the index to locate the Federal Stock Number or manufacturer's part number. This index is arranged in alpha-numeric sequence cross-referenced to page number and manufacturer's code.

(2) *Second.* Refer to the appropriate page in the parts listing. Locate the repair part and the illustration figure and item number as shown in the last two columns of the parts listing.

6. Abbreviations

ea ---------- each
ft ---------- foot (feet)
in. ---------- inch (es)
mtg ---------- mounting (s)
v ---------- volt (s)

7. Index of Federal Supply Codes

Code	Manufacturer
89905	Heerbrugg Instruments, Inc.

8. Reporting of Equipment Publication Improvements

DA Form 2028, will be used for reporting discrepancies and recommendations for improving this equipment publication. This form will be completed by the individual using the manual and forwarded direct to Commanding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MPD, 4300 Goodfellow BLVD., St. Louis, Mo. 63120.

SECTION II

PRESCRIBED LOAD ALLOWANCE

(1) Federal stock no.	(2) Description	(3) 15-day org maint alw			
		(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100
	PART I				
6135-120-1020	BATTERY, DRY: 1.5V (minimum stockage of 4 is authorized) (80063) BA 30	2	5	10	21
6675-859-5936	LAMP				
	PART II	*	2	2	2
6675-786-5210	BEARING ASSEMBLY (89905) XT16-164	*	*	*	2

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0001					SECTION 3 - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE PART I											
0002					GROUP 18 - BODY, CAB, HOOD AND HULL											
0003					1808 - STRAPS, CARRYING CASES											
0004	X2	O		6675-069-6059	CASE: SHIPPING	89905	NT1-517	EA		1	*	*	*	*	1	1
0005	P	O		6675-353-4123	HAVERSACK	89905	XT2-29	EA		1	*	*	*	*	1	2
0006	X2	O			HOOD ASSEMBLY	89905	XT16-108	EA		1	*	*	*	*	2	
0007	X2	O			BASE ASSEMBLY: GROUND	89905	XT16-107	EA		1	*	*	*	*		
0008	X1				BASE: GROUND	89905	T16-351A	EA		1					2	7
0009	X2	O			COLLAR: GROUND BASE	89905	NT1-784	EA		1	*	*	*	*	2	12
0010	X2	O		6675-830-8689	CONTAINER, GROUND PLATE	89905	NT1-893	EA		1	*	*	*	*	2	4
0011	X2	O			HOOK: HOOD LOCKING	89905	RDS1-293	EA		2	*	*	*	*	2	2
0012	X2	O			LEVER: LOCK	89905	RDS1-292	EA		2	*	*	*	*	2	9
0013	X2	O			PLATE: SILICON CONTAINER	89905	T16-738	EA		1	*	*	*	*	2	6
0014	X2	O			SCREW, GROUND PLATE	89905	D1N87-2X5	EA		6	*	*	*	*	2	13
0015	X2	O		5305-429-2731	SCREW, MACHINE: GROUND BASE PLATE	89905	D1N84-2-6X6	EA		4	*	*	*	*	2	5
0016	X2	O			SCREW, MACHINE: HOOK TO LOCK LEVER	89905	RDS1-295	EA		4	*	*	*	*	2	3
0017	X2	O			SCREW, MACHINE: LEVER STOP	89905	CA19-5X6	EA		2	*	*	*	*	2	8
0018	X2	O			SCREW, MACHINE: LEVER TO BASE	89905	RDS1-294	EA		4	*	*	*	*	2	10
0019	X2	O			WASHER: RUBBER	89905	T1-357A	EA		1	*	*	*	*	2	11
0020	X2	O			BELT: CARRYING	89905	T1-358B	EA		1	*	*	*	*	2	1
0021	X1				HOOD: THEODOLITE	89905	T16-361	EA		1					2	18
0022	X2	O			LEVER: BELT TO HOOD	89905	TO-462	EA		2	*	*	*	*	2	15
0023	X2	O			PIN: LEVER TO HOOD AND SPRING	89905	TO-464A	EA		4	*	*	*	*	2	19
0024	X2	O			RIVET: BELT TO LEVER	89905	D1N674-3X7	EA		6	*	*	*	*	2	16
0025	X2	O		6675-378-9510	SPRING, HOOD: LEVER TO BASE	89905	12415-3	EA		2	*	*	*	*	2	14
0026	X2	O			WASHER: BELT RIVET	89905	6X3-2X0-5	EA		6	*	*	*	*	2	17
0027					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS											
0028					2202 - ACCESSORY ITEMS											
0029	P	O		7920-205-0565	BRUSH, DUSTING, WATCH MAKERS	89905	3A59	EA		1	*	*	*	*	3	13
0030	P	O		6675-560-5472	CASE: TOOL	89905	T16-761	EA		1	*	*	*	*	3	1
0031	P	O		6675-378-9401	COVER, INSTRUMENT: CASE	89905	NT2-549	EA		1	*	*	*	*	3	2
0032	X2	O		6675-446-1983	SCREW: TOOL CASE MTG	89905	VSM12801-3X20	EA		2	*	*	*	*	26	4

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0062					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL											
0062A					6702 - OPTICS											
0069	P	O		6650-624-3686	LENS, TELESCOPE	89905	XT2-92	EA		1	*	*	*	*	3	10
0101	P	O		6675-404-4400	MIRROR ASSEMBLY: ILLUMINATING	89905	XT16-112	EA		1	*	*	*	*		
0152	P	O		6675-560-5587	PRISM ASSEMBLY, EYEPIECE	89905	XT16-117	EA		1	*	*	*	*	3	7
0387					6704 - BATTERIES											
0388	P	O		6135-120-1020	BATTERY, DRY: 1.5v (MINIMUM STOCKAGE OF 4 IS AUTHORIZED)	80063	BA30	EA		4	2	5	10	21	24	30
0389					6705 - LAMPS											
0390	P	O		6675-859-5936	LAMP: BATTERY BOX SPARES	89905	HEG3-64	EA		3	SEE GRP 9901				24	16
0391	P	O		6675-859-5936	LAMP: ILLUMINATING LIGHT	89905	HEG3-64	EA		1	SEE GRP 9901				17	21
0392	P	O		6675-378-9501	LIGHT, HAND	89905	XT2-73	EA		1	*	*	*	*		
0402	P	O		6675-589-5936	LAMP: HAND LAMP ASSEMBLY	89905	HEG3-64	EA		1	SEE GRP 9901				23	23
0418					6712 - MOUNTED CONNECTING DEVICES CONTACTS											
0421	P	O		6675-560-5649	ILLUMINATING ASSEMBLY, ELECTRIC	89905	XT16-113	EA		1	*	*	*	*		
0432	P	O		6675-859-5936	LAMP: ILLUMINATING LIGHT	89905	HEG3-64	EA		1	SEE GRP 6705					
0433	P	O			LAMPHOLDER	89905	T16-506	EA		1	*	*	*	*	17	7
0450					6717 - POWER SUPPLY											
0453	P	O		6675-378-9502	BATTERY BOX	89905	EB319B	EA		1	*	*	*	*		
0459	X2	O			DUMMY ASSEMBLY: BATTERY	89905	EB329	EA		2	*	*	*	*	24	7
0464	P	O		6675-859-5936	LAMP: SPARES	89905	HEG3-64	EA		3	SEE GRP 6705					
0485	X2	O		5935-378-9285	CONNECTOR, PLUG, ELECTRICAL	89905	EB125	EA		1	*	*	*	*	23	2
0486	P	O		6150-378-9500	LEAD, ELECTRICAL	89905	XT2-72	EA		1	*	*	*	*	23	18
0523					6719 - TRIPODS											
0524	X2	O		6675-378-9525	COVER, TRIPOD	89905	3A63	EA		1	*	*	*	*	25	14
0525	X2	O		6675-641-3572	TRIPOD, SURVEYING	89905	21B	EA		1	*	*	*	*		
0526	X2	O			BRACKET: BATTERY BOX	89905	21B19	EA		1	*	*	*	*	26	7
0527	X2	O			BRACKET, COVER	89905	21B525	EA		1	*	*	*	*	26	6
0528	X2	O		6675-416-8882	CLAMP ASSEMBLY: LEG	89905	21B32-16813	EA		3	*	*	*	*		
0529	X1				CLAMP: LEG	89905	21B32AS	EA		3					26	27
0530	X1				CLAMP: PLATE	89905	1B15A	EA		3						
0531	X2	O		6675-647-0914	CLAMP: TRIPOD LEG	89905	3A11	EA		3	*	*	*	*	26	10

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0532	X2	0			NUT, HEXAGON	89905	1A6A	EA		3	*	*	*	*	26	19
0533	X2	0		6675-860-0169	PIN, TRIPOD HEAD	89905	VSM12771-2-5X6	EA		3	*	*	*	*	26	11
0534	X2	0			SCREW	89905	DIN87-4X15	EA		6	*	*	*	*		
0535	X2	0		6675-996-3694	SCREW: FIXING	89905	1A37	EA		1	*	*	*	*	26	17
0536	X2	0			SCREW: TRIPOD HEAD	89905	2A36B	EA		3	*	*	*	*	26	12
0537	X1				SCREW: WING	89905	16B13	EA		3					26	29
0538		0		5305-378-9253	SCREW, LEVELING	89905	CB1-3LX4-7	EA		3	*	*	*	*	26	18
0539		0		5305-831-0147	SCREW, MACHINE: TRIPOD HEAD	89905	CAA1-6X10	EA		1	*	*	*	*	26	16
0540	X2	0		6675-804-7342	SCREW, TRIPOD HEAD: HEAD AND GUIDE MOUNTING	89905	VSM12802-2-6X18	EA		18	*	*	*	*	26	24
0541	X2	0			HEAD ASSEMBLY, TRIPOD	89905	XT2-75A	EA		1	*	*	*	*		
0542	X2	0		5306-353-4141	BOLT, MACHINE: LEG HOUSING	89905	BA1-8X17	EA		6	*	*	*	*	26	9
0543	X2	0			BRACKET	89905	3A52B	EA		1	*	*	*	*	26	15
0544	X1				HEAD ASSEMBLY: TRIPOD	89905	3A50851A	EA		1					26	13
0545	X2	0			LEG ASSEMBLY: TRIPOD	89905	XT21-335	EA		3	*	*	*	*		
0546	X2	0			LEATHER STRAP	89905	21B16	EA		1	*	*	*	*	26	3
0547	X1				LEG ASSEMLY: LOWER	89905	XT21-337	EA		3						
0548	X1				LEG: WOOD	89905	21B11	EA		3					26	23
0549	X1				LEG ASSEMBLY: UPPER	89905	21B12-13	EA		3						
0550	X1				LEG: WOOD	89905	21B12	EA		3						
0551	X1				LEG: WOOD	89905	21B13	EA		3						
0552	X1			5310-647-0924	NUT: SHOE TO TRIPOD LEG	89905	1A10	EA		3					26	32
0553	X1				PLATE: LEG STOP	89905	21B14	EA		3					26	22
0554	X1				PLATE: LEG STOP	89905	21B15	EA		3					26	21
0555	X2	0		6675-446-1983	SCREW: BATTERY BOX BRACKET AND COVER BRACKET	89905	VSM12801-3X20	EA		4	*	*	*	*	26	4
0556	X2	0			SCREW, HEXAGON: TRIPOD LEG	89905	BA5-8X30	EA		3	*	*	*	*	26	30
0557	X2	0			SCREW, MACHIN : HEAD TO LEG	89905	DIN88-3X28	EA		6	*	*	*	*	26	20
0558	X2	0		6675-804-7341	SCREW, TRIPOD LEG	89905	VSM12800-3-5X18	EA		2	*	*	*	*		
0559		0		5305-418-9676	SCREW, WOOD: BELT TO LEG	89905	VSM12802-2-6X12	EA		6	*	*	*	*	26	1
0560	X1				SHOE: TRIPOD LEG	89905	21B18S	EA		3					26	31
0561	X2	0			WASHER FLAT: BRASS, STRAP TO TRIPOD LEG	89905	8X4-2X0-5	EA		2	*	*	*	*	25	2
0562					GRO P 99 - PARTS PECULIAR											
0563					9901 - PARTS PECULIAR WITH MORE THAN ONE APPLICATION											
0564	P	0		6675-859-5936	LAMP			EA		5	*	2	2	2		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0568					SECTION 3 - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE PART II											
0569					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS											
0570					2202 - ACCESSORY ITEMS											
0571	X2	O		8105-974-7393	BAG: PLASTIC	89905	HD6-63	EA		1	*	*	*	*	3	6
0572	X2	O		6675-966-5793	CASE ASSEMBLY: TRIPOD	89905	3B35A36	EA		1	*	*	*	*	26	5
0573	P	O		5210-353-4130	PLUMB BOB: WITH ADJUSTER	89905	XT2-35	EA		1	*	*	*	*	20	5
0574	M	O			CORD: LINEN (2590 BLOCK)	89905	3A40	EA		1						
					MANUFACTURE FROM:											
0574A	P	O		4020-270-1659	CORD: LINEN (5 FT 2 IN. REQUIRED)			FT			SEE GRP 9501					
0575	X1			5210-974-7394	PLUMB BOB	89905	3A32A	EA		1					20	6
0576	X1				RING: PLUMB BOB	89905	T2-501	EA		1					20	3
0577	X1				SLIDE: PLUMB BOB	89905	3A39A	EA		1					20	4
0578	X1				TUBE, BAYONET: PLUMB BOB	89905	3A54A	EA		1					20	1
0579	P	O		5120-378-9520	WRENCH TRIPOD	89905	3A29	EA		1	SEE GRP 2604 SECTION III					
0580	M	O			CHAMOIS: DIRT AND DUST	89905	HD2-6	EA		1					3	3
					MANUFACTURE FROM:											
0580A	P	O		8330-634-0084	CHAMOIS, LEATHER SHEEP SKIN (16 IN. X 16 IN. REQUIRED)			FT			SEE GRP 9501					
0581	P	O		6675-974-7362	CONTAINER, LUBRICANT	89905	HD7-17	EA		1	*	*	*	*	3	11
0582	X2	O		6675-974-7363	HOLDER, CASE ASSEMBLY	89905	HT2-551	EA		1	*	*	*	*	3	5
0583					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL ELECTRICAL											
0584					6701 - TELESCOPE ASSEMBLY											
0592	P	O		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	SEE GRP 6702					
0595					6702 - OPTICS											
0633	P	O		6675-974-7366	PRISM ASSEMBLY, OPTICAL INSTRUMENT: OBJECTIVE TELESCOPE	89905	XT16-115	EA		1	*	*	*	*	21	8
0650	P	O		6675-974-7367	SUNGLASS ASSEMBLY: TELESCOPE	89905	XT16-116	EA		1	*	*	*	*	21	9
0651	P	O		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	*	*	*	*	21	10

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0703					6717 - POWER SUPPLY											
0704	X1				BATTERY BOX (REPLACED BY BATTERY BOX, STOCK NO. 6675-378-9502, SEE PART 1)	89905	XT2-74	EA		1					24	
0709	X2	0			DUMMY ASSEMBLY: BATTERY	89905	EB323	EA		2	*	*	*	*	24	7
C734					6718 - COMPASS AND LEVEL											
0735	P	0		6675-887-5561	COMPASS ASSEMBLY, DIRECTIONAL	89905	XT16-118	EA		1	*	*	*	*	3	4
0781		0		5305-786-5222	SCREW, INSTRUMENT: COMPASS NEEDLE	89905	T16-595P	EA		1	*	*	*	*	25	7
0814					6719 - TRIPODS											
0815	X1				TRIPOD, SURVEYING (REPLACED BY TRIPOD, STOCK NO. 6675-641-3572)	89905	111B	EA		1					24	
0816	X2	0			BRACKET: BATTERY BOX	89905	3B40A	EA		1	*	*	*	*	26	7
0817	X2	0			BRACKET: COVER	89905	3B75	EA		1	*	*	*	*	26	6
0818	X2	0		6675-956-6950	CLAMP ASSEMBLY: LEG	89905	3B14B16A17A	EA		3	*	*	*	*		
0819	X1				CLAMP: LEG	89905	3B14B	EA		3					26	27
0820	X1				GUIDE: LEG CLAMP	89905	3B45	EA		6					26	25
0821	X1				LOCK: LEG CLAMP	89905	HM1-23	EA		3					26	26
0822	X1			6675-897-9074	SCREW, WING, TRIPOD LEG: CLAMP	89905	3B17A	EA		3					26	29
0823		0		5305-647-0935	SCREW, WOOD: TRIPOD HEAD	89905	VSM12801-4X18	EA		12	*	*	*	*	26	24
0824	X2	0			SHOE: TRIPOD LEG	89905	3B16A	EA		3	*	*	*	*	26	28
0825	X2	0		6675-378-9503	HEAD ASSEMBLY	89905	XT2-75	EA		1	*	*	*	*		
0826		0		5306-353-4141	BOLT, MACHINE: LEG HOUSING	89905	BA1-8X17	EA		6	*	*	*	*	26	9
0827	X2	0			BRACKET: LEG HOUSING	89905	3A57	EA		1	*	*	*	*	26	15
0828	X2	0		6675-677-0914	CLAMP: TRIPOD LEG	89905	3A11	EA		3	*	*	*	*	26	10
0829	X1				HEAD ASSEMBLY: TRIPOD	89905	3A50851A	EA		1					26	13
0830		0		5310-560-1986	NUT, PLAIN, HEXAGON: TRIPOD LEG	89905	1A6	EA		3	*	*	*	*	26	19
0831	X2	0		6675-860-0169	PIN: TRIPOD HEAD	89905	VSM12771-2-5X6	EA		3	*	*	*	*	26	11
0832	X2	0			SCREW: TRIPOD HEAD	89905	1A33C	EA		1	*	*	*	*	26	17
0833	X2	0			SCREW, LEVELING	89905	CB1-3LX4-7	EA		3	*	*	*	*	26	18
0834		0		5305-831-0147	SCREW, MACHINE: TRIPOD HEAD	89905	CAA1-6X10	EA		1	*	*	*	*	26	16
0835		0		5305-378-9518	SCREW, TRIPOD HEAD: LEVELING	89905	2A36A	EA		3	*	*	*	*	26	12
0836	X2	0			SCREW, WOOD: TRIPOD HEAD	89905	VSM12802-6X18	EA		6	*	*	*	*	26	8
0837	X2	0			LEG ASSEMBLY: TRIPOD	89905	XT21-100	EA		3	*	*	*	*		
0838	X2	0			BELT: LEG FASTENING	89905	3B23	EA		1	*	*	*	*	26	3
0839	X1			6675-647-0927	LEG, WOOD: LOWER	89905	3B13A	EA		6					26	34
0840	X1			6675-647-0926	LEG, WOOD: UPPER	89905	3B12B	EA		6					22	23
0841	X1			5310-647-0924	NUT: SHOE TO TRIPOD LEG	89905	1A10	EA		3					26	32

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0842	X1				PLATE: LEG STOP	89905	3B30	EA		3					26	21
0843	X1				PLATE: LEG STOP	89905	3B31	EA		3					26	22
0844	X2	0			SCREW: TRIPOD LEG	89905	BA3-8X34-5	EA		6	•	•	•	•	26	30
0845	X2	0			SCREW, MACHINE: HEAD TO LEG	89905	DIN88-4X26	EA		6	•	•	•	•	26	20
0846	X2	0		6675-804-7341	SCREW, TRIPOD LEG: BELT	89905	VSM12800-3-5X18	EA		2	•	•	•	•	26	1
0847	X1				SHOE: TRIPOD LEG	89905	3B42	EA		3					26	31
0848	X2	0			WASHER, FLAT: STRAP TO TRIPOD LEG	89905	BX4-2X0-5	EA		2	•	•	•	•	26	2
0849	X1			6675-647-0925	WEDGE, WOOD: LEG	89905	3B21	EA		3					26	33
0850	X2	0		6675-446-1983	SCREW: BATTERY BOX BRACKET AND COVER BRACKET	89905	VSM12801-3X20	EA		6	•	•	•	•	26	4
0851					GROUP 95 - GENERAL USE STANDARDIZED PARTS											
0852					9501 - BULK MATERIAL											
0853	P	0		8330-965-1722	CHAMOIS LEATHER, SHEEPSKIN			EA		1	•	•	•	•		
0854	P	0		4020-270-1659	CORD, LINEN			FT			•	•	•	•		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0855					SECTION 3 - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE PART III											
0856					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS											
0857					2202 - ACCESSORY ITEMS											
0858	X2	O			BAG: PLASTIC	89905	HD81-66	EA		2	*	*	*	*	3	6
0858A	P	O		8330-965-1722	CHAMOIS, LEATHER SHEEPSKIN			EA			SEE GRP 9501					
0860	P	O		6675-446-1762	CONTAINER, GREASE: LUBRICATING	89905	HDF3-4	EA		1	*	*	*	*	3	11
0861	P	O		6675-560-5463	NEEDLE CENTER	89905	T16-812	EA		1	*	*	*	*		
0862	X2	O			KIT ASSEMBLY: TOOL	89905	2A20A23A	EA		1	*	*	*	*	26	5
0863	X1				BRACKET: TOOL KIT	89905	2A23A	EA		1						
0864	X1				KIT: TOOL	89905	2A20A	EA		1						
0865	P	O		5210-353-4130	PLUMB BOB ASSEMBLY	89905	XT2-35A	EA		1	*	*	*	*		
0866	M	O			CORD: LINEN (2590 BLOCK)	89905	3A40	EA		1					20	5
0866A	P	O		4020-270-1659	MANUFACTURE FROM: CORD: LINEN (5 FT 2 IN. REQUIRED)			FT			SEE GRP 9501					
0867	X1				PLUMB BOB ASSEMBLY	89905	12B27A2B	EA		1					20	6
0868	X1				PLUMB BOB	89905	12B27A	EA		1						
0869	X1				PLUMB BOB POINT	89905	12B28	EA		1						
0870	X1				RING	89905	3A56	EA		1					20	3
0871	X1				SLIDE: PLUMB BOB	89905	3A39A	EA		1					20	4
0872	X1				TUBE, BAYONET: PLUMB BOB	89905	3A54B	EA		1					20	1
0873	X1				RIVET	89905	DIN674-3X8	EA		4						
0874		O		5305-418-9676	SCREW, WOOD	89905	VSM12802-2-6X12	EA		4	*	*	*	*		
0875	X1				WASHER	89905	12-3-2X1	EA		4						
0876	P	O		5120-378-9520	WRENCH, TRIPOD	89905	3A29	EA		1	SEE GRP 2804 PART I					
0877					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL											
0878					6701 - TELESCOPE ASSEMBLY											
0886	P	O		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	SEE GRP 6702					
0889					6702 - OPTICS											
0917	P	O		6675-560-5586	PRISM ASSEMBLY, OPTICAL INSTRUMENT: OBJECTIVE TELESCOPE	89905	XT16-115A	EA		1	*	*	*	*		8
0943	P	O		6675-446-1768	SUNGLASS ASSEMBLY	89905	XT16-116A	EA		1	*	*	*	*		9

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0950	P	O		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	•	•	•	•	21	10
0997					6718 - COMPASS AND LEVEL											
0998	P	O		6675-887-5561	COMPASS ASSEMBLY, DIRECTIONAL	89905	XT16-118A-1L	EA		1	•	•	•	•	[illegible]	4
1051		O		5305-766-5222	SCREW, INSTRUMENT: COMPASS NEEDLE	89905	T16-595P	EA		1	•	•	•	•	[illegible]	7
1082					GROUP 95 - GENERAL USE STANDARDIZED PARTS											
1083					9501 - BULK MATERIAL											
1084	P	O		8330-965-1722	CHAMOIS LEATHER, SHEEP SKIN			EA		1	•	•	•	•		
1085	F	O		4020-270-1659	CORD, LINEN			FT			•	•	•	•		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1086					SECTION 4 - SPECIAL TOOLS TEST AND SUPPORT FOR ORGANIZATIONAL MAINTENANCE PART I											
1088					GROUP 26 - TOOLS AND TEST EQUIPMENT											
1089					2604 - SPECIAL TOOLS											
1090	P	O		6675-353-4103	PIN, CASE: CAPSTAN ADJUSTING SCREW	89905	3A55	EA		2	*	*	*	2	3	12
1091	P	O		5120-378-9520	WRENCH, TRIPOD	89905	3A29	EA		1	*	*	*	*	20	2

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1092					SECTION 4 - SPECIAL TOOLS TEST AND SUPPORT FOR ORGANIZATIONAL MAINTENANCE PART II											
1093					GROUP 26 - TOOLS AND TEST EQUIPMENT											
1094					2604 - SPECIAL TOOLS											
1095	P	O		5120-180-0705	SCREWDRIVER, FLAT TIP			EA		1	*	*	*	*	3	15
1096	P	O		5120-378-9303	SCREWDRIVER, FLAT TIP	89905	HHR-3	EA		1	*	*	*	*	3	14

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 15 DAY ORG. MAINT. ALW. (a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(8) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1097					SECTION 4 - SPECIAL TOOLS TEST AND SUPPORT FOR ORGANIZATIONAL MAINTENANCE PART III											
1098					GROUP 26 - TOOLS AND TEST EQUIPMENT											
1099					2604 - SPECIAL TOOLS											
1100	P	O		5120-429-2948	SCREWDRIVER	89905	HDW1-5	EA		1	*	*	*	*	3	15
1101	P	O		5120-446-2860	SCREWDRIVER	89905	HDW1-10	EA		1	*	*	*	*	3	14

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0001					SECTION 5 - REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE PART I												
0002					GROUP 18 - BODY, CAB, HOOD AND HULL												
0003					1808 - STRAPS, CARRYING CASES												
0004	X2	0		6675-069-6059	CASE: SHIPPING	89905	NT1-517	EA		1	*	*	*	*	*	1	1
0005	P	0		6675-353-4123	HAVERSACK	89905	XT2-29	EA		1	*	*	2	10	50	1	2
0006	X2	0			HOOD ASSEMBLY	89905	XT16-108	EA		1	*	*	*	*	*	2	
0007	X2	0			BASE ASSEMBLY: GROUND	89905	XT16-107	EA		1	*	*	*	*	*	2	
0008	X1				BASE: GROUND	89905	T16-351A	EA		1						2	7
0009	X2	0			COLLAR: GROUND BASE	89905	NT1-784	EA		1	*	*	*	*	*	2	12
0010	X2	0		6675-830-8689	CONTAINER, GROUND PLATE	89905	NT1-893	EA		1	*	*	*	*	*	2	4
0011	X2	0			HOOK: HOOD LOCKING	89905	RDS1-293	EA		2	*	*	*	*	*	2	2
0012	X2	0			LEVER: LOCK	89905	RDS1-292	EA		2	*	*	*	*	*	2	9
0013	X2	0			PLATE: SILICON CONTAINER	89905	T16-738	EA		1	*	*	*	*	*	2	6
0014	X2	0			SCREW, GROUND PLATE	89905	D1N87-2X5	EA		6	*	*	*	*	*	2	13
0015	X2	0		5305-429-2731	SCREW, MACHINE: GROUND BASE PLATE	89905	D1N84-2-6X6	EA		4	*	*	*	*	*	2	5
0016	X2	0			SCREW, MACHINE: HOOK TO LOCK LEVER	89905	RDS1-295	EA		4	*	*	*	*	*	2	3
0017	X2	0			SCREW, MACHINE: LEVER STOP	89905	CA19-5X6	EA		2	*	*	*	*	*	2	8
0018	X2	0			SCREW, MACHINE: LEVER TO BASE	89905	RDS1-294	EA		4	*	*	*	*	*	2	10
0019	X2	0			WASHER: RUBBER	89905	T1-357A	EA		1	*	*	*	*	*	2	11
0020	X2	0			BELT: CARRYING	89905	T1-350B	EA		1	*	*	*	*	*	2	1
0021	X1				HOOD: THEODOLITE	89905	T16-361	EA		1						2	18
0022	X2	0			LEVE : BELT TO HOOD	89905	T0-462	EA		2	*	*	*	*	*	2	15
0023	X2	0			PIN: LEVER TO HOOD AND SPRING	89905	T0-464A	EA		4	*	*	*	*	*	2	19
0024	X2	0			RIVET: BELT TO LEVER	89905	D1N674-3X7	EA		6	*	*	*	*	*	2	16
0025	X2	0		6675-378-9510	SPRING, HOOD: LEVER TO BASE	89905	12415-3	EA		2	*	*	*	*	*	2	14
0026	X2	0			WASHER: BELT RIVET	89905	6X3-2X0-5	EA		6	*	*	*	*	*	2	17
0027					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
0028					2202 - ACCESSORY ITEMS												
0029	P	0		7920-205-0565	BRUSH, DUSTING, WATCH MAKERS	89905	3A59	EA		1	*	*	2	10	50	2	13
0030	P	0		6675-560-5472	CASE: TOOL	89905	T16-761	EA		1	*	*	2	10	50	2	1
0031	P	0		6675-378-9401	COVER, INSTRUMENT: CASE	89905	NT2-549	EA		1	*	*	2	10	50	2	2
0032	X2	0		6675-446-1983	SCREW: TOOL CASE MTG	89905	VSM12801-3X20	EA		2	*	*	*	*	*	2	4

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY-PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0033					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL												
0034					6701 - TELESCOPE ASSEMBLY												
0035	X2	D			AXIS: TELESCOPE	89905	XT16-127	EA		1				*	*		
0036	X1				AXIS: TELESCOPE	89905	T16-141	EA		1				*	*		15
0037	X2	D			BEARING: MIRROR SHAFT	89905	T1-250	EA		1				*	*		8
0038	X2	D			BEARING: TELESCOPE AXIS	89905	T16-142	EA		1				*	*		2
0039	X2	D			BEARING: TELESCOPE AXIS	89905	T16-143	EA		1				*	*		7
0040	X2	D			COVER: TELESCOPE AXIS	89905	T16-144	EA		1				*	*		16
0041	X2	D			COVER: VERTICAL AXIS	89905	T16-151	EA		1				*	*		15
0042	X2	D			FRAME: TELESCOPE PRISM	89905	T16-148	EA		1				*	*		14
0043	X2	D			KNOB: MIRROR ADJUSTING	89905	NT1-727	EA		1				*	*		11
0044	X2	D		6675-404-4509	MIRROR: TELESCOPE	89905	T16-149A150A	EA		1				*	*		
0045	X2	D			MOUNT: PRISM, TELESCOPE AXIS	89905	T16-146	EA		1				*	*		
0046	X2	D		6675-416-7733	PIN: PRISM HOLDER	89905	VSM12771-2-5X11	EA		1				*	*		19
0047	X2	D			PRISM: TELESCOPE AXIS	89905	T16-147	EA		1	SEE GRP 6702						
0048	X2	D			SCREW: COVER MTG	89905	DIN85-2X4	EA		3				*	*		14
0049	X2	D		6675-560-6082	SCREW: FRAME, PRISM	89905	DIN920-1-7X2-5	EA		2				*	*		18
0050	X2	D			SCREW: KNOB STOP	89905	CA1-2X1-2	EA		1				*	*		9
0051		D		5305-378-9235	SCREW, AXLE TELESCOPE AND CLAMP	89905	CA18-2-6X5	EA		2				*	*		13
0052		D		5305-378-9537	SCREW, AXLE TELESCOPE AND VERTICAL COLLIMATION LEVEL: ADJUSTING KNOB LOCK	89905	DIN553-2X1-5	EA		2				*	*		10
0053	X2	D		6675-862-2584	SCREW, HOUSING: TELESCOPE AXIS	89905	DIN551-2X4	EA		2				*	*		11
0054		D		5305-378-9261	SCREW, ILLUMINATION HORIZONTAL CIRCLE	89905	CB2-3X6	EA		2				*	*		17
0055	X2	D			SCREW, MACHINE: BEARING MTG	89905	DIN84-3X5	EA		3				*	*		1
0056	X2	D			SCREW, MACHINE: BEARING MTG	89905	DIN84-3X6	EA		3				*	*		8
0057		D		5305-429-2534	SETSCREW: BEARING ADJUSTING	89905	DIN551-2-6X8	EA		2				*	*		6
0058	X2	D			SETSCREW: MIRROR TO SHAFT	89905	DIN551-2X2	EA		1				*	*		6
0059	X2	D			SETSCREW: TELESCOPE AXIS SLEEVE LOCKING	89905	DIN553-2X8	EA		3				*	*		12
0060	X2	D			SLEEVE: TELESCOPE AXIS	89905	T16-145	EA		1				*	*		10
0061	X2	D			STOP: ADJUSTING KNOB	89905	NT1-72L	EA		1				*	*		12
0062					6702 - OPTICS												
0063	X2	D			CIRCLE, HORIZONTAL	89905	T16-84TC	EA		1				*	*	11	5
0064	X2	D			CIRCLE, VERTICAL	89905	T16-241TC	EA		1				*	*	12	2
0065	X2	D			HOUSING: PRISM, COLLIMATION	89905	T16-266A	EA		1				*	*		29
0066	X2	D			HOUSING: PRISM, COLLIMATION	89905	T16-268	EA		1				*	*		4
0067	X2	D			HOUSING: PRISM, HORIZONTAL	89905	T16-708	EA		1				*	*	10	5
0068	X2	D			HOUSING, PRISM, COLLIMATION	89905	T16-280A	EA		1				*	*		2
0069	P	O		6650-624-3686	LENS, TELESCOPE	89905	XT2-92	EA		1	*	*	2	10	50	3	10
0070	X2	D			LENS ASSEMBLY	89905	XT16-159	EA		1				*	*		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0071	X1				HOUSING: LENS	89905	T16-247	EA		1						6	10
0072	X1				LENS: READING	89905	T16-246	EA		1						6	11
0073	X2	D			LENS ASSEMBLY: OPTICAL, VERTICAL	89905	XT16-154	EA		1				*	*		
0074	X1			6675-404-4502	LENS: VERTICAL	89905	T16-105A106A	EA		1						6	6
0075	X1				MOUNT: LENS	89905	T16-115B	EA		1						6	7
0076	X2	D			LENS ASSEMBLY: OPTICAL VERTICAL	89905	XT16-155	EA		1				*	*		
0077	X1			6675-404-4507	LENS: VERTICAL	89905	T16-107A108A	EA		1						6	1
0078	X1				MOUNT: LENS	89905	T16-116B	EA		1						6	2
0079	X2	D			LENS ASSEMBLY: OPTICAL, VERTICAL	89905	XT16-156	EA		1				*	*		
0080	X1				LENS: VERTICAL	89905	T16-112	EA		1						6	5
0081	X1				MOUNT: LENS	89905	T16-113	EA		1						6	4
0082	X2	D			LENS ASSEMBLY: VERTICAL COLLIMATION LEVER	89905	XT16-162	EA		1				*	*		
0083	X1			6675-404-4534	LENS: COLLIMATION LEVER	89905	T16-286-287	EA		1						7	15
0084	X1				MOUNT: LENS	89905	T16-279	EA		1						7	14
0085	X2	D			LENS ASSEMBLY: VERTICAL LEVEL, COLLIMATION	89905	XT16-161	EA		1				*	*		
0086	X1			6675-404-4535	LENS: COLLIMATION LEVER	89905	T16-284-285	EA		1						7	13
0087	X1				MOUNT: LENS	89905	T16-276A	EA		1						7	12
0088	X2	D			MICROSCOPE ASSEMBLY: READING	89905	XT16-131	EA		1				**	**		
0089	X2	D			EYEPIECE ASSEMBLY: MICROSCOPE	89905	XT16-104	EA		1						8	5
0090	X1				HOUSING: MICROSCOPE	89905	RDH1-299	EA		1						8	3
0091	X1			6675-416-2678	LENS: MICROSCOPE	89905	RDH1-297-298	EA		1				*	*	8	2
0092		D		5305-429-2617	SETSCREW: EYEPIECE TO HOUSING	89905	DIN553-2X2-52	EA		1						8	4
0093	X1				TUBE: EYEPIECE LENS	89905	T16-206	EA		1						8	4
0094	X2	D			WASHER: EYEPIECE LENS	89905	T16-204	EA		1				**	**		
0095	X2	D			LENS ASSEMBLY: MICROSCOPE	89905	XT16-158	EA		1						8	9
0096	X1			6675-404-4526	LENS: MICROSCOPE	89905	T16-202-203	EA		1						8	8
0097	X1				MOUNT: MICROSCOPE LENS	89905	T16-205	EA		1						8	7
0098		D		5305-429-2517	SETSCREW: MICROSCOPE LENS TUBE	89905	DIN553-1-7X1-5	EA		1				*	*	8	6
0099	X2	D			TUBE: MICROSCOPE LENS	89905	T16-201	EA		1						8	7
0100	X2	D		6675-404-4509	MIRROR: TELESCOPE	89905	T16-149A150A	EA		1				*	*		
0101	P	O		6675-404-4400	MIRROR ASSEMBLY: ILLUMINATING	89905	XT16-112	EA		1	*	*	2	10	50	8	22
0102	X1				BUSHING: HOUSING LOCK	89905	RDS1-54	EA		1						8	23
0103	X1				CLIP, RETAINING: MIRROR	89905	RDS1-53B	EA		1						8	26
0104	X1				HOUSING: ILLUMINATION MIRROR	89905	RDS1-52A	EA		1						8	27
0105	X2	D		6675-377-4907	MIRROR, HORIZONTAL CIRCLE	89905	NT2-60	EA		1				*	*		
0106	X2	D		6675-378-9517	PIN, HORIZONTAL CIRCLE	89905	VSM12771-2X20	EA		1				*	*	8	24
0107		D		5305-560-6343	SCREW, MACHINE: PIN LOCKING	89905	DIN87-1-7X3-5	EA		1				*	*	8	25
0108	X2	D		5305-378-9534	SETSCREW: ILLUMINATION MIRROR SLEEVE	89905	553-1-7X3	EA		1				*	*	8	28
0109	X1				SLEEVE: MIRROR MTG	89905	RDS1-51A	EA		1						8	29
0110	X2	D			MOUNT: PRISM, COLLIMATION	89905	T16-273	EA		1				*	*	8	23
0111	X2	D			MOUNT: PRISM, TELESCOPE AXIS	89905	T16-146	EA		1				*	*	8	1
0112	X2	D			MOUNT: READING PRISM	89905	T16-244	EA		1				*	*	8	3
0113	X2	D		6675-416-7736	PIN: LENS MOUNT HOLDING	89905	VSM12771-2-5X8	EA		1						8	22

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTY/GCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0114	X2	D			PLATE: PRISM MTG	89905	T16-297	EA		1				•	•	19	2
0115	X2	D			PLUMB DEVICE: OPTICAL	89905	XT16-124	EA		1				•	•	9	
0116	X2	D			HOUSING: VERTICAL PRISM	89905	T16-704	EA		1				•	•	9	8
0117	X2	D		6675-404-9664	LENS: OPTICAL PLUMB	89905	T16-710-711	EA		1				•	•	9	22
0118	X2	D			NUT: OPTICAL PLUMB DEVICE	89905	T16-714	EA		1				•	•	9	20
0119	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-151	EA		1				•			
0120	X1				LENS: OPTICAL PLUMB	89905	T1-47-48	EA		1						9	15
0121	X1				MOUNT: LENS	89905	T1-49	EA		1						9	16
0122	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-152	EA		1				•	•		
0123	X1				HOUSING: LENS	89905	T16-708	EA		1						9	28
0124	X1			6675-404-9658	LENS: OPTICAL PLUMB	89905	T16-706-707	EA		1						9	27
0125	X2	D		6675-416-5933	PIN: LONG SLEEVE LOCATING	89905	VSM12771-0-8X4	EA		1				•	•	9	18
0126	X2	D			PIN, TENSION: OPTICAL PLUMB DEVICE	89905	T16-95	EA		2				•	•	9	4
0127	X2	D			PRISM: VERTICAL, OPTICAL	89905	T16-703	EA		1				•	•	9	7
0128	X2	D			RETICLE	89905	XT16-153	EA		1				•	•		
0129	X1				MOUNT: LENS RETICLE	89905	T1-55	EA		1						9	13
0130	X1				RETICLE	89905	T16-93TB	EA		1						9	12
0131	X2	D			SCREW: OPTICAL PLUMB ADJUSTING	89905	NT1-609	EA		2				•	•	9	26
0132	X2	D		6675-413-2271	SCREW, ADJUSTING: SCREW HOLD	89905	CB9-5X0-5X2-5	EA		2				•	•	9	25
0133		D		5305-378-9547	SCREW, ALIDADE: PLATE STOP	89905	DIN84-2X4	EA		2				•	•	9	2
0134		D		5305-378-9533	SCREW, EYEPIECE	89905	DIN553-1-7X2-5	EA						•	•	9	21
0135		D		5305-425-2506	SCREW, MACHINE: LENS TUBE LOCKING	89905	CB5-1-7X1-6	EA		1				•	•	9	11
0136		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE	89905	DIN553-2X3	EA		1				•	•	9	29
0137	X2	D			SLEEVE: LENS AND MOUNT	89905	T16-91	EA		1				•	•	9	14
0138	X2	D			SLEEVE: OPTICAL PLUMB LENS	89905	T16-709	EA		1				•	•	9	24
0139	X2	D			SLEEVE: VERTICAL PRISM HOUSING	89905	T16-702	EA		1				•	•	9	9
0140	X2	D			SETSCREW: LENS MOUNT	89905	DIN553-1-7X1-5	EA		5				•	•	9	10
0141	X2	D			SPRING: PLATE STOP	89905	NT1-605	EA		2				•	•	9	3
0142	X2	D			STOP PLATE	89905	T16-705M	EA		1				•	•	9	1
0143	X2	D			TUBE: LENS HOLDER	89905	T16-713	EA		1				•	•	9	19
0144	X2	D			TUBE: OPTICAL PLUMB	89905	T16-712	EA		1				•	•	9	23
0145	X2	D			PRISM: COLLIMATION HOUSING	89905	T16-269	EA		1				•	•	7	5
0146	X2	D			PRISM: COLLIMATION LEVER	89905	T16-274	EA		1				•	•	7	21
0147	X2	D			PRISM: COLLIMATION LEVER	89905	T16-281	EA		1				•	•	7	1
0148	X2	D			PRISM: COLLIMATION LEVER	89905	T16-294	EA		1				•	•	19	3
0149	X2	D			PRISM: COLLIMATION LEVER	89905	T16-295	EA		1				•	•	19	19
0150	X2	D			PRISM: HORIZONTAL HOUSING	89905	T16-71A	EA		1				•	•	10	2
0151	X2	D			PRISM: METAL, COLLIMATION LEVEL	89905	T16-296	EA		1				•	•	19	4
0152	X2	D			PRISM: METAL, HORIZONTAL	89905	T16-74	EA		1				•	•	10	11
0153	X2	D			PRISM: METAL, HORIZONTAL	89905	T16-75	EA		1				•	•	10	3
0154	X2	D			PRISM: READING	89905	T16-245	EA		1				•	•	6	9
0155	X2	D			PRISM: READING	89905	T16-248	EA		1				•	•	6	12
0156	X2	D			PRISM: TELESCOPE AXIS	89905	T16-147	EA		1				•	•	4	9
0157	X2	D			PRISM: VERTICAL COLLIMATION	89905	T16-267	EA		1				•	•	7	30

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0158	P	O		6675-560-5587	PRISM ASSEMBLY, EYEPIECE	89905	XT16-117	EA		1	*	*	2	10	50	3	7
0159	X1				HOUSING: PRISM	89905	NT1-821	EA		1							
0160	X1				HOUSING: PRISM	89905	NT2-388	EA		1							
0161	X1				PRISM: EYEPIECE	89905	NT2-387	EA		1							
0162	X2	D			SCREW, OPTICAL PLUMBING DEVICE	89905	DIN551-2X3	EA		1				*	*		
0163		D		5305-378-9281	SCREW, VERTICAL COLLIMATION LEVEL: PRISM	89905	EA7-2X3-3	EA		1				*	*		
0164	X2	D			SCREW: OPTICAL PLUMBING DEVICE, HORIZONTAL PRISM	89905	DIN551-2X3	EA		1				*	*	10	9
0165	X2	D		6675-413-2425	SCREW: PRISM HOUSING	89905	DIN404A2X3-5	EA		1				*	*	7	25
0166		D		5305-378-9259	SCREW, MACHINE: ALIDADE ILLUMINATION WINDOW	89905	CB2-2-6X3-8	EA		2				*	*	4	20
0167	X2	D			SCREW, MACHINE: HORIZONTAL PRISM MOUNT	89905	DIN84-2X6	EA		2				*	*	10	6
0168	X2	D			SCREW, MACHINE: LENS MOUNT	89905	CB23-2X2-2	EA		2				*	*	6	13
0169	X2	D			SCREW, OPTICAL PLUMBING DEVICE: PRISM HOUSING LOCK	89905	DIN551-2X3	EA		2				*	*	7	20
0170		D		5305-429-2585	SETSCREW: PRISM MOUNT	89905	DIN551-2X1-5	EA		1				*	*	10	10
0171		D		5305-429-2585	SETSCREW: PRISM MOUNT	89905	DIN551-2X1-5	EA		1				*	*	7	19
0172	X2	D			SPRING: HORIZONTAL PRISM	89905	T16-76	EA		1				*	*	10	4
0173	X2	D			VERNIER ASSEMBLY: COLLIMATION HOUSING	89905	XT16-160	EA		1				*	*		
0174	X1				MOUNT: VERNIER	89905	T16-263A	EA		1						7	8
0175	X1				VERNIER: COLLIMATION HOUSING	89905	T16-264TC	EA		1						7	9
0176	X2	D			WINDOW: ALIDADE ILLUMINATION	89905	T16-123A	EA		1				*	*	4	4
0177	X2	D			WINDOW: ILLUMINATION LIGHT BUSHING	89905	RDS1-40	EA		1				*	*	16	4
0178	X2	D			WINDOW: LIGHT REFLECTING	89905	T16-298	EA		1				*	*	19	12
0179					6703 - MECHANICAL, STRUCTURAL, AND PRECISION PARTS												
0180	X2	D			AXIS ASSEMBLY: VERTICAL 64OOM	89905	XT16-170	EA		1				*	*		
0181	X2	D		6675-411-2034	VERTICAL AXIS	89905	T16-81-82-83	EA		1				*	*		
0182	X2	D			AXIS: INTERMEDIATE, VERTICAL	89905	T16-83	EA		1				*	*	11	4
0183	X2	D			AXIS: LOWER, VERTICAL	89905	T16-82	EA		1				*	*	14	44
0184	X2	D			AXIS: UPPER, VERTICAL	89905	T16-81	EA		1				*	*	9	6
0185	X2	D			BALL BEARING: VERTICAL AXIS	89905	2944	EA		25				*	*	9	5
0186	X2	D			BEARING: CLUTCH, VERTICAL AXIS	89905	T16-86	EA		1				*	*	11	3
0187	X2	D			CIRCLE: HORIZONTAL	89905	T16-84TC	EA		1	SEE GRP 6702						
0188	X2	D			DISK, CLUTCH: VERTICAL AXIS	89905	T16-87	EA		1				*	*	11	2
0189	X2	D			NUT: VERTICAL AXIS	89905	T16-85	EA		1				*	*	9	17
0190		D		5305-378-9544	SCREW: AXIS BEARING AND MICROMETER	89905	DIN84-2-6X4	EA		4				*	*	11	8
0191		D		5305-560-6364	SCREW, MACHINE: AXIS	89905	DIN926-2X1-6X2	EA		1				*	*		
0192	X2	D			SCREW, MACHINE: AXIS	89905	CA17-5X8-5	EA		6				*	*		
0193		D		5305-378-9547	SCREW, MACHINE: CLUTCH DISK	89905	DIN84-2X4	EA		4				*	*	11	9
0194		D		5305-378-9281	SCREW, VERTICAL COLLIMATION LEVEL: CLUTCH SPRING	89905	EA7-2X3-3	EA		4				*	*	11	7

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0195	X2	D			SPRING DISK: VERTICAL AXIS	89905	MT1-549AE	EA		1				*	*	11	6
0196	X2	D			WASHER: CLUTCH, VERTICAL AXIS	89905	T16-88	EA		1				*	*	11	1
0197	X2	D			CIRCLE ASSEMBLY: VERTICAL	89905	XT16-134	EA		1				*	*	12	
0198	X2	D			CIRCLE: VERTICAL	89905	T16-241TC	EA		1	SEE GRP 6702						
0199	X2	D			DISK: VERTICAL CIRCLE	89905	T16-243	EA		1				*	*	12	3
0200		D		5305-378-9260	SCREW, HORIZONTAL BASE: DISK TO SLEEVE	89905	CB2-2X2-5	EA		3				*	*	12	4
0201	X2	D			SLEEVE: VERTICAL CIRCLE	89905	T16-242	EA		1				*	*	12	1
0202	X2	D			CLAMP ASSEMBLY: VERTICAL	89905	XT16-132	EA		1				*	*		
0203	X2	D			BUSHING, THREADED: CLAMP JAW	89905	T16-215	EA		1				*	*	15	9
0204	X2	D			CLAMP: VERTICAL	89905	T16-212	EA		1				*	*	15	16
0205	X2	D			HOUSING: CLAMP, VERTICAL	89905	T16-211	EA		1				*	*	15	19
0206	X2	D			JAW: VERTICAL CLAMP	89905	T16-214	EA		1				*	*	15	15
0207	X2	D			KNOB: VERTICAL CLAMP	89905	T16-221	EA		1				*	*	15	4
0208	X2	D			LEVER: VERTICAL	89905	T16-218	EA		1				*	*	15	13
0209	X2	D			PIN: VERTICAL CLAMP JAW	89905	T12-213	EA		1				*	*	15	14
0110	X2	D		6675-804-7340	PIN, BATTERY BOX: VERTICAL KNOB	89905	VSM12770-1-5X18	EA		1				*	*	15	6
0211	X2	D			RING, STOP: VERTICAL CLAMP KNOB	89905	T16-220	EA		1				*	*	15	2
0212	X2	D			SCREW: VERTICAL LOCK	89905	T16-219	EA		1				*	*	15	3
0213	X2	D			SCREW, MACHINE: KNOB STOP	89905	DIN91-2X7	EA		1				*	*	15	5
0214		D		5305-429-2731	SCREW, MACHINE: VERTICAL CLAMP HOUSING	89905	DIN84-2-6X6	EA		3				*	*	15	17
0215		D		5305-560-6345	SCREW, MACHINE: VERTICAL LEVER	89905	DIN91-2-6X6	EA		3				*	*	15	12
0216		D		5305-429-2617	SETSCREW: STOP RING	89905	DIN553-2X2-5	EA		4				*	*	15	7
0217	X2	D			SPRING, HELICAL COMPRESSION: CLAMP TENSION	89905	T16-217A	EA		1				*	*	15	10
0218	X2	D			WASHER: VERTICAL CLAMP SCREW	89905	T16-216	EA		1				*	*	15	11
0219		D		5310-426-7267	WASHER, LOCK: VERTICAL CLAMP HOUSING	89905	DIN12782-6	EA		3				*	*	15	18
0220	X2	D			HOUSING: VERTICAL COLLIMATION	89905	XT16-135	EA		1				*	*		
0221	X2	D			HOUSING: PRISM, COLLIMATION	89905	T16-266A	EA		1	SEE GRP 6702						
0222	X2	D			HOUSING: PRISM, COLLIMATION	89905	T16-268	EA		1	SEE GRP 6702						
0223	X2	D			HOUSING: VERTICAL COLLIMATION	89905	T16-734N	EA		1				*	*	7	31
0224	X2	D			PRISM: COLLIMATION HOUSING	89905	T16-269	EA		1	SEE GRP 6702						
0225	X2	D			PRISM: VERTICAL COLLIMATION	89905	T16-267	EA		1	SEE GRP 6702						
0226	X2	D			SCREW, ALIDADE: PRISM HOUSING MTG	89905	DIN84-2X4	EA		2				*	*	6	28
0227		D		5305-378-9544	SCREW, AXLE BEARING AND MICROMETER: COLLIMATION HOUSING MTG	89905	DIN84-2-6X4	EA		3				*	*	7	32
0228		D		5305-378-9537	SCREW, AXLE TELESCOPE AND VERTICAL COLLIMATION LEVEL	89905	DIN553-2X1-5	EA		3				*	*	7	10
0229	X2	D		6675-862-2583	SCREW, PLUMBING, OPTICAL: VERNIER TO HOUSING	89905	DIN551-1-7X1-5	EA		1				*	*	7	11
0230		D		5305-423-4240	SETSCREW: SLEEVE TO HOUSING	89905	AB2-1-7X0-8	EA		2				*	*	7	7
0231	X2	D			SLEEVE: COLLIMATION HOUSING	89905	T16-262B	EA		1				*	*	7	6
0232	X2	D			VERNIER ASSEMBLY: COLLIMATION HOUSING	89905	XT16-160	EA		1	SEE GRP 6702						
0233	X2	D			HOUSING ASSEMBLY: HORIZONTAL CIRCLE	89905	XT16-123	EA		1				*	*		

LINE NO.	(1) SOURCE, MAINT. AND REC'OV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTY OCCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0234	X2	D			BUSHING: HORIZONTAL LOCK	89905	T16-72	EA		1					•	14	54
0235	X2	D			CABLE, ELECTRIC	89905	EB10	EA		2	SEE GRP 6717						
0236	X2	F			CLAMP ASSEMBLY: HORIZONTAL CIRCLE	89905	XT16-101	EA		1	•	•	•	•	•		
0237	X2	F			AXIS: CLAMP LEVER	89905	T16-337	EA		1	•	•	•	•	•	13	10
0238	X2	F			BEARING: CLAMP LEVER	89905	T16-340	EA		1	•	•	•	•	•	13	9
0239	X2	F			BUSHING: CLAMP	89905	T16-331	EA		1	•	•	•	•	•	13	3
0240	X2	F			COVER: CLAMP SPRING	89905	T16-335	EA		1	•	•	•	•	•	13	5
0241	X2	F			LEVER: CLAMP	89905	T16-333	EA		1	•	•	•	•	•	13	7
0242	X2	F			LEVER: CLAMP	89905	T16-338	EA		1	•	•	•	•	•	13	11
0243	X2	F		6675-416-7735	PIN: CLAMP LEVER	89905	VSM12771-2-5X19	EA		1	•	•	•	•	•	13	16
0244	X2	F		6675-411-2049	PIN: LEVER, AXIS	89905	VSM12770-1-5X12	EA		1	•	•	•	•	•	13	12
0245	X2	F		6675-416-8866	PIN: LEVER SPRING	89905	VSM12771-2X3	EA		1	•	•	•	•	•	13	14
0246	X2	F			PLATE: CLAMP BUSHING	89905	RDS1-244	EA		1	•	•	•	•	•	13	1
0247	X2	F			SCREW: BASE TO CLAMP	89905	C814-3X8	EA		2	•	•	•	•	•	13	13
0248	X2	F			SCREW, HORIZONTAL CIRCLE AND AXLE: CLAMP	89905	DIN553-2X4	EA		1	•	•	•	•	•	13	15
0249	X2	F			SCREW, MACHINE: SPRING PLATE	89905	DIN920-2X4	EA		2	•	•	•	•	•	13	4
0250	X2	F			SCREW, MACHINE: SPRING TO BUSHING	89905	EA6-2X3-6	EA		4	•	•	•	•	•	13	17
0251	X2	F			SPRING: CLAMP	89905	T16-332	EA		1	•	•	•	•	•	13	2
0252	X2	F			SPRING: CLAMP	89905	T16-334	EA		1	•	•	•	•	•	13	6
0253	X2	F			SPRING, HELICAL, COMPRESSION	89905	T16-336	EA		1	•	•	•	•	•	13	8
0254	X2	D			CLAMP KNOB: HORIZONTAL	89905	NT1-586	EA		1				•	•	14	57
0255	X2	D			CLIP: CABLE	89905	HE4-106	EA		4	SEE GRP 6717						
0256	X2	D			CONNECTOR TUBE: HORIZONTAL LOCK	89905	NT1-555	EA		1				•	•	14	52
0257	X2	D			CONTACT, SPRING: ELECTRICAL	89905	NT16-64	EA		1	SEE GRP 6712						
0258	X2	D			CONTACT, SPRING: ELECTRICAL	89905	T16-65	EA		1	SEE GRP 6712						
0259	X2	D			COVER: HOUSING, PRISM	89905	T16-698	EA		1				•	•	10	7
0260	X2	D			GASKET: INSULATION	89905	T16-67	EA		4				•	•	14	19
0261	X2	D			HOUSING: HORIZONTAL	89905	T16-618	EA		1				•	•	14	15
0262	X2	D			HOUSING: PRISM, HORIZONAL	89905	T16-708	EA		1				•	•		
0263	X2	D			HOUSING ASSEMBLY: INNER BASE	89905	XT16-122	EA		1				•	•		
0264	X2	D			BASE ASSEMBLY: INNER	89905	T16-51F	EA		1				•	•	14	42
0265	X2	D			BUSHING: INSULATION, ELECTRICAL	89905	T16-46	EA		4				•	•	14	34
0266	X2	D			BUSHING: INSULATION, ELECTRICAL	89905	T16-47	EA		2				•	•	14	38
0267	X2	D			BUSHING, CONTACT: CONNECTOR	89905	T16-49	EA		2				•	•	14	39
0268	X2	D			CLAMP: HORIZONTAL LOCK	89905	RDS1-252A	EA		1				•	•	14	4
0269		D		5306-220-5685	BOLT, CLUTCH: SPIKE, BASE HOUSING	89905	T16-42	EA		3				•	•	14	36
0270	X2	D			GASKET: INSULATION, ELECTRICAL	89905	T16-43A	EA		1				•	•	14	45
0271	X2	D			JAW: HORIZONTAL CLAMP	89905	RDS1-254	EA		1				•	•	14	5
0272	X2	D			LEVER: CLAMP, HORIZONTAL	89905	NT1-554	EA		1				•	•	14	7
0273	X2	D			NUT: FOOT SPIKE	89905	T16-50	EA		3				•	•	14	43
0274	X2	D		6675-416-6726	PIN: CLAMP CONNECTOR TUBE	89905	VSM12771-1-5X6-5	EA		1				•	•	14	48
0275	X2	D			PLUG: HOUSING, ELECTRICAL	89905	T16-48	EA		1	SEE GRP 6712						
0276	X2	D			RING, CONTACT: ELECTRICAL	89905	T16-44A	EA		1	SEE GRP 6712						
0277	X2	D			RING, CONTACT: ELECTRICAL	89905	T16-45A	EA		1	SEE GRP 6712						

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY QTY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0278	X2	D			RING, LOCK: HORIXONTAL	89905	RDS1-253	EA		1				*	*	14	2
0279	X2	D			SCREW: CLAMP, HORIZONTAL	89905	T1-178	EA		1				*	*	14	47
0280	X2	D		6675-862-2585	SCREW, HORIZONTAL BASE: FOOT SPIKE LOCK	89905	DIN553-2-6X3	EA		6				*	*	14	33
0281		D		5305-956-7038	SCREW, MACHINE: BASE LOCKING	89905	DIN87-2-6X4	EA		3				*	*	14	32
0282	X2	D			SCREW, MACHINE: CONTACT RING TO BASE	89905	DIN84-2X7	EA		4				*	*	14	35
0283	X2	D			SCREW, MACHINE: ELECTRICAL CONNECTOR TO BASE	89905	DIN84-2X11	EA		2				*	*	14	37
0284		D		5305-429-2844	SCREW, MACHINE: HORIZONTAL LEVER TO CLAMP	89905	DIN88-2-6X7	EA		2				*	*	14	6
0285		D		5305-429-2517	SETSCREW: RING LOCK	89905	DIN553-1-7X1-5	EA		12				*	*	14	3
0286	X2	D			INSULATION: HORIZONTAL BASE	89905	T16-73A	EA		2				*	*	14	28
0287	X2	D			NUT: SPRING CONTACT	89905	DIN439A2	EA		6				*	*	14	49
0288	X2	D		6675-411-2050	PIN: CLAMP KNOB	89905	VSM12770-1-5X6-5	EA		1				*	*	14	56
0289	X2	D			PIN: HORIZONTAL LOCK	89905	NT1-585	EA		1				*	*	14	53
0290	X2	D		6675-416-6726	PIN: VERTICAL CLAMP SCREW	89905	VSM12771-1-5X6-5	EA		1				*	*	14	48
0291	X2	D			PLATE: CONTACT	89905	T16-68	EA		2				*	*	14	50
0292	X2	D			PLATE: INSULATION, ELECTRICAL	89905	T16-66B	EA		2				*	*	14	17
0293	X2	D			PLUG: HOUSING, ELECTRICAL	89905	T16-63	EA		1	SEE GRP 6712						
0294	X2	D			PRISM: HORIZONTAL HOUSING	89905	T16-71A	EA		1	SEE GRP 6702						
0295	X2	D			PRISM: METAL, HORIZONTAL	89905	T16-74	EA		1	SEE GRP 6702						
0296	X2	D			PRISM: METAL, HORIZONTAL	89905	T16-75	EA		1	SEE GRP 6702						
0297	X2	D			SCREW: CLAMP STOP	89905	CA1-2X1-2	EA		1				*	*	14	55
0298	X2	D			SCREW: HORIZONTAL SLOW MOTION SCREW LOCK	89905	CD2-3X4	EA		1				*	*	14	16
0299		D		5305-378-9267	SCREW, HORIZONTAL BASE: MTG	89905	CB5-2-6X6	EA		10				*	*	10	8
0300	X2	D			SCREW, MACHINE: CLAMP MTG	89905	DIN91-2X5	EA		1				*	*	14	31
0301	X2	D			SCREW, MACHINE: ELECTRICAL CABLE TO CONNECTOR	89905	DIN84-2X3	EA		2				*	*	14	41
0302	X2	D			SCREW, MACHINE: HORIZONTAL PRISM MOUNT	89905	DIN84-2X6	EA		2	SEE GRP 6702						
0303		D		5305-429-2731	SCREW, MACHINE: HOUSING PLUG	89905	DIN84-2-6X6	EA		2				*	*	14	9
0304	X2	D			SCREW, MACHINE: SPRING CONTACT	89905	DIN84-2X9	EA		4				*	*	14	20
0305	X2	D		5305-378-2539	SCREW, OPTICAL PLUMBING DEVICE: HORIZONTAL PRISM	89905	DIN553-2X3	EA		1	SEE GRP 6702						
0306	X2	F			SCREW, ASSEMBLY: HORIZONTAL SLOW MOTION	89905	XT16-140	EA		1	*	*	*	*	*		
0307	X2	F			HOUSING: SLOW MOTION PIN SPRING	89905	K2-418	EA		1	*	*	*	*	*	14	12
0308	X2	F			HOUSING: SLOW MOTION SPRING	89905	NT1-684	EA		1	*	*	*	*	*	14	14
0309	X2	F			NUT, LOCK: SLOW MOTION SCREW TO BASE	89905	NT1-594	EA		1	*	*	*	*	*	14	27
0310	X2	F			PIN: SLOW MOTION SCREW	89905	NT1-574A	EA		1	*	*	*	*	*	14	24
0311	X2	F			SCREW ASSEMBLY: SLOW MOTION	89905	XT16-111	EA		1	*	*	*	*	*		
0312	X1				BUSHING SLOW MOTION SCREW	89905	NT1-591C	EA		1						14	26
0313	X1				KNOB: SLOW MOTION PIN	89905	NT1-592	EA		1						14	29
0314	X1				NUT, STOP: SLOW MOTION LEAD SCREW	89905	T1-325	EA		1						14	25

8

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0315	X1				PIN: SLOW MOTION KNOB TO SCREW	89905	T2-135	EA		1						14	30
0316	X1				SCREW, LEAD: SLOW MOTION	89905	NT1-593A	EA		1						14	28
0317	X2	F			SPRING, HELICAL, COMPRESSION: SLOW MOTION PIN	89905	NT1-685	EA		1	*	*	*	*	*	14	13
0318		D		5305-429-2617	SETSCREW: HORIZONTAL CLAMP	89905	DIN553-2X2-5	EA		5				*	*	14	23
0319		D		5305-429-2534	SETSCREW: HORIZONTAL PRISM ADJUSTING	89905	DIN551-2-6X8	EA		2				*	*	14	51
0320		D		5305-429-2585	SETSCREW: PRISM MOUNT	89905	DIN551-2X1-5	EA		1	SEE GRP 6702						
0321	X2	D			SPRING: HORIZONTAL PRISM	89905	T16-76	EA		1	SEE GRP 6702						
0322	X2	D			LEVER: VERTICAL COLLIMATION	89905	XT16-136	EA		1				*	*		
0323	X2	D			HOUSING: PRISM, COLLIMATION	89905	T16-280A	EA		1	SEE GRP 6702						
0324	X2	D			LENS ASSEMBLY: VERTICAL COLLIMATION LEVER	89905	XT16-162	EA		1	SEE GRP 6702						
0325	X2	D			LENS ASSEMBLY: VERTICAL LEVEL, COLLIMATION	89905	XT16-161	EA		1	SEE GRP 6702						
0326	X2	D			LEVER: COLLIMATION	89905	T16-283	EA		1				*	*	7	16
0327	X2	D			MOUNT: PRISM, COLLIMATION	89905	T16-273	EA		1	SEE GRP 6702						
0328	X2	D		6675-416-7736	PIN: LENS MOUNT HOLDING	89905	VSM12771-2-5X8	EA		1	SEE GRP 6702						
0329	X2	D			PRISM: COLLIMATION LEVER	89905	T16-274	EA		1	SEE GRP 6702						
0330	X2	D			PRISM: COLLIMATION LEVER	89905	T16-281	EA		1	SEE GRP 6702						
0331	X2	D		6675-413-2425	SCREW: PRISM HOUSING	89905	DIN404A2X3-5	EA		1	SEE GRP 6702						
0332		D		5305-378-9544	SCREW, AXLE BEARING AND MICROMETER	89905	DIN84-2-6X4	EA		2				*	*	7	17
0333		D		5305-560-6326	SCREW, MACHINE: LEVER	89905	DIN63-2-6X4	EA		2				*	*		
0334	X2	D			SCREW, MACHINE: LEVER TO SLEEVE	89905	DIN84-2X3	EA		2				*	*		
0335		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE: PRISM HOUSING LOCK	89905	DIN553-2X3	EA		2	SEE GRP 6702						
0336	X2	D		6675-862-2583	SCREW, PLUMBING, OPTICAL	89905	DIN551-1-7X1-5	EA		1				*	*	7	27
0337		D		5305-429-2585	SETSCREW: COLLIMATION LEVER PRISM HOUSING	89905	DIN551-2X1-5	EA		1				*	*	7	26
0338	X2	D			SHELL, BEARING: COLLIMATION LEVER	89905	T16-271A	EA		1				*	*	7	3
0339	X2	D			SLEEVE: PRISM HOUSING	89905	T16-272	EA		1				*	*	7	24
0340	X2	D			WASHER, LOCK: LENS HOUSING TO LEVER HOUSING	89905	5X2-1X0-5	EA		2				*	*	7	18
0341	X2	F			SCREW: COLLIMATION, SLOW MOTION	89905	XT16-139	EA		1							
0342	X2	F			HOUSING: SLOW MOTION PIN HOUSING	89905	T16-231	EA		1	SEE GRP 9904					15	33
0343	X2	F			HOUSING: SLOW MOTION SPRING	89905	NT1-684	EA		1	*	*	*	*	*	15	35
0344	X2	F			NUT, LOCK: SLOW MOTION SCREW TO ALIDADE	89905	NT1-594	EA		1	*	*	*	*	*	15	24
0345	X2	H			PIN: SLOW MOTION SCREW	89905	NT1-573	EA		1	*	*	*	*	*	15	31
0346	X2	F			SCREW: SLOW MOTION SCREW BUSHING LOCK	89905	CD3-3X10	EA		1	*	*	*	*	*	15	20
0347	X2	F			SCREW ASSEMBLY: SLOW MOTION	89905	XT16-106	EA		1	*	*	*	*	*		
0348	X1				BUSHING: SLOW MOTION SCREW	89905	NT1-591C	EA		1						15	23
0349	X1				KNOB: SLOW MOTION SCREW	89905	T16-322	EA		1						15	29
0350	X1				NUT, STOP: SLOW MOTION SCREW	89905	T1-325	EA		1						15	22
0351	X1				PIN: SLOW MOTION KNOB TO SCREW	89905	T1-135	EA		1						15	27
0352	X1				SCREW, LEAD: SLOW MOTION	89905	T16-321	EA		1						15	30

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0353	X2	F			SPRING, HELICAL, COMPRESSION: SLOW MOTION SCREW TENSION	89905	T1-338A	EA		1	SEE GRP 9901						
0354	X2	F			SCREW ASSEMBLY: VERTICAL SLOW MOTION	89905	XT16-133	EA		1	*	*	*	*	*		
0355	X2	F			HOUSING: SLOW MOTION PIN SPRING	89905	T16-231	EA		1	SEE GRP 9901					15	33
0356	X2	F			HOUSING: SLOW MOTION SPRING	89905	NT1-684	EA		1	*	*	*	*	*	15	35
0357	X2	F			NUT, LOCK: SLOW MOTION SCREW TO ALIDADE	89905	NT1-594	EA		1	*	*	*	*	*	15	24
0358	X2	H			PIN: SLOW MOTION SCREW	89905	NT1-574A	EA		1	*	*	*	*	*	15	21
0359	X2	H			SCREW: SLOW MOTION SCREW BUSHING LOCK	89905	CD3-3X10	EA		1	*	*	*	*	*	15	20
0360	X2	F			SCREW ASSEMBLY: SLOW MOTION	89905	XT16-105	EA		1	*	*	*	*	*	15	34
0361	X1				BUSHING: SLOW MOTION SCREW	89905	NT1-591C	EA		1						15	25
0362	X1				KNOB: SLOW MOTION SCREW	89905	NT1-592	EA		1						15	26
0363	X1				NUT, STOP: SLOW MOTION SCREW	89905	T1-325	EA		1						15	22
0364	X1				PIN: SLOW MOTION KNOB TO SCREW	89905	T2-135	EA		1						15	27
0365	X1				SCREW, LEAD: SLOW MOTION	89905	NT1-593A	EA		1						15	23
0366	X2	F			SPRING, HELICAL, COMPRESSION: SLOW MOTION SCREW TENSION	89905	T1-338A	EA		1	SEE GRP 9901					15	34
0367		F		5306-429-2517	SETSCREW: FOOTSCREW COVER	89905	DIN553-1-7X1-5	EA		3	*	*	*	*	*	22	27
0368	X2	D			STANDARD ASSEMBLY, U	89905	XT16-125	EA		1				*	*	16	1
0369	X2	D			BUSHING: HORIZONTAL PRISM	89905	T16-102A	EA		1				*	*	10	1
0370	X2	D			BUSHING: PLUG IN LIGHT	89905	T16-716	EA		1				*	*	16	2
0371	X2	D			COVER: COLLIMATION LEVER	89905	T16-715	EA		1				*	*	16	3
0372	X2	D			COVER: VERTICAL CLAMP	89905	T16-122A	EA		1				*	*	15	1
0373	X2	D			LENS ASSEMBLY: OPTICAL, VERTICAL	89905	XT16-154	EA		1	SEE GRP 6702						
0374	X2	D			LENS ASSEMBLY: OPTICAL, VERTICAL	89905	XT16-155	EA		1	SEE GRP 6702						
0375	X2	D			LENS ASSEMBLY: OPTICAL, VERTICAL	89905	XT16-156	EA		1	SEE GRP 6702						
0376	X2	D			MOUNT: ILLUMINATION LIGHT	89905	RDS1-41	EA		1				*	*	16	5
0377	X2	D			NUT: ILLUMINATION LIGHT MOUNT BUSHING	89905	T16-121	EA		1				*	*	16	7
0378	X2	D			PIN: GROUND BASE	89905	T16-119	EA		3				*	*	15	28
0379	X2	D			PIN: GROUND BASE	89905	T16-119AE	EA		1				*	*	15	32
0380	X2	D			SCREW: STANDARD	89905	E86-3X3	EA		2				*	*	4	3
0381	X2	D			SCREW, MACHINE: COVER ATTACHING	89905	CB23-2X2-2	EA		18				*	*	15	8
																16	8
0382	X2	D			SETSCREW	89905	DIN553-2X7	EA		2				*	*	6	3
0383		D		5305-492-2517	SETSCREW: BUSHING TO NUT	89905	DIN553-1-7X1-5	EA		1				*	*	16	6
0384	X2	D			U STANDARD, ALIDADE	89905	T16-111C	EA		1				*	*	4	5
0385	X2	D			WINDOW: ALIDADE ILLUMNATION	89905	T16-123A	EA		1	SEE GRP 6702						
0386	X2	D			WINDOW: ILLUMINATION LIGHT BUSHING	89905	RDS1-40	EA		1	SEE GRP 6702						
0387					6704 - BATTERIES												
0388	P	0		6135-120-1020	BATTERY, DRY: 1.5v (MINIMUM STOCKAGE OF 4 IS AUTHORIZED)	80063	BA30	EA		4	10	21	42	500	100	24	30
0389					6705 - LAMPS												
0390	P	0		6675-859-5936	LAMP: BATTERY BOX SPARES	89905	MEG3-64	EA		3	SEE GRP 9901					24	16
0391	P	0		6675-859-5936	LAMP: ILLUMINATING LIGHT	89905	MEG3-64	EA		1	SEE GRP 9901					17	21

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/QTY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0392	P	O		6675-378-9501	LIGHT, HAND	89905	XT2-73	EA		1	*	*	2	10	50		
0393	X2	F		5975-789-0743	ADAPTER, ELECTRICAL CONDUIT	89905	EB131	EA		1	*	*	*	*	*	23	21
0395	X2	F			CABLE: HAND LIGHT	89905	HED1132-9	EA		1	*	*	*	*	*	23	1
0396	X2	F		6675-789-0568	CAP, ELECTRICAL	89905	EB137	EA		1	*	*	*	*	*	23	12
0397	X2	F		5935-378-9285	CONNECTOR, PLUG, ELECTRIC	89905	EB125	EA		1	*	*	*	*	*	23	2
0398	X2	F		6675-378-9286	CONTACT, HAND LIGHT	89905	EB134	EA		1	*	*	*	*	*	23	23
0399	X2	F		6675-378-9292	HOUSING, HAND LIGHT	89905	EB151	EA		1	*	*	*	*	*	23	22
0400	X2	F		6675-378-9287	INSULATION, HAND LIGHT	89905	EB135	EA		1	*	*	*	*	*	23	16
0401	X2	F		6675-378-9294	INSULATION, HAND LIGHT	89905	EB153	EA		1	*	*	*	*	*	23	3
0402	P	O		6675-589-5936	LAMP: HAND LAMP ASSEMBLY	89905	HEG3-64	EA		1	SEE GRP 9901					23	24
0402A	X2	F		6675-378-9288	LEVER, HAND LIGHT	89905	EB139	EA		1	*	*	*	*	*	23	8
0403	X2	F		6675-378-9291	LEVER, HAND LIGHT	89905	EB142	EA		1	*	*	*	*	*	23	19
0404	X2	F			NUT: HAND LIGHT	89905	DIN934-3	EA		1	*	*	*	*	*	23	14
0405	X2	F		6675-416-7901	PIN: INSULATION	89905	VSM12771-2X14	EA		1	*	*	*	*	*	23	15
0406		F		5305-378-9223	SCREW, AXLE BEARING AND MICROMETER: HAND LIGHT	89905	AB53-2X2-6	EA		2	*	*	*	*	*	23	20
0407		F		5305-378-9545	SCREW, HAND LIGHT	89905	DIN84-2-6X8	EA		1	*	*	*	*	*	23	11
0408	X2	F			SCREW, HAND LIGHT	89905	DIN88-2X5	EA		1	*	*	*	*	*	23	7
0409		F		5305-378-9283	SCREW, HORIZONTAL LEVEL AND LIGHT	89905	EB1-2X2-5	EA		1	*	*	*	*	*	23	5
0410	X2	F		6675-378-9301	SLEEVE CABLE, HAND LIGHT	89905	HE4-79	EA		1	*	*	*	*	*	23	13
0411	X2	F		6675-378-9289	SPRING, HAND LIGHT	89905	EB140A	EA		1	*	*	*	*	*	23	9
0412	X2	F		6675-378-9290	SPRING, HAND LIGHT	89905	EB141	EA		1	*	*	*	*	*	23	10
0413	X2	F			TERMINAL LUG	89905	EB154	EA		1	*	*	*	*	*	23	17
0414	X2	F		6675-378-9293	TUBE, HAND LIGHT	89905	EB152	EA		1	*	*	*	*	*	23	26
0415	X1				TUBE, HAND LIGHT	89905	EB132	EA		1						23	6
0416	X1				TUBE, HAND LIGHT	89905	EB133A	EA		1						23	24
0417	X2	F			TUBE, HAND LIGHT	89905	EB136	EA		1	*	*	*	*	*	23	14
0418					6712 - MOUNTED CONNECTING DEVICES AND CONTACTS												
0419	X2	D			CONTACT, SPRING: ELECTRICAL	89905	T16-64	EA		1				*	*	14	18
0420	X2	D			CONTACT, SPRING: ELECTRICAL	89905	T16-65	EA		1				*	*	14	21
0421	P	O		6675-560-5649	ILLUMINATING ASSEMBLY, ELECTRIC	89905	XT16-113	EA		1	*	*	2	10	50		
0422	X2	F			BOLT: SCREW, LIGHT ATTACHING	89905	T16-742	EA		1	*	*	*	*	*	17	15
0423	X1				BUSHING: INSULATION	89905	T16-505	EA		1						17	22
0424	X1				BUSHING: LAMPHOLDER TO COVER	89905	T16-739	EA		1						17	5
0425	X1				BUSHING, THREADED	89905	RDS1-54	EA		1						17	2
0426	X1				CLIP: RETAINING	89905	RDS1-538	EA		1						17	3
0427	X2	F		5935-378-9285	CONNECTOR, PLUG, ELECTRICAL	89905	EB125	EA		1	*	*	*	*	*	17	16
0428	X2	F			COVER: ILLUMINATION LIGHT	89905	T16-740P	EA		1	*	*	*	*	*	17	18
0429	X1				HOUSING	89905	EB224-227	EA		1							
0430	X1				HOUSING	89905	T16-744	EA		1							
0431	X2	F			KNOB: BOLT SCREW	89905	T16-743	EA		1	*	*	*	*	*	17	11
0432	P	O		6675-859-5936	LAMP: ILLUMINATING LIGHT	89905	HEG2-64	EA		1	SEE GRP 6705						
0433	P	O			LAMPHOLDER	89905	T16-506	EA		1	*	*	2	10	50	17	7

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0434	X2	F		6145-353-4121	LEAD, ELECTRICAL	89905	XT2-27	EA		1	*	*	*	*	*	17	9
0435	X2	F		6675-439-8054	LENS, EYEPIECE, TELESCOPE	89905	NT2-244	EA		1	*	*	*	*	*	17	4
0436	X2	F			MIRROR: ILLUMINATION	89905	T16-503	EA		1	*	*	*	*	*	17	1
0437	X1				NUT: LAMPHOLDER TO BUSHING	89905	T16-507	EA		1						17	6
0438	X1			6675-411-2035	PIN: KNOB TO BOLT	89905	VSM12770-0-8X8	EA		1						17	10
0439	X2	F		6675-416-8647	PIN: LAMPHOLDER TO BUSHING	89905	VSM12771-2X2	EA		1	*	*	*	*	*	17	8
0440	X2	D			PLUG: HOUSING, ELECTRICAL	89905	T16-48	EA		1				*	*	14	40
0441	X2	D			PLUG: HOUSING, ELECTRICAL	89905	T16-63	EA		1				*	*	14	10
0442	X2	D			RING, CONTACT: ELECTRICAL	89905	T16-44A	EA		1				*	*	14	46
0443	X2	D			RING, CONTACT: ELECTRICAL	89905	T16-45A	EA		1				*	*	14	1
0444	X1				RING, LOCK	89905	T16 504	EA		1						17	20
0445		F		5305-378-9236	SCREW, HORIZONTAL BASE: SLEEVE TO COVER	89905	CA18-2X3	EA		1	*	*	*	*	*	17	19
0446	X2	F			SCREW, MACHINE: BUSHING TO COVER	89905	CB16-2X3	EA		2	*	*	*	*	*	17	12
0447	X2	F			SCREW, MACHINE: MIRROR TO COVER	89905	DIN85-2X3	EA		2	*	*	*	*	*	17	17
0448		F		5305-429-2517	SETSCREW: LOCK RING TO BUSHING	89905	DIN553-1-7X1-5	EA		1	*	*	*	*	*	17	14
0449	X2	F			SLEEVE: BOLT SCREW TO COVER	89905	T16-741	EA		1	*	*	*	*	*	17	13
0450					6717 - POWER SUPPLY												
0451	X2	D			CABLE, ELECTRICAL	89905	EB10	EA		2				*	*	14	8
0452	X2	D			CLIP, CABLE	89905	HEK-106	EA		4				*	*	14	11
0453	P	O		6675-378-9502	BATTERY BOX	89905	EB319B	EA		1	*	*	2	10	50		
0455	X1				CASE: BATTERY BOX	89905	EB301D	EA		1						24	20
0456	X1				CONTACT, ELECTRICAL	89905	EB307A	EA		1						24	26
0457	X2	F			CONTACT, ELECTRICAL	89905	EB316	EA		1	*	*	*	*	*	24	15
0458	X2	F			CONTACT, ELECTRICAL	89905	EB327A	EA		1	*	*	*	*	*	24	9
0459	X2	O			DUMMY ASSEMBLY: BATTERY	89905	EB329	EA		2	*	*	*	*	*	24	7
0460	X2	F			INSULATION	89905	HEJ1-28-11	EA		1	*	*	*	*	*		
0461	X1				INSULATION: CONTACT TO BOX	89905	EB306A	EA		1						24	25
0462	X2	F			KNOB: RHEOSTAT	89905	EB310	EA		1	*	*	*	*	*	24	22
0463	X1				KNOB: SLIDE LEVER	89905	EB303	EA		1						24	14
0464	P	O		6675-899-5936	LAMP: SPARES	89905	HEG3-64	EA		3	SEE GRP 6705						
0464A	X2	F		6145-353-4121	LEAD, ELECTRICAL			EA		1	*	*	*	*	*	24	3
0465	X1				LEVER, SLIDE	89905	EB302	EA		1						24	11
0466	X2	F			LUG, CABLE	89905	HEK1-1	EA		3	*	*	*	*	*		
0467	X2	F			NUT: GROUND SPRING	89905	DIN934-3	EA		2	*	*	*	*	*	24	29
0468	X2	F			NUT: SLIDE LEVER KNOB	89905	DIN439-2-6	EA		1	*	*	*	*	*	24	19
0469	X2	F			PIN: KNOB TO RHEOSTAT	89905	VSM12770-1	EA		1	*	*	*	*	*	24	23
0470	X2	F		5905-955-1210	RHEOSTAT	89905	HEW2-13	EA		1	*	*	*	*	*	24	1
0471	X2	F		6675-446-1986	SCREW: CONTACT TO TRUNK	89905	VSM12801-2-3X12	EA		4	*	*	*	*	*	24	8
0472	X2	F			SCREW: KNOB TO RHEOSTAT SHAFT	89905	DIN551-3X6	EA		1	*	*	*	*	*	24	21
0473	X2	F			SCREW: SLIDE SPRING	89905	DIN87-3X8	EA		2	*	*	*	*	*	24	13
0474	X2	F		6675-446-1977	SCREW: TRUNK TO BOX	89905	VSM12801-2X7	EA		4	*	*	*	*	*	24	18
0475		F		5305-378-9550	SCREW, HORIZONTAL CIRCLE AND AXLE: RHEOSTAT TO CONTACT	89905	DIN85-2-6X4	EA		2	*	*	*	*	*	24	2

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/QTY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0476	X2	F		6675-806-0211	SCREW, LOWER BASE	89905	CA6-2-6X8-5	EA		2	*	*	*	*	*	2	4
0477		F		5305-378-9529	SCREW, OPTICAL PLUMBING DEVICE: TERMINAL TO RECEPTACLE	89905	DIN551-1-7X2	EA		4	*	*	*	*	*	2	6
0478	X2	F		6675-378-9297	SOCKET, BATTERY BOX	89905	EB55A	EA		2	*	*	*	*	*	2	5
0479	X2	F			SPRING, BATTERY BOX	89905	MZ25-0215	EA		2	*	*	*	*	*	2	27
0480	X2	F		6130-831-0183	SPRING, HELICAL, EXTENSION: SLIDE LEVER	89905	EB315	EA		1	*	*	*	*	*	2	12
0481	X2	F			TRUNK: CONTACT AND SLIDE LEVER, WOOD	89905	EB322	EA		1	*	*	*	*	*	2	10
0482	X2	F			TRUNK: LAMP HOLDING, WOOD	89905	EB321	EA		1	*	*	*	*	*	2	17
0483	X1				WASHER	89905	EB328A	EA		1						2	31
0484	X2	F			WASHER: RHEOSTAT SHAFT	89905	EB309	EA		1	*	*	*	*	*	2	24
0485	X2	O		5935-378-9285	CONNECTOR, PLUG, ELECTRICAL	89905	EB125	EA		2	*	*	*	*	*	2	2
0486	P	O		6150-378-9500	LEAD, ELECTRICAL	89905	XT2-72	EA		1	*	*	2	10	50	2	18
0487					6718 - COMPASS AND LEVEL												
0488	X2	D			LEVEL: VERTICAL COLLIMATION	89905	T16-137	EA		1				*	*		
0489	X2	D			BEAM: LEVEL VIAL	89905	T16-291A	EA		1				*	*		
0490	X2	D			COVER: VIAL END	89905	T16-299	EA		2				*	*	1	5
0491	X2	D			HOUSING: WINDOW ADJUSTING	89905	T16-292	EA		1				*	*	1	17
0492	X2	D		6675-416-8870	PIN: BEAM TO HOUSING	89905	VSM12771-4X13	EA		1				*	*	1	13
0493	X2	D			PLATE: PRISM MTG	89905	T16-297	EA		1	SEE GRP 6702					1	16
0494	X2	D			PRISM: COLLIMATION LEVEL	89905	T16-294	EA		1	SEE GRP 6702						
0495	X2	D			PRISM: COLLIMATION LEVEL	89905	T16-295	EA		1	SEE GRP 6702						
0496	X2	D			PRISM: METAL, COLLIMATION LEVEL	89905	T16-296	EA		1	SEE GRP 6702						
0497	X2	D			SCREW: VIAL ADJUSTING	89905	CDK3-3X15	EA		1				*	*	1	9
0498	X2	D		6675-413-2427	SCREW: WINDOW MTG	89905	EA4-1-7X3-5	EA		2				*	*	1	11
0499		D		5305-378-9537	SCREW, AXLE TELESCOPE AND VERTICAL COLLIMATION LEVEL	89905	DIN553-2X1-5	EA		1				*	*	1	15
0500		D		5305-378-9260	SCREW, HORIZONTAL BASE: VIAL LOCKING	89905	CB2-2X2-5	EA		6				*	*	1	7
0501	X2	D			SCREW, MACHINE: END COVER LOCKING	89905	EB6-3X3	EA		1				*	*	1	18
0502	X2	D			SCREW, MACHINE: PLATE AND PRISM MTG	89905	CB23-2X2-2	EA		4				*	*	1	1
0503		D		5305-353-4146	SCREW, VERTICAL COLLIMATION LEVEL: HOUSING TO ALIDADE	89905	CB3-2-6X4-7	EA		3				*	*	1	14
0504	X2	D			SPRING, HELICAL, COMPRESSION: LEVEL ADJUSTING	89905	NT1-634	EA		1	SEE GRP 9903					1	10
0505	X2	D		6675-411-2032	VIAL, LEVEL	89905	T16-735T1-75	EA		1				*	*	1	6
0506	X2	D			WASHER: VIAL ADJUSTING SCREW	89905	NT1-666	EA		1				*	*	1	8
0507	X2	D			WINDOW: LIGHT REFLECTING	89905	T16-298	EA		1				*	*		
0508	X2	D			LEVEL, TELESCOPE AXIS	89905	XT16-126	EA		1				*	*		
0509	X2	D			BEARING: LEVEL SWIVEL	89905	T16-718	EA		1				*	*	1	3
0510	X2	D			BEARING: PLATE LEVEL ADJUSTING END	89905	T16-131	EA		1				*	*	1	6
0511	X2	D			COVER: ALIDADE WINDOW	89905	T16-719	EA		1				*	*	1	1
0512	X2	D			COVER: LEVEL VIAL	89905	NT1-636A	EA		1				*	*	1	5
0513	X2	D			KNOB: ALIDADE COVER	89905	T16-72	EA		1				*	*	1	2

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/DCY PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0514	X2	D		6675-411-2024	LEVEL	89905	T16-717T1-75	EA		1				*	*	18	14
0515	X2	D			SCREW: LEVEL VIAL ADJUSTING	89905	CDK3-3X15	EA		1				*	*	18	8
0516	X2	D			SCREW, MACHINE: LEVEL VIAL MTG	89905	CB4-2X3	EA		6				*	*	18	12
0517		D		5305-560-6327	SCREW, MACHINE: VIAL BUSHING MTG	89905	DIN84-2-6X7	EA		4				*	*	18	7
0518		D		5305-429-2517	SETSCREW: SWIVEL BUSHING TO VIAL TUBE	89905	DIN553-1-7X1-5	EA		1				*	*	18	13
0519	X2	D		6675-974-7365	SLEEVE: LEVEL MTG SWIVEL	89905	T16-133	EA		1				*	*	18	4
0520	X2	D			SPRING, HELICAL, COMPRESSION: LEVEL ADJUSTING	89905	NT1-634	EA		1	SEE GRP 990					18	10
0521	X2	D			TUBE: VIAL, LEVEL	89905	T16-132A	EA		1				*	*	18	11
0522	X2	D			WASHER: LEVEL ADJUSTING SCREW	89905	NT1-666	EA		1				*	*	18	9
0523					6719 - TRIPODS												
0524	X2	O		6675-378-9525	COVER, TRIPOD	89905	3A63	EA		1	*	*	*	*	*	25	14
0525	X2	O		6675-641-3572	TRIPOD, SURVEYING	89905	21B	EA		1	*	*	*	*	*		
0526	X2	O			BRACKET: BATTERY BOX	89905	21B19	EA		1	*	*	*	*	*	26	7
0527	X2	O			BRACKET, COVER	89905	21B52S	EA		1	*	*	*	*	*	26	6
0528	X2	O		6675-416-8882	CLAMP ASSEMBLY: LEG	89905	21B32-16813	EA		3	*	*	*	*	*		
0529	X1				CLAMP: LEG	89905	21B32AS	EA		3						26	27
0530	X1				CLAMP: PLATE	89905	1B15A	EA		3							
0531	X2	O		6675-647-0914	CLAMP: TRIPOD LEG	89905	3A11	EA		3	*	*	*	*	*	26	10
0532	X2	O			NUT, HEXAGON	89905	1A6A	EA		3	*	*	*	*	*	26	19
0533	X2	O		6675-860-0169	PIN, TRIPOD HEAD	89905	VSM12771-2-5X6	EA		3	*	*	*	*	*	26	11
0534	X2	O			SCREW	89905	DIN87-4X15	EA		6	*	*	*	*	*		
0535	X2	O		6675-996-3694	SCREW: FIXING	89905	1A37	EA		1	*	*	*	*	*	26	17
0536	X2	O			SCREW: TRIPOD HEAD	89905	2A36B	EA		3	*	*	*	*	*	26	12
0537	X1				SCREW: WING	89905	16B13	EA		3						26	29
0538		O		5305-378-9253	SCREW, LEVELING	89905	CB1-3LX4-7	EA		3	*	*	*	*	*	26	18
0539		O		5305-831-0147	SCREW, MACHINE: TRIPOD HEAD	89905	CAA1-6X10	EA		1	*	*	*	*	*	26	16
0540	X2	O		6675-804-7342	SCREW, TRIPOD HEAD: HEAD AND GUIDE MOUNTING	89905	VSM12802-2-6X18	EA		18	*	*	*	*	*	26	8
0541	X2	O			HEAD ASSEMBLY, TRIPOD	89905	XT2-75A	EA		1	*	*	*	*	*		
0542	X2	O		5306-353-4141	BOLT, MACHINE: LEG HOUSING	89905	BA1-8X17	EA		6	*	*	*	*	*	26	9
0543	X2	O			BRACKET	89905	3A52B	EA		1	*	*	*	*	*	26	15
0544	X1				HEAD ASSEMBLY: TRIPOD	89905	3A50851A	EA		1						26	13
0545	X2	O			LEG ASSEMBLY: TRIPOD	89905	XT21-335	EA		3	*	*	*	*	*		
0546	X2	O			LEATHER STRAP	89905	21B16	EA		1	*	*	*	*	*	26	3
0547	X1				LEG ASSEMBLY: LOWER	89905	XT21-337	EA		3							
0548	X1				LEG: WOOD	89905	21B11	EA		3						26	23
0549	X1				LEG ASSEMBLY: UPPER	89905	21B12-13	EA		3							
0550	X1				LEG: WOOD	89905	21B12	EA		3							
0551	X1				LEG: WOOD	89905	21B13	EA		3							
0552	X1			5310-647-0924	NUT: SHOE TO TRIPOD LEG	89905	1A10	EA		3						26	32
0553	X1				PLATE: LEG STOP	89905	21B14	EA		3						26	22
0554	X1				PLATE: LEG STOP	89905	21B15	EA		3						26	21

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0555	X2	0		6675-446-1983	SCREW: BATTERY BOX BRACKET AND COVER BRACKET	89905	VSM12801-3X20	EA		4	*	*	*	*	*	28	4
0556	X2	0			SCREW, HEXAGON: TRIPOD LEG	89905	BA5-8X30	EA		3	*	*	*	*	*	28	30
0557	X2	0			SCREW, MACHINE: HEAD TO LEG	89905	DIN88-3X28	EA		6	*	*	*	*	*	28	28
0558	X2	0		6675-804-7341	SCREW, TRIPOD LEG	89905	VSM12800-3-5X18	EA		2	*	*	*	*	*	28	
0559		0		5305-418-9676	SCREW, WOOD: BELT TO LEG	89905	VSM12802-2-6X12	EA		6	*	*	*	*	*	28	1
0560	X1				SHOE: TRIPOD LEG	89905	218186	EA		3						28	31
0561	X2	0			WASHER, FLAT: BRASS, STRAP TO TRIPOD LEG	89905	8x4-2x0-5	EA		2	*	*	*	*	*	28	2
0562					GROUP 99 - PARTS PECULIAR												
0563					9901 - PARTS PECULIAR WITH MORE THAN ONE APPLICATION												
0564	X2	F			HOUSING	89905	T16-231	EA		2	*	*	*	*	*		
0565	P	0		6675-859-5936	LAMP			EA		5	2	2	4	50	225		
0566	X2	D			SPRING, HELICAL, COMPRESSION	89905	NT1-634	EA		2	*	*	*	*	*		
0567	X2	F			SPRING, HELICAL, COMPRESSION	89905	T1-338A	EA		2	*	*	*	*	*		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0568					SECTION 5 - REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE PART II												
0569					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
0570					2202 - ACCESSORY ITEMS												
0571	X2	O		8105-974-7393	BAG: PLASTIC	89905	MD6-63	EA		1	*	*	*	*	*	23	6
0572	X2	O		6675-966-5793	CASE ASSEMBLY: TRIPOD	89905	3B35A36	EA		1	*	*	*	*	*	20	5
0573	P	O		5210-353-4130	PLUMB BOB: WITH ADJUSTER	89905	XT2-35	EA		1	*	*	2	10	50		
0574	M	O			CORD: LINEN (2590 BLOCK) MANUFACTURE FROM:	89905	3A40	EA		1						20	5
0574A	P	O		4020-270-1659	CORD: LINEN (5 FT 2 IN. REQUIRED)			FT			SEE GRP 9501						
0575	X1			5210-974-7394	PLUMB BOB	89905	3A32A	EA		1						20	6
0576	X1				RING: PLUMB BOB	89905	T2-501	EA		1						20	3
0577	X1				SLIDE: PLUMB BOB	89905	3A39A	EA		1						20	4
0578	X1				TUBE, BAYONET: PLUMB BOB	89905	3A54A	EA		1						20	1
0579	P	O		5120-378-9520	WRENCH TRIPOD	89905	3A29	EA		1	SEE GRP 2604 SECTION III						
0580	M	O			CHAMOIS: DIRT AND DUST MANUFACTURE FROM:	89905	MD2-6	EA		1						3	3
0580A	P	O		8330-634-0084	CHAMOIS, LEATHER SHEEP SKIN (16 IN. X 16 IN. REQUIRED)			FT			SEE GRP 9501						
0581	P	O		6675-974-7362	CONTAINER, LUBRICANT	89905	MD7-17	EA		1	*	*	2	10	50	3	11
0582	X2	O		6675-974-7363	HOLDER, CASE ASSEMBLY	89905	NT2-551	EA		1	*	*	*	*	*	3	5
0583					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL ELECTRICAL												
0584					6701 - TELESCOPE ASSEMBLY												
0585	X2	D			TELESCOPE ASSEMBLY	89905	XT16-128	EA		1				*	*		
0586	X2	D			EYEPIECE ASSEMBLY: TELESCOPE	89905	XT16-103	EA		1	SEE GRP 6702						
0587	X2	D			FOCUS ASSEMBLY	89905	XT16-129	EA		1	SEE GRP 6702						
0588	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-102	EA		1	SEE GRP 6702						
0589	X2	D			RETICLE ASSEMBLY	89905	XT16-130	EA		1	SEE GRP 6702						
0590		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE	89905	DIN553-2X3	EA		1				*	*	21	2
0591		D		5305-429-2617	SETSCREW: TELESCOPE EYEPIECE	89905	DIN553-2X2-5	EA		1				*	*	21	41
0592	P	O		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	SEE GRP 6702						
0593	X2	D			TUBE: TELESCOPE	89905	T16-161	EA		1				*	*	21	1
0594	X2	D			WASHER: TELESCOPE TUBE	89905	T16-162	EA		1				*	*	21	3

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0595					6702 - OPTICS												
0596	P	F			EYEPIECE ASSEMBLY: TELESCOPE	89905	XT16-103	EA		1	*	*	2	10	50		
0597	X1				BUSHING: EYEPIECE LENS	89905	T16-723	EA		1						21	28
0598	X1				HOUSING: EYEPIECE LENS	89905	T16-724	EA		1						21	34
0599	X2	D			KNOB: EYEPIECE ADJUSTING	89905	NT1-744	EA		1				*	*	21	26
0600	X1				LENS: TELESCOPE EYEPIECE	89905	T16-725-726	EA		1						21	33
0601	X1				LENS: TELESCOPE EYEPIECE	89905	T16-727	EA		1						21	31
0602	X1				LENS: TELESCOPE EYEPIECE	89905	T16-728-729	EA		1						21	29
0603	X1				NUT: BUSHING	89905	T16-185	EA		1						21	35
0604	X2	D			RING, INDEX: EYEPIECE	89905	NT1-742	EA		1				*	*	21	27
0605		D		5305-378-9533	SCREW, EYEPIECE, TELESCOPE	89905	DIN553-1-7X2-5	EA		1				*	*	21	43
0606		D		5305-429-2517	SETSCREW: ADJUSTING KNOB	89905	DIN553-1-7X1-5	EA		1				*	*	21	9
0607	X2	D			WASHER: LENS SPACER	89905	T16-730	EA		1				*	*	21	32
0608	X1				WASHER: LENS SPACER	89905	T16-731	EA		1						21	30
0609	X2	D			FOCUS ASSEMBLY	89905	XT16-129	EA		1				*	*		
0610	X2	D			BRIDGE: TELESCOPE AND MICROSCOPE	89905	T16-722	EA		1				*	*	21	21
0611	X2	D			HOUSING: TELESCOPE LINES	89905	NT1-913	EA		1				*	*	21	12
0612	X2	D		6675-378-9390	LENS, EYEPIECE TELESCOPE	89905	NT2-481	EA		1				*	*	21	15
0613	X2	D		6675-378-9391	LENS, EYEPIECE TELESCOPE	89905	NT2-482	EA		1				*	*	21	17
0614		D		5305-423-4273	SCREW, MACHINE: EYEPIECE LOCK RING	89905	AC1-1-4X1-5	EA		1				*	*	21	24
0615		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE	89905	DIN553-2X3	EA		3				*	*	21	2
0616		D		5305-378-9230	SCREW, TELESCOPE EYEPIECE: SEGMENT	89905	AC4-2X1-5	EA		2				*	*	21	14
0617	X2	D		6675-378-9443	SEGMENT, EYEPIECE TELESCOPE	89905	T1-418	EA		1				*	*	21	13
0618		D		5305-429-2517	SETSCREW: EYEPIECE SLEEVE	89905	DIN553-1-7X1-5	EA		1				*	*	21	9
0619	X2	D			SETSCREW: FOCUSING TUBE	89905	DIN553-2X5	EA		1				*	*	21	11
0620	X2	D			SHELL: FOCUSING	89905	T16-173	EA		1				*	*	21	20
0621	X2	D			SLEEVE: EYEPIECE SCREW CAP	89905	T16-175	EA		1				*	*	21	23
0622	X2	D		6675-404-4510	TUBE, FOCUSING	89905	T16-171-172	EA		1				*	*	21	19
0623	X2	D			WASHER: LENS SPACING	89905	NT1-914	EA		1				*	*	21	16
0624	X2	D			WASHER: LENS SPACING	89905	NT1-915	EA		1				*	*	21	18
0625	X2	D			MIRROR: COLLIMATION LEVEL	89905	T16-736	EA		1				*	*	5	3
0626	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-102	EA		1				*	*		
0627	X1				HOUSING: OBJECTIVE LENS	89905	NT1-901	EA		1						21	5
0628	X2	D		6675-378-9386	LENS, OBJECTIVE TELESCOPE	89905	NT2-471	EA		1				*	*	21	7
0629	X1				LENS ASSEMBLY: OBJECTIVE TELESCOPE	89905	NT2-475	EA		1						21	4
0630	X1				RING, LOCK: LENS	89905	T16-721	EA		1						21	8
0631		D		5305-429-2517	SETSCREW: LOCK RING	89905	DIN553-1-7X1-5	EA		1				*	*	21	9
0632	X1				WASHER: OBJECTIVE HOUSING	89905	T1-433	EA		1						21	6
0633	P	O		6675-974-7366	PRISM ASSEMBLY, OPTICAL INSTRUMENT: OBJECTIVE TELESCOPE	89905	XT16-115	EA		1	*	*	2	10	50	3	8
0634	X1				HOUSING: PRISM	89905	NT2-382	EA		1							
0635	X1				HOUSING: PRISM	89905	T16-762	EA		1							
0636	X2	D			PRISM: TELESCOPE	89905	T16-763	EA		1				*	*		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/GCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0637	X2	D			SCREW: PRISM	89905	EA2-2X5-3	EA		1				*	*		
0638	X2	D		6675-862-2583	SCREW, PLUMBING OPTICAL	89905	DIN551-1-7X1-5	EA		1				*	*		
0639	X2	D			WASHER: PRISM	89905	NT2-390	EA		1				*	*		
0640	X2	D			RETICLE ASSEMBLY: TELESCOPE	89905	XT16-130	EA		1				*	*		
0641	X2	D			CAP: EYEPIECE LOCK	89905	T16-187	EA		1				*	*	21	42
0642	X2	D			RETICLE ASSEMBLY: TELESCOPE	89905	XT16-157	EA		1				*	*		
0643	X1				HOUSING: LENS RECTICLE	89905	T16-733	EA		1						21	39
0644	X1				RETICLE: TELESCOPE	89905	NT2-486TAF	EA		1						21	38
0645	X1				RING: RECTICLE	89905	NT1-920	EA		1						21	40
0646	X2	D			SCREW: EYEPIECE LOCK	89905	CD4-2-6X7	EA		2				*	*	21	25
0647		D		5305-423-4273	SCREW, MACHINE: EYEPIECE LOCK	89905	AC1-1-4X1-5	EA		2				*	*	21	36
0648		D		5305-353-4146	SCREW, VERTICAL COLLIMATION LEVEL	89905	CB3-2-6X4-7	EA		2				*	*	21	22
0649	X2	D			SLEEVE: TELESCOPE RECTICLE	89905	T16-183	EA		1				*	*	21	37
0650	P	0		6675-974-7367	SUNGLASS ASSEMBLY: TELESCOPE	89905	XT16-116	EA		1	*	*	2	10	50	3	9
0651	X1				MOUNT: SUNGLASS	89905	NT2-385	EA		3							
0652	X1				SCREW: SUNGLASS	89905	EA5-2X2-4	EA		1							
0653	X1				SLEEVE: SUNGLASS	89905	NT2-384	EA		1							
0654	X1				SUNGLASS	89905	NT2-386A	EA		1							
0655	X1				SUNGLASS	89905	NT2-386B	EA		1							
0656	X1				SUNGLASS	89905	NT2-386C	EA		1							
0657	P	0		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	*	*	2	10	50	21	10
0658	X2	D			WINDOW: LEVEL COVER	89905	T16-312	EA		1				*	*	5	18
0659	X2	D			WINDOW: LEVEL COVER	89905	T16-313	EA		1				*	*	5	20
0660					6703 - MECHANICAL, STRUCTURAL, AND PRECISION PARTS												
0661	X2	D			COVER: COLLIMATION LEVEL	89905	XT16-138	EA		1				*	*		
0662	X2	D			AXIS: ILLUMINATION COVER	89905	T16-315	EA		1				*	*	5	4
0663	X2	D			COVER: ILLUMINATION	89905	T16-737	EA		1				*	*	5	2
0664	X2	D			COVER: LEVEL	89905	T16-311B	EA		1				*	*	5	21
0665	X2	D			MIRROR: COLLIMATION LEVEL	89905	T16-736	EA		1	SEE GRP 6702						
0666	X2	D			NUT: ILLUMINATION COVER AXIS TO ALIDADE	89905	NT1-669	EA		1				*	*	5	16
0667	X2	D			SCREW: COVER	89905	T16-316	EA		2				*	*		
0668	X2	D		6675-413-2427	SCREW: COVER TO AXIS	89905	EA4-1-7X3-5	EA		2				*	*	5	5
0669	X2	D			SCREW: STOP COVER	89905	DIN927-2X2	EA		1				*	*	5	17
0670	X2	D			SCREW, MACHINE: COVER TO MIRROR	89905	CB23-2X2-2	EA		2				*	*	2	
0671	X2	D			SCREW, MACHINE: WINDOW COVER	89905	DIN921-3X4	EA		2				*	*	5	19
0672	X2	D			WINDOW: LEVEL COVER	89905	T16-312	EA		1	SEE GRP 6702						
0673	X2	D			WINDOW: LEVEL COVER	89905	T16-313	EA		1	SEE GRP 6702						
0674	X2	D			TRIBRACH ASSEMBLY: THEODOLITE	89905	XT16-121	EA		1				*	*	22	
0675	X2	F			FOOTSCREW ASSEMBLY: TRIBRACH	89905	XT16-109	EA		3	*	*	*	*	*		
0676	X2	F			COVER: FOOTSCREW	89905	NT2-164A	EA		3	*	*	*	*	*	22	28
0677	X1			6675-413-2441	FOOTSCREW ASSEMBLY	89905	NT2-160-161B	EA		3						22	19

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0678	X1				KNOB: FOOTSCREW	89905	NT1-530	EA		3						22	20
0679	X1				NUT: FOOTSCREW	89905	NT2-163B	EA		3						22	21
0680	X1				SCREW, LEVELING	89905	CB1-3LX4-7	EA		3						22	26
0681	X2	F			LEVEL ASSEMBLY: CIRCULAR	89905	XT16-150	EA		1	SEE GRP 6718						
0682	X2	D			LOCK: STOP SPRING LEVEL	89905	T16-260	EA		1				•	•	22	9
0683	X2	D			NUT: BASE PLATE	89905	T16-25	EA		1				•	•	22	8
0684		D		5305-378-9548	SCREW, HORIZONTAL CIRCLE AND AXLE: LEVEL ATTACHING	89905	DIN84-3X7	EA		3	SEE GRP 6718						
0685	X2	D		6675-805-3156	SCREW, INSTRUMENT: STOP MTG	89905	EA2-2-6X3-5	EA		2				•	•	22	22
0686		D		5305-378-9274	SCREW, LEVELING: FOOTSCREW LOCK	89905	CD9-3X5-5	EA		3				•	•	22	25
0687		D		5305-420-9619	SCREW, MACHINE: STOP LOCK MTG	89905	CA11-2-6X5-5	EA		2				•	•	22	18
0688		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE: STOP NUT	89905	DIN553-2X3	EA		1				•	•	22	29
0689	X2	D			SETSCREW: FOOTSCREW	89905	DIN553-3X5	EA		3				•	•	22	24
0690	X2	D		6675-404-4533	SPRING: LOCKING	89905	T16-22-23-24	EA		1				•	•	22	7
0691	X2	D		6675-996-3032	STARPLATE ASSEMBLY	89905	XT16-110	EA		1				•	•		
0692	X2	D			NUT: LOCK, SPRING PLATE	89905	T1-24	EA		1				•	•	22	16
0693	X2	D			NUT: SPRING PLATE	89905	T1-23	EA		1				•	•	22	10
0694	X2	D			NUT: STOP	89905	T1-25	EA		1				•	•	22	14
0695	X2	D			PAD: FOOTSCREW	89905	T0-63A	EA		3				•	•	22	15
0696	X1				PLATE: BASE	89905	T1-21	EA		1						22	12
0697	X2	D			PLATE: SPRING	89905	T1-22	EA		1				•	•	22	11
0698		D		5305-378-9532	SCREW, HORIZONTAL BASE	89905	DIN553-1-7X2	EA		1				•	•	22	13
0699		D		5305-429-2617	SETSCREW: SPRING PLATE NUT	89905	DIN553-2X2-5	EA		1				•	•	22	17
0700	X2	D			STOP: SPRING LEVER	89905	T16-27	EA		1				•	•	22	23
0701	X2	D			TRIBRACH: THEODOLITE	89905	T16-21A	EA		1				•	•	22	2
0702	X2	F			WASHER, SPRING: LEVEL	89905	HD2-21	EA		6	SEE GRP 6718						
0703					6717 - POWER SUPPLY												
0704	X1				BATTERY BOX (REPLACED BY BATTERY BOX, Stock No. 6675-378-9502, See Part I)	89905	XT2-74	EA		1						24	
0705	X1				CASE: BATTERY BOX	89905	EB301C	EA		1						24	26
0706	X2	F		6675-860-0168	CONTACT, BATTERY BOX	89905	EB327	EA		1	•	•	•	•	•	24	9
0707	X1				CONTACT, ELECTRICAL	89905	EB307A	EA		1						24	26
0708	X2	F			CONTACT, ELECTRICAL	89905	EB316	EA		1	•	•	•	•	•	24	15
0709	X2	O			DUMMY ASSEMBLY: BATTERY	89905	EB323	EA		2	•	•	•	•	•	24	7
0710	X1				INSULATION: CONTACT TO BOX	89905	EB306A	EA		1						24	28
0711	X2	F			KNOB: RHEOSTAT	89905	EB310	EA		1	•	•	•	•	•	24	22
0712	X1				KNOB: SLIDE LEVER	89905	EB303	EA		1						24	14
0713	X2	F		6145-353-4121	LEAD, ELECTRICAL	89905	XT2-27	EA		1	•	•	•	•	•	24	3
0714	X1				LEVER, SLIDE	89905	EB302	EA		1						24	11
0715	X2	F			NUT: GROUND SPRING	89905	DIN934-3	EA		2	•	•	•	•	•	24	29

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0716	X2	F			NUT: SLIDE LEVER KNOB	89905	DIN439-2-6	EA		1	*	*	*	*	*	24	19
0717	X2	F			PIN: KNOB TO RHEOSTAT	89905	VSM12770-1	EA		1	*	*	*	*	*	24	23
0718	X2	F		6675-378-9302	RHEOSTAT, BATTERY BOX	89905	ME5-21	EA		1	*	*	*	*	*	24	1
0719	X2	F		6675-446-1986	SCREW: CONTACT TO TRUNK	89905	VSM12801-2-3X12	EA		4	*	*	*	*	*	24	8
0720	X2	F			SCREW: KNOB TO RHEOSTAT SHAFT	89905	DIN551-3X6	EA		1	*	*	*	*	*	24	21
0721	X2	F			SCREW: SLIDE SPRING	89905	DIN87-3X8	EA		2	*	*	*	*	*	24	13
0722	X2	F		6675-446-1977	SCREW: TRUNK TO BOX	89905	VSM12811-2X7	EA		4	*	*	*	*	*	24	18
0723	X2	F		6675-806-0211	SCREW, LOWER BASE	89905	CA6-2-6X8-5	EA		2	*	*	*	*	*	24	4
0724		F		5305-378-9550	SCREW, HORIZONTAL CIRCLE AND AXLE: RHEOSTAT TO CONTACT	89905	DIN85-2-6X4	EA		2	*	*	*	*	*	24	2
0725		F		5305-378-9529	SCREW, OPTICAL PLUMBING DEVICE: TERMINAL TO RECEPTACLE	89905	DIN551-1-7X2	EA		4	*	*	*	*	*	24	6
0726	X2	F		6675-378-9297	SOCKET, BATTERY BOX	89905	EB55A	EA		2	*	*	*	*	*	24	5
0727	X2	F		6135-378-9308	SPRING, BATTERY BOX	89905	M104918	EA		2	*	*	*	*	*	24	27
0728	X2	F		6130-831-0183	SPRING, HELICAL, EXTENSION: SLIDE LEVER	89905	EB315	EA		1	*	*	*	*	*	24	12
0729	X2	F			TRUNK: CONTACT AND SLIDE LEVER, WOOD	89905	EB322	EA		1	*	*	*	*	*	24	10
0730	X2	F			TRUNK: LAMP HOLDING, WOOD	89905	EB321	EA		1	*	*	*	*	*	24	17
0731	X2	F			WASHER: BATTERY GROUND SPRING	89905	8X3-3X1	EA		2	*	*	*	*	*	24	28
0732	X1				WASHER: PAPER	89905	EB328	EA		1						24	31
0733	X2	F			WASHER: RHEOSTAT SHAFT	89905	EB309	EA		1	*	*	*	*	*	24	24
0734					6718 - COMPASS AND LEVEL												
0735	P	O		6675-887-5561	COMPASS ASSEMBLY, DIRECTIONAL	89905	XT16-118	EA		1	*	*	2	10	50	3	4
0736	X2	H			BASE: COMPASS BODY	89905	T16-781	EA		1	*	*	*	*	*	25	31
0737	P	F		6675-786-5210	BEARING ASSEMBLY	89905	XT16-164	EA		1	*	2	2	15	50		
0738	X1				BEARING: NEEDLE SCREW	89905	B3-10B	EA		1						25	45
0739	X1				HOUSING: NEEDLE SCREW BEARING	89905	B3-11	EA		1						25	47
0740	X2	H			BRIDGE: COMPASS EYEPIECE	89905	T16-591	EA		1	*	*	*	*	*	25	37
0741	X2	H			BRIDGE: COMPASS TO ALIDADE	89905	T16-792	EA		1	*	*	*	*	*	25	19
0742	X2	H			BUSHING: CAGING LOCK	89905	T16-803	EA		1	*	*	*	*	*	25	26
0743	X2	H		6675-962-4522	CIRCLE, COMPASS	89905	T16-801TB	EA		1	*	*	*	*	*	25	5
0744	X2	H			COVER: LEG PIN	89905	T16-797	EA		2	*	*	*	*	*	25	17
0745	X2	H			DISK, DAMPING: COMPASS	89905	T16-800	EA		1	*	*	*	*	*	25	50
0746	X2	H			HOUSING: COMPASS BODY	89905	T16-794	EA		1	*	*	*	*	*	25	35
0747	X2	H			HOUSING: COMPASS WINDOW	89905	T16-584	EA		1	*	*	*	*	*	25	68
0748	X2	H			HOUSING: COMPASS WINDOW	89905	T16-586	EA		1	*	*	*	*	*	25	1
0749	X2	H			KNOB: COMPASS CAGING LOCK	89905	T16-805	EA		1	*	*	*	*	*	25	28
0750	X2	H			KNOB: COMPASS HOUSING LOCK	89905	T16-809	EA		1	*	*	*	*	*	25	32
0751	X2	H			KNOB, LOCK: COMPASS LEG	89905	T16-790	EA		1	*	*	*	*	*	25	12
0752	X2	H			LEG: COMPASS, PLAIN SUPPORT	89905	T16-786	EA		1	*	*	*	*	*	25	25
0753	X2	H			LEG: COMPASS TO BRIDGE SUPPORT	89905	T16-787	EA		1	*	*	*	*	*	25	10
0754	X2	H			LENS: COMPASS EYEPIECE	89905	T0-195A	EA		1	*	*	*	*	*	25	66
0755	X2	H			LENS ASSEMBLY: COMPASS EYEPIECE	89905	XT16-163	EA		1	*	*	*	*	*		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/GCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0756	X1				HOUSING: EYEPIECE	89905	T0-198A	EA		1							40
0757	X1				KNOB: COMPASS EYEPIECE	89905	T0-199	EA		1							41
0758	X1				LENS: EYEPIECE	89905	T0-197A	EA		1							39
0759	X2	H		6675-962-4523	NEEDLE, COMPASS	89905	T16-802	EA		1	*	*	*	*	*		4
0760	X2	H			NUT: NEEDLE SCREW SLEEVE	89905	T16-784	EA		1	*	*	*	*	*		23
0761	X2	H			NUT, LOCK: NEEDLE SCREW BUSHING	89905	B3-27	EA		1	*	*	*	*	*		43
0762	X2	H		6675-446-1969	PIN: COMPASS CAGING LOCK KNOB TO LOCK SCREW	89905	VSM12770-1X10	EA		1	*	*	*	*	*		46
0763	X2	H			PIN: COMPASS LEG	89905	T16-788	EA		2	*	*	*	*	*		62
0764	X2	H		6675-411-2053	PIN: COMPASS LEG ATTACHING	89905	VSM12771-4X32	EA		2	*	*	*	*	*		15
0765	X2	H		6675-411-2053	PIN: COMPASS LEG ATTACHING	89905	VSM12771-4X32	EA		2	*	*	*	*	*		22
0766	X2	H		6675-446-1972	PIN: COMPASS LEG MTG	89905	VSM12770-1X8	EA		2	*	*	*	*	*		24
0767	X2	H		6675-446-1970	PIN: LEG PIN STOP RING	89905	VSM12770-1X6	EA		2	*	*	*	*	*		11
0768	X2	H			PIN: LOCK KNOB, CAGING	89905	T16-808	EA		1	*	*	*	*	*		13
0769	X2	H			PIN: SCREW, COMPASS CAGING LOCK	89905	T16-804	EA		1	*	*	*	*	*		63
0770	X2	H		6675-953-0028	PRISM: COMPASS READING	89905	T16-583TA	EA		1	*	*	*	*	*		30
0771	X2	H			RING, INDEX: COMPASS	89905	T16-795	EA		1	*	*	*	*	*		69
0772	X2	H			RING, LOCK: COMPASS HOUSING	89905	T16-587	EA		1	*	*	*	*	*		8
0773	X2	H			RING, LOCK: NEEDLE BEARING HOUSING SLEEVE	89905	T16-799	EA		1	*	*	*	*	*		42
0774	X2	H			RING, STOP: COMPASS LEG PIN	89905	T16-789	EA		2	*	*	*	*	*		48
0775	X2	H			SCREW: CAGING LOCK	89905	T16-588	EA		1	*	*	*	*	*		14
0776	X2	H			SCREW: LEVEL ADJUSTING, COMPASS LEG	89905	CD10-3X12	EA		2	*	*	*	*	*		55
0777	X2	H			SCREW: NEEDLE SCREW SPRING	89905	T16-811	EA		1	*	*	*	*	*		21
0778	X2	H		5305-378-9252	SCREW, AXLE BEARING AND MICROMETER: COMPASS HOUSING TO BASE	89905	CBZ7-3X3-8	EA		3	*	*	*	*	*		56
0779	X2	H		5305-378-9252	SCREW, HORIZONTAL BASE: LEG PIN LOCK	89905	DIN553-2X2	EA		2	*	*	*	*	*		36
0780		H		5305-378-9540	SCREW, HORIZONTAL CIRCLE AND AXLE: LEG SLEEVE AND PACING LOCK	89905	DIN553-2X4	EA		5	*	*	*	*	*		54
0781		O		5305-786-5222	SCREW, INSTRUMENT: COMPASS NEEDLE	89905	T16-595P	EA		1	*	*	*	*	*		20
0782		H		5305-560-6330	SCREW, MACHINE: BALANCE WEIGHT	89905	DIN85-1-7X2-5	EA		4	*	*	*	*	*		1
0783	X2	H			SCREW, MACHINE: COMPASS BASE	89905	DIN85-3X8	EA		3	*	*	*	*	*		3
0784		H		5305-956-7037	SCREW, MACHINE: COMPASS BASE ATTACHING	89905	DIN84-2X3-5	EA		3	*	*	*	*	*		60
0785	X2	H			SCREW, MACHINE: COMPASS CAGING LOCK BRIDGE	89905	DIN920-3X6	EA		2	*	*	*	*	*		61
0786	X2	H			SCREW, MACHINE: COMPASS LOCK STOP CAGING	89905	CA4-1-7X4	EA		1	*	*	*	*	*		33
0787		H		5305-425-1202	SCREW, MACHINE: COMPASS OUTER HOUSING TO INNER HOUSING	89905	CB1-2-6X2-7	EA		2	*	*	*	*	*		29
0788	X2	H			SCREW, MACHINE: EYEPIECE BRIDGE	89905	DIN85-3X5	EA		3	*	*	*	*	*		65
0789	X2	H			SCREW, MACHINE: INDEX RING RETAINING	89905	CB6-2-6X4	EA		3	*	*	*	*	*		38
0790	X2	H			SCREW, MACHINE: NEEDLE SCREW SLEEVE LOCK	89905	CBZ2-2X2	EA		3	*	*	*	*	*		51
0791		H		5305-378-9269	SCREW, OPTICAL PLUMBING DEVICE: BRIDGE TO ALIDADE	89905	CB6-3X4	EA		2	*	*	*	*	*		58
0792	X2	H			SETSCREW: COMPASS LEG	89905	AB3-2-6X5	EA		4	*	*	*	*	*		18
																	53

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYDCT. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0793		H		5305-429-2585	SETSCREW: FRICH HTG	89905	DIN551-2X1-5	EA		1	*	*	*	*	*	25	67
0794	X2	H			SLEEVE: COMPASS BASE	89905	T16-785	EA		1	*	*	*	*	*	22	52
0795	X2	H			SLEEVE: COMPASS HOUSING LOCK	89905	T16-810	EA		1	*	*	*	*	*	22	34
0796	X2	H			SLEEVE: COMPASS NEEDLE SCREW	89905	T16-782	EA		1	*	*	*	*	*	22	6
0797	X2	H			SLEEVE: LEG PIN	89905	T16-791	EA		2	*	*	*	*	*	22	16
0798	X2	H		6675-996-3712	SLEEVE: NEEDLE BEARING HOUSING	89905	T16-798	EA		1	*	*	*	*	*	22	2
0799	X2	H			SLEEVE: NEEDLE PIVOT PIN	89905	T16-593	EA		1	*	*	*	*	*	22	57
0800	X2	H			SPRING: HOUSING	89905	T16-783	EA		1	*	*	*	*	*	22	9
0801	X2	H			SPRING: NEEDLE SCREW	89905	T16-796	EA		1	*	*	*	*	*	22	59
0802	X2	H			SPRING, HELICAL, TORSION: CAGING LOCK	89905	T16-806A	EA		1	*	*	*	*	*	22	27
0803	X2	H			WASHER: BALANCE WEIGHT	89905	B3-74	EA		4	*	*	*	*	*	22	4
0804	X2	H			WASHER: COMPASS HOUSING LOCK	89905	T16-807	EA		1	*	*	*	*	*	22	64
0805	X2	H			WEIGHT: NEEDLE BALANCE	89905	B3-60	EA		4	*	*	*	*	*	22	46
0806	X2	H		6675-991-6455	WINDOW: COMPASS COVER	89905	T16-585	EA		1	*	*	*	*	*	22	43
0807	X2	F			LEVEL ASSEMBLY: CIRCULAR	89905	XT16-150	EA		1	*	*	*	*	*	22	
0808	X1				BASE: LEVEL	89905	NT1-535	EA		1						22	3
0809	X1				HOUSING: LEVEL	89905	B3-92	EA		1						22	1
0810	X1				LEVEL: CIRCULAR	89905	T16-701	EA		1						22	2
0811		D		5305-378-9532	SCREW, HORIZONTAL BASE	89905	DIN553-1-7X2	EA		1				*	*	22	13
0812	X2	F			SCREW, HORIZONTAL CIRCLE AND AXLE: LEVEL ATTACHING	89905	DIN84-3X7	EA		3	*	*	*	*	*	22	6
0813	X2	F			WASHER, SPRING: LEVEL	89905	HD2-21	EA		6	*	*	*	*	*	22	4
0814					6719 - TRIPODS												
0815	X1				TRIPOD, SURVEYING (REPLACED BY TRIPOD, STOCK NO. 6675-641-3572)	89905	111B	EA		1						26	
0816	X2	0			BRACKET: BATTERY BOX	89905	3B40A	EA		1	*	*	*	*	*	26	7
0817	X2	0			BRACKET: COVER	89905	3B75	EA		1	*	*	*	*	*	26	6
0818	X2	0		6675-956-6950	CLAMP ASSEMBLY: LEG	89905	3B14B16A17A	EA		3	*	*	*	*	*		
0819	X1				CLAMP: LEG	89905	3B14B	EA								26	27
0820	X1				GUIDE: LEG CLAMP	89905	3B45	EA								26	25
0821	X1				LOCK: LEG CLAMP	89905	HM1-23	EA		3						26	26
0822	X1			6675-897-9074	SCREW, WING, TRIPOD LEG: CLAMP	89905	3B17A	EA		3						26	29
0823		0		5305-647-0935	SCREW, WOOD: TRIPOD HEAD	89905	VSM12801-4X18	EA		12	*	*	*	*	*	26	24
0824	X2	0			SHOE: TRIPOD LEG	89905	3B16A	EA		3	*	*	*	*	*	26	28
0825	X2	0		6675-378-9503	HEAD ASSEMBLY	89905	XT2-75	EA		1	*	*	*	*	*		
0826		0		5306-353-4141	BOLT, MACHINE: LEG HOUSING	89905	BA1-8X17	EA		6	*	*	*	*	*	26	9
0827	X2	0			BRACKET: LEG HOUSING	89905	3A57	EA		1	*	*	*	*	*	26	15
0828	X2	0		6675-677-0914	CLAMP: TRIPOD LEG	89905	3A11	EA		3	*	*	*	*	*	26	10
0829	X1				HEAD ASSEMBLY: TRIPOD	89905	3A50B51A	EA		1						26	13
0830		0		5310-560-1986	NUT, PLAIN, HEXAGON: TRIPOD LEG	89905	1A6	EA		3	*	*	*	*	*	26	19
0831	X2	0		6675-860-0169	PIN: TRIPOD HEAD	89905	VSM12771-2-5X6	EA		3	*	*	*	*	*	26	11

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY OCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0832	X2	0			SCREW: TRIPOD HEAD	89905	1A33C	EA		1	*	*	*	*	*		17
0833	X2	0			SCREW, LEVELING	89905	CB1-3LX4-7	EA		3	*	*	*	*	*		18
0834		0		5305-831-0147	SCREW, MACHINE: TRIPOD HEAD	89905	CAA1-6X10	EA		1	*	*	*	*	*		16
0835		0		5305-378-9518	SCREW, TRIPOD HEAD: LEVELING	89905	2A36A	EA		3	*	*	*	*	*		12
0836	X2	0			SCREW, WOOD: TRIPOD HEAD	89905	VSM12B02-6X18	EA		6	*	*	*	*	*		8
0837	X2	0			LEG ASSEMBLY: TRIPOD	89905	XT21-100	EA		3	*	*	*	*	*		
0838	X2	0			BELT: LEG FASTENING	89905	3B23	EA		1	*	*	*	*	*		3
0839	X1			6675-647-0927	LEG, WOOD: LOWER	89905	3B13A	EA		6							34
0840	X1			6675-647-0926	LEG, WOOD: UPPER	89905	3B12B	EA		6							23
0841	X1			5310-647-0924	NUT: SHOE TO TRIPOD LEG	89905	1A10	EA		3							32
0842	X1				PLATE: LEG STOP	89905	3B30	EA		3							21
0843	X1				PLATE: LEG STOP	89905	3B31	EA		3							22
0844	X2	0			SCREW: TRIPOD LEG	89905	BA3-8X34-5	EA		3	*	*	*	*	*		30
0845	X2	0			SCREW, MACHINE: HEAD TO LEG	89905	DIN88-4X26	EA		6	*	*	*	*	*		20
0846	X2	0		6675-804-7341	SCREW, TRIPOD LEG: BELT	89905	VSM12B00-3-5X18	EA		2	*	*	*	*	*		1
0847	X1				SHOE: TRIPOD LEG	89905	3B42	EA		3							31
0848	X2	0			WASHER, FLAT: STRAP TO TRIPOD LEG	89905	8X4-2X0-5	EA		2	*	*	*	*	*		2
0849	X1			6675-647-0925	WEDGE, WOOD: LEG	89905	3B21	EA		3							33
0850	X2	0		6675-446-1983	SCREW: BATTERY BOX BRACKET AND COVER BRACKET	89905	VSM12B01-3X20	EA		6	*	*	*	*	*		4
0851					GROUP 95 - GENERAL USE STANDARDIZED PARTS												
0852					9501 - BULK MATERIAL												
0853	P	0		8330-965-1722	CHAMOIS LEATHER, SHEEPSKIN			EA		1	*	*	*	10	50		
0854	P	0		4020-270-1659	CORD, LINEN			FT			*	*	*	500	200		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0855					SECTION 5 - REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE PART III												
0856					GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS												
0857					2202 - ACCESSORY ITEMS												
0858	X2	0			BAG: PLASTIC	89905	MDB1-66	EA		2	*	*	*	*	*	3	6
0858A	P	0		8330-965-1722	CHAMOIS, LEATHER SHEEPSKIN			EA			SEE GRP 9501						
0860	P	0		6675-446-1762	CONTAINER, GREASE: LUBRICATING	89905	MDF3-4	EA		1	*	*	2	10	50	3	11
0861	P	0		6675-560-5463	NEEDLE CENTER	89905	T16-812	EA		1	*	*	2	10	50		
0862	X2	0			KIT ASSEMBLY: TOOL	89905	2A20A23A	EA		1	*	*	*	*	*	26	5
0863	X1				BRACKET: TOOL KIT	89905	2A23A	EA		1							
0864	X1				KIT: TOOL	89905	2A20A	EA		1							
0865	P	0		5210-353-4130	PLUMB BOB ASSEMBLY	89905	XT2-35A	EA		1	*	*	2	10	50		
0866	M	0			CORD: LINEN (2590 BLOCK)	89905	3A40	EA		1						20	5
					MANUFACTURE FROM:												
0866A	P			4020-270-1659	CORD: LINEN (5 FT 2 IN. REQUIRED)			FT			SEE GRP 9501						
0867	X1				PLUMB BOB ASSEMBLY	89905	12B27A28	EA		1						20	6
0868	X1				PLUMB BOB	89905	12B27A	EA		1							
0869	X1				PLUMB BOB POINT	89905	12B28	EA		1							
0870	X1				RING	89905	3A56	EA		1						20	3
0871	X1				SLIDE: PLUMB BOB	89905	3A39A	EA		1						20	4
0872	X1				TUBE, BAYONET: PLUMB BOB	89905	3A54B	EA		1						20	1
0873	X1				RIVET	89905	DIN674-3X8	EA		4							
0874		0		5305-418-9676	SCREW, WOOD	89905	VSM12802-2-6X12	EA		4	*	*	*	*	*		
0875	X1				WASHER	89905	12-3-2X1	EA		4							
0876	P	0		5120-378-9520	WRENCH, TRIPOD	89905	3A29	EA		1	SEE GRP 2604 PART						
0877					GROUP 67 - PRECISION INSTRUMENTS AND SYSTEMS, MECHANICAL												
0878					6701 - TELESCOPE ASSEMBLY												
0879	X2	D			TELESCOPE ASSEMBLY	89905	XT16-128A	EA		1					*		
0880	X2	D			EYEPIECE ASSEMBLY	89905	XT16-103	EA		1	SEE GRP 6702						
0881	X2	D			FOCUS ASSEMBLY	89905	XT16-129A	EA		1	SEE GRP 6702						
0882	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-102	EA		1	SEE GRP 6702						
0883	X2	D			RETICLE ASSEMBLY	89905	XT16-130	EA		1	SEE GRP 6702						
0884		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE	89905	DIN553-2X3	EA		1				*	*	21	2
0885		D		5305-492-2617	SETSCEW: TELESCOPE EYEPIECE	89905	DIN553-2X2-5	EA		1				*	*	21	41
0886	P	0		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	SEE GRP 6702						

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/GCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0887	X2	D			TUBE: TELESCOPE	89905	T16-161	EA		1				**	**	21	1
0888	X2	D			WASHER: TELESCOPE TUBE	89905	T16-162	EA		1				**	**	21	3
0889					6702 - OPTICS												
0890	X2	D			EYEPIECE ASSEMBLY	89905	XT16-103	EA		1				*	*		
0891	X1				BUSHING: EYEPIECE LENS	89905	T16-723	EA		1							
0892	X1				HOUSING: EYEPIECE LENS	89905	T16-724	EA		1						21	28
0893	X2	D			KNOB: EYEPIECE ADJUSTING	89905	NT1-744	EA		1						21	34
0894	X1				LENS	89905	T16-729L11	EA		1				*	*	21	26
0895	X1				LENS: TELESCOPE EYEPIECE	89905	T16-726L11	EA		1						21	29
0896	X1				LENS: TELESCOPE EYEPIECE	89905	T16-727	EA		1						21	33
0897	X1				NUT: BUSHING	89905	T16-185	EA		1						21	31
0898	X2	D			RING, INDEX: EYEPIECE	89905	NT1-742	EA		1						21	35
0899		D		5305-378-9533	SCREW, EYEPIECE TELESCOPE	89905	DIN553-1-7X2-5	EA		1				**	**	21	27
0900		D		5305-429-2517	SETSCREW: ADJUSTING KNOB	89905	DIN553-1-7X1-5	EA		1				**	**	21	43
0901	X2	D			WASHER: LENS SPACER	89905	T16-730	EA		1				**	**	21	9
0902	X2	D			WASHER: LENS SPACER	89905	T16-731	EA		1				**	**	21	32
0903	X2	D			FOCUS ASSEMBLY	89905	XT16-129A	EA		1				**	**	21	30
0904	X2	D			BRIDGE: TELESCOPE AND MICROSCOPE	89905	T16-722	EA		1				**	**		
0905	X2	D			HOUSING: TELESCOPE LENS	89905	NT1-913	EA		1				**	**	21	21
0906	X2	D		6675-378-9390	LENS, EYEPIECE TELESCOPE	89905	NT2-481	EA		1				**	**	21	12
0907	X2	D		6675-378-9391	LENS, EYEPIECE TELESCOPE	89905	NT2-482	EA		1				**	**	21	15
0908		D		5305-423-4273	SCREW, MACHINE: EYEPIECE LOCK RING	89905	AC1-1-4X1-5	EA		1				**	**	21	17
0909	X2	D			MIRROR: COLLIMATION LEVEL	89905	T16-736	EA		1				**	**	21	24
0910	X2	D			OBJECTIVE ASSEMBLY	89905	XT16-102	EA		1				**	**		3
0911	X1				HOUSING: OBJECTIVE LENS	89905	NT1-901	EA		1							
0912	X2	D			LENS, OBJECTIVE TELESCOPE	89905	NT2-471L11	EA		1				*	*	21	5
0913	X1				LENS ASSEMBLY: OBJECTIVE TELESCOPE	89905	NT2-475L11	EA		1						21	7
0914	X1				RING, LOCK: LENS	89905	T16-721	EA		1						21	4
0915		D		5305-429-2517	SETSCREW: LOCK RING	89905	DIN553-1-7X1-5	EA		1						21	8
0916	X1				WASHER: OBJECTIVE HOUSING	89905	T1-433	EA		1				*	*	21	9
0917	P	O		6675-560-5586	PRISM ASSEMBLY, OPTICAL INSTRUMENT: OBJECTIVE TELESCOPE	89905	XT16-115A	EA		1	*	*	2	10	50	21	6
0918	X1				HOUSING: PRISM	89905	NT2-382	EA		1						3	8
0919	X1				HOUSING: PRISM	89905	T16-762	EA		1							
0920	X2	D			PRISM: TELESCOPE	89905	T16-763	EA		1							
0921		D		5305-378-9277	SCREW, AXLE AND HORIZONTAL CIRCLE	89905	EA2-2X5-2	EA		1				*	*		
0922	X2	D		6675-862-2583	SCREW, PLUMBING OPTICAL	89905	DIN551-1-7X1-5	EA		1							
0923	X2	D			RETICLE ASSEMBLY: TELESCOPE	89905	XT16-130	EA		1							
0924	X2	D			CAP: EYEPIECE LOCK	89905	T16-187	EA		1				*	*		
0925	X2	O			RETICAL ASSEMBLY: TELESCOPE	89905	XT16-157	EA		1				*	*		
0926	X1				HOUSING: LENS RETICLE	89905	T16-733	EA		1						21	42
0927	X1				RETICLE: TELESCOPE	89905	NT2-486TAF	EA		1						21	38
																21	36

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0928	X1				RING: RETICLE	89905	NT1-920	EA		1						21	40
0929	X2	D			SCREW: EYEPIECE LOCK	89905	CD4-2-6X7	EA		2				*	*	21	25
0930	X2	D			SCREW, MACHINE: EYEPIECE LOCK	89905	AC1-1X1-4X1-5	EA		2				*	*	21	36
0931		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE	89905	DIN553-2X3	EA		3				*	*	21	2
0932		D		5305-378-9230	SCREW, TELESCOPE EYEPIECE: SEGMENT	89905	AC4-2X1-5	EA		2				*	*	21	14
0933		D		5305-353-4146	SCREW, VERTICAL COLLIMATION LEVEL	89905	CB3-2-6X4-7	EA		2				*	*	21	22
0934	X2	D		6675-378-9443	SEGMENT, EYEPIECE TELESCOPE	89905	T1-418	EA		1				*	*	21	13
0935		D		5305-429-2517	SETSCREW: EYEPIECE SLEEVE	89905	DIN553-1-7X1-5	EA		1				*	*	21	9
0936	X2	D			SETSCREW: FOCUSING TUBE	89905	DIN553-2X5	EA		1				*	*	21	11
0937	X2	D			SHELL: FOCUSING	89905	T16-173	EA		1				*	*	21	20
0938	X2	D			SLEEVE: EYEPIECE SCREW CAP	89905	T16-175	EA		1				*	*	21	23
0939	X2	D			SLEEVE: TELESCOPE RETICLE	89905	T16-183	EA		1				*	*	21	37
0940	X2	D		6675-404-4510	TUBE, FOCUSING	89905	T16-171-172	EA		1				*	*	21	19
0941	X2	D			WASHER: LENS SPACING	89905	NT1-914	EA		1				*	*	21	16
0942	X2	D			WASHER: LENS SPACING	89905	NT1-915	EA		1				*	*	21	18
0943	P	0		6675-446-1768	SUNGLASS ASSEMBLY	89905	XT16-116A	EA		1	*	*	2	10	50	3	9
0944	X1				MOUNT: SUNGLASS	89905	NT2-385	EA		3							
0945	X1				SCREW: SUNGLASS	89905	EA5-2X2-4	EA		1							
0946	X1				SLEEVE: SUNGLASS	89905	NT2-384	EA		1							
0947	X1				SUNGLASS	89905	NT2-386A	EA		1							
0948	X1				SUNGLASS	89905	NT2-386B	EA		1							
0949	X1				SUNGLASS	89905	NT2-386D	EA		1							
0950	P	0		6675-560-5462	SUNSHADE: TELESCOPE LENS	89905	T16-720	EA		1	*	*	2	10	50	21	10
0951	X2	D			WINDOW: LEVEL COVER	89905	T16-312	EA		1				*	*	5	18
0952	X2	D			WINDOW: LEVEL COVER	89905	T16-313	EA		1				*	*	5	20
0953					6703 - MECHANICAL, STRUCTURAL, AND PRECISION PARTS												
0954	X2	D			COVER: COLLIMATION LEVEL	89905	XT16-138A	EA		1				*	*		
0955	X2	D			AXIS: ILLUMINATION, COVER	89905	T16-315	EA		1				*	*		4
0956	X2	D			COVER: ILLUMINATION	89905	T16-737	EA		1				*	*		2
0957	X2	D		6675-404-4538	COVER ASSEMBLY	89905	T16-311C317	EA		1				*	*		
0958	X2	D			COVER	89905	T16-311C	EA		1				*	*	5	21
0959	X2	D			SCREW: COVER	89905	T16-317	EA		1				*	*		
0960	X2	D			MIRROR: COLLIMATION LEVEL	89905	T16-736	EA		1	SEE GRP 6702						
0961	X2	D			NUT: ILLUMINATION COVER AXIS TO ALIDADE	89905	NT1-669	EA		1				*	*	5	16
0962	X2	D		6675-413-2427	SCREW: COVER TO AXIS	89905	EA4-1-7X3-5	EA		2				*	*	5	5
0963	X2	D			SCREW: STOP, COVER	89905	DIN927-2X2	EA		1				*	*	5	17
0964	X2	D			SCREW, MACHINE: COVER TO MIRROR	89905	CB23-2X2-2	EA		2				*	*	5	1
0965	X2	D			SCREW, MACHINE: WINDOW COVER	89905	DIN921-3X4	EA		2				*	*	5	19
0966	X2	D			WINDOW: LEVEL COVER	89905	T16-312	EA		1	SEE GRP 6702						
0967	X2	D			WINDOW: LEVEL COVER	89905	T16-313	EA		1	SEE GRP 6702						

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/OCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
0968	X2	D			TRIBRACH ASSEMBLY: THEODOLITE	89905	XT16-121A	EA		1							
0969	X2	F			FOOTSCREW ASSEMBLY: TRIBRACH	89905	XT16-109	EA		3	*	*	*	**	**	22	
0970	X2	F			COVER: FOOTSCREW	89905	NT2-164A	EA		3	*	*	*	**	**		
0971	X1			6675-413-2441	FOOTSCREW ASSEMBLY	89905	NT2-160-1618	EA		3						22	28
0972	X1				KNOB: FOOTSCREW	89905	NT1-530	EA		3						22	19
0973	X1				NUT: FOOTSCREW	89905	NT2-163B	EA		3						22	20
0974	X1				SCREW, LEVELING	89905	CB1-3LX4-7	EA		3						22	21
0975	X2	F			LEVEL ASSEMBLY: CIRCULAR	89905	XT16-150A	EA		1	SEE GRP 6718					22	26
0976	X2	D			LOCK: STOP SPRING LEVEL	89905	T16-260	EA		1							
0977	X2				NUT: BASE PLATE	89905	T16-25	EA		1				*	*	22	9
0978		D		5305-378-9548	SCREW, HORIZONTAL CIRCLE AND AXLE: LEVEL ATTACHING											22	8
0979	X2	D		6675-805-3156	SCREW, INSTRUMENT: STOP MTG	89905	DIN84-3X7	EA		3				*	*		
0980		D		5305-378-9274	SCREW, LEVELING: FOOTSCREW LOCK	89905	EA2-2-6X3-5	EA		2				*	*		
0981		D		5305-420-9619	SCREW, MACHINE: STOP LOCK MTG	89905	CD9-3X5-5	EA		3				*	*	22	22
0982		D		5305-378-9539	SCREW, OPTICAL PLUMBING DEVICE: STOPNUT	89905	CA11-2-6X5-5	EA		2				*	*	22	23
0983	X2	D			SETSCREW: FOOTSCREW	89905	DIN553-2X3	EA		1				*	*	22	18
0984	X2	D		6675-404-4533	SPRING: LOCKING	89905	DIN553-3X5	EA		3				*	*	22	28
0985	X2	D			STARPLATE ASSEMBLY	89905	T16-22-23-24	EA		1				*	*	22	24
0986	X2	D			NUT: LOCK, SPRING PLATE	89905	XT16-110A	EA		1				*	*	22	7
0987	X2	D			NUT: SPRING PLATE	89905	T1A94	EA		1				*	*	22	
0988	X2	D			NUT: STOP, TRIBACH	89905	T1-23	EA		1				*	*	22	16
0989	X2	D			PAD: FOOTSCREW	89905	T1A95	EA		1				*	*	22	10
0990	X1				PLATE: BASE	89905	T0-63A	EA		1				*	*	22	14
0991	X2	D			PLATE: SPRING	89905	T1A91	EA		3				*	*	22	15
0992		D		5305-956-7036	SCREW	89905	T1A92	EA		1				*	*	22	12
0993		D		5305-429-2617	SETSCREW: SPRING PLATE NUT	89905	DIN553-1-7X1-2	EA		1				*	*	22	11
0994	X2	D			STOP: SPRING LEVER	89905	DIN553-2X2-5	EA		1				*	*	22	13
0995	X2	D			TRIBACH: THEODOLITE	89905	T16-27	EA		1				*	*	22	17
0996	X2	F			WASHER, SPRING	89905	T16-21A	EA		1				*	*	22	23
0997						89905	NT1-536	EA		1	SEE GRP 6718			*	*	22	5
					6718 - COMPASS AND LEVEL												
0998	P	O	H	6675-887-5561	COMPASS ASSEMBLY, DIRECTIONAL	89905	XT16-118AMIL	EA		1							
0999	X2	H			BASE: COMPASS BODY	89905	T16-781	EA		1	*	*	2	10	50		
1000	P	F		6675-560-5461	BEARING ASSEMBLY	89905	B3-108T16-574	EA		1	*	*	2	10	50	24	4
1001	X1				BEARING: NEEDLE SCREW	89905	B3-108	EA		1	*	2	2	15	50	24	31
1002	X1				HOUSING	89905	T16-574	EA		1						24	45
1003	X2	H			SPRING	89905	T16-577	EA		1						24	47
1004	X2	H			BRIDGE ASSEMBLY	89905	XT16-166	EA		1	*	*	*	*	*		
1005	X2	H			BRIDGE: COMPASS EYEPIECE	89905	T16-591	EA		1	*	*	*	*	*		
1006	X2	H			BRIDGE: COMPASS TO ALIDADE	89905	T16-792	EA		1	*	*	*	*	*		
1007		H		5305-378-9535	SCREW, AXLE TELESCOPE AND CLAMP	89905	DIN553-2-6X4	EA		2	*	*	*	*	*	24	37
1008	X2	H			BUSHING: CAGING LOCK	89905	T16-803	EA		1	*	*	*	*	*	24	19
																24	26

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER. 100 EQUIP. CTYGCY. PLANNING	(9) DEPOT MAINT. ALW. PER. 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1009	X2	H			BUSHING: NEEDLE BEARING HOUSING	89905	T16-575	EA		1	*	*	*	*	*	28	2
1010	X2	H		6675-962-4522	CIRCLE, COMPASS	89905	T16-801TB	EA		1	*	*	*	*	*	28	5
1011	X2	H			COVER: LEG PIN	89905	T16-797	EA		2	*	*	*	*	*	28	17
1012	X2	H			DISK, DAMPING: COMPASS	89905	T16-800	EA		1	*	*	*	*	*	28	50
1013	X2	H			EYEPIECE ASSEMBLY: COMPASS	89905	XT16-165	EA		1	*	*	*	*	*		
1014	X2	H		6675-404-4494	LENS ASSEMBLY	89905	T0-195AT16-591	EA		1	*	*	*	*	*		
1015	X1				HOUSING: EYEPIECE	89905	T0-196A	EA		1						28	40
1016	X1				KNOB: COMPASS EYEPIECE	89905	T0-199	EA		1						28	41
1017	X1				LENS: EYEPIECE	89905	T0-197A	EA		1						28	39
1018	X1				LENS ASSEMBLY	89905	T0197A199	EA		1							
1019	X2	H			HOUSING: COMPASS BODY	89905	T16-794G	EA		1	*	*	*	*	*	28	35
1020	X2	H			HOUSING: COMPASS WINDOW	89905	T16-584	EA		1	*	*	*	*	*	28	68
1021	X2	H			HOUSING: COMPASS WINDOW	89905	T16-586	EA		1	*	*	*	*	*	28	1
1022	X2	H			KNOB: COMPASS CAGING LOCK	89905	T16-805	EA		1	*	*	*	*	*	28	28
1023	X2	H			KNOB: COMPASS HOUSING LOCK	89905	T16-809	EA		1	*	*	*	*	*	28	32
1024	X2	H			KNOB: LOCK, COMPASS LEG	89905	T16-790	EA		2	*	*	*	*	*	28	12
1025	X2	H			LEG: COMPASS, PLAIN SUPPORT	89905	T16-786	EA		1	*	*	*	*	*	28	25
1026	X2	H			LEG: COMPASS TO BRIDGE SUPPORT	89905	T16-787	EA		1	*	*	*	*	*	28	10
1027	X2	H			LENS: COMPASS EYEPIECE	89905	T0-195A	EA		1	*	*	*	*	*	28	66
1028	X2	H		6675-962-4523	NEEDLE, COMPASS	89905	T16-802	EA		1	*	*	*	*	*	28	44
1029	X2	H			NUT: NEEDLE SCREW SLEEVE	89905	T16-784	EA		1	*	*	*	*	*	28	23
1030	X2	H			NUT, LOCK: NEEDLE SCREW BUSHING	89905	B3-27	EA		1	*	*	*	*	*	28	49
1031	X2	H		6675-446-1969	PIN: COMPASS CAGING LOCK KNOB TO LOCK SCREW	89905	VSM12770-1X10	EA		1	*	*	*	*	*	28	62
1032	X2	H			PIN: COMPASS LEG	89905	T16-788	EA		2	*	*	*	*	*	28	15
1033	X2	H		6675-411-2053	PIN: COMPASS LEG ATTACHING	89905	VSM12771-4X32	EA		2	*	*	*	*	*	28	22
1034	X2	H		6675-411-2053	PIN: COMPASS LEG ATTACHING	89905	VSM12771-4X32	EA		2	*	*	*	*	*	28	24
1035	X2	H		6675-446-1972	PIN: COMPASS LEG MTG	89905	VSM12770-1X8	EA		2	*	*	*	*	*	28	11
1036	X2	H		6675-446-1970	PIN: LEG PIN STOP RING	89905	VSM12770-1X6	EA		2	*	*	*	*	*	28	13
1037	X2	H			PIN: LOCK KNOB, CAGING	89905	T16-808	EA		1	*	*	*	*	*	28	63
1038	X2	H			PIN: SCREW, COMPASS CAGING LOCK	89905	T16-804	EA		1	*	*	*	*	*	28	30
1039	X2	H		6675-953-0028	PRISM: COMPASS READING	89905	T16-583TA	EA		1	*	*	*	*	*	28	69
1040	X2	H			RING, INDEX: COMPASS	89905	T16-795QB	EA		1	*	*	*	*	*	28	8
1041	X2	H			RING, LOCK: COMPASS HOUSING	89905	T16-587	EA		1	*	*	*	*	*	28	42
1042	X2	H			RING, LOCK: NEEDLE BEARING HOUSING SLEEVE	89905	T16-576	EA		1	*	*	*	*	*	28	48
1043	X2	H			RING, STOP: COMPASS LEG PIN	89905	T16-789	EA		2	*	*	*	*	*	28	14
1044	X2	H			SCREW: CAGING LOCK	89905	T16-588	EA		1	*	*	*	*	*	28	55
1045	X2	H			SCREW: LEVEL ADJUSTING, COMPASS LEG	89905	CD10-3X12	EA		2	*	*	*	*	*	28	21
1046	X2	H			SCREW: NEEDLE SCREW SPRING	89905	T16-811	EA		1	*	*	*	*	*	28	56
1047		H		5305-378-9252	SCREW, AXLE BEARING AND MICROMETER: COMPASS HOUSING TO BASE	89905	CBZ7-3X3-8	EA		3	*	*	*	*	*	28	36

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY/GCY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1048		H		5305-378-9538	SCREW, HORIZONTAL BASE: LEG PIN LOCK	89905	DIN553-2X2	EA		2	*	*	*	*	*	25	54
1049	X2	H			SCREW, HORIZONTAL CIRCLE AND AXLE: LEG SLEEVE AND CAGING LOCK	89905	DIN553-2X4	EA		5	*	*	*	*	*	25	20
1050		H		5305-378-9228	SCREW, HORIZONTAL CIRCLE AND AXLE PRISM MOUNTING	89905	AB2-2X1-3	EA		1	*	*	*	*	*	25	67
1051		O		5305-786-5222	SCREW, INSTRUMENT: COMPASS NEEDLE	89905	T16-595P	EA		1	*	*	*	*	*	25	7
1052		H		5305-560-6330	SCREW, MACHINE: BALANCE WEIGHT	89905	DIN85-1-7X2-5	EA		4	*	*	*	*	*	25	3
1053	X2	H			SCREW, MACHINE: COMPASS BASE	89905	DIN85-3X8	EA		3	*	*	*	*	*	25	60
1054	X2	H			SCREW, MACHINE: COMPASS BASE ATTACHING	89905	DIN84-2X3	EA		3	*	*	*	*	*	25	61
1055	X2	H			SCREW, MACHINE: COMPASS CAGING LOCK BRIDGE	89905	DIN920-3X6	EA		2	*	*	*	*	*	25	33
1056	X2	H			SCREW, MACHINE: COMPASS LOCK STOP CAGING	89905	CA4-1-7X4	EA		1	*	*	*	*	*	25	29
1057		H		5305-425-1202	SCREW, MACHINE: COMPASS OUTER HOUSING TO INNER HOUSING	89905	CB1-2-6X2-7	EA		2	*	*	*	*	*	25	65
1058	X2	H			SCREW, MACHINE: EYEPIECE BRIDGE	89905	DIN85-3X5	EA		3	*	*	*	*	*	25	38
1059	X2	H			SCREW, MACHINE: INDEX RING RETAINING	89905	CB6-2-6X4	EA		3	*	*	*	*	*	25	51
1060	X2	H			SCREW, MACHINE: NEEDLE SCREW SLEEVE LOCK	89905	CBZ2-2X2	EA		1	*	*	*	*	*	25	58
1061		H		5305-378-9269	SCREW, OPTICAL PLUMBING DEVICE: BRIDGE TO ALIDADE	89905	CB6-3X4	EA		2	*	*	*	*	*	25	18
1062	X2	H			SETSCREW: COMPASS LEG	89905	AB3-2-6X5	EA		4	*	*	*	*	*	25	53
1063	X2	H			SLEEVE: COMPASS BASE	89905	T16-785	EA		1	*	*	*	*	*	25	52
1064	X2	H			SLEEVE: COMPASS HOUSING LOCK	89905	T16-810	EA		1	*	*	*	*	*	25	34
1065	X2	H			SLEEVE: COMPASS NEEDLE SCREW	89905	T16-782	EA		1	*	*	*	*	*	25	6
1066	X2	H			SLEEVE: LEG PIN	89905	T16-791	EA		2	*	*	*	*	*	25	16
1067	X2	H			SLEEVE: NEEDLE PIVOT PIN	89905	T16-593	EA		1	*	*	*	*	*	25	57
1068	X2	H			SPRING: HOUSING	89905	T16-783	EA		1	*	*	*	*	*	25	9
1069	X2	H			SPRING: NEEDLE SCREW	89905	T16-796	EA		1	*	*	*	*	*	25	59
1070	X2	H			SPRING, HELICAL, TORSION: CAGING LOCK	89905	T16-806A	EA		1	*	*	*	*	*	25	27
1071	X2	H			WASHER: BALANCE WEIGHT	89905	B3-74	EA		4	*	*	*	*	*	25	4
1072	X2	H			WASHER: COMPASS HOUSING LOCK	89905	T16-807	EA		1	*	*	*	*	*	25	64
1073	X2	H			WEIGHT: NEEDLE BALANCE	89905	B3-60	EA		4	*	*	*	*	*	25	46
1074	X2	H		6675-991-6455	WINDOW: COMPASS COVER	89905	T16-585	EA		1	*	*	*	*	*	25	43
1075	X2	F			LEVEL ASSEMBLY	89905	XT16-150A	EA		1	*	*	*	*	*		
1076	X1				BASE: LEVEL	89905	NT1-535	EA		1							
1077	X1				HOUSING: LEVEL	89905	B3-92	EA		1							
1078	X1			6675-996-1725	LEVEL: CIRCULAR	89905	T21-232	EA		1							
1079		D		5305-378-9532	SCREW, HORIZONTAL BASE	89905	DIN553-1-7X2	EA		1				*	*		
1080	X2	F			SCREW, HORIZONTAL CIRCLE AND AXLE: LEVEL ATTACHING	89905	DIN84-3X7	EA		3	*	*	*	*	*	22	12
																22	6

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CY/CY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1081	X2F				WASHER: SPRING	89905	NT1-536	EA		1	*	*	*	*	*	22	4
1082					GROUP 95 - GENER . USE STANDARDIZED PARTS												
1083					9501 - BULK MATERIAL												
1084	P	O		8330-965-1722	CHAMOIS LEATHER, SHEEP SKIN			EA		1	*	*	*	10	50		
1085	P	O		4020-270-1659	CORD, LINEN			FT			*	*	*	500	200		

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-80	(c) 81-100	(8) 1-YR. ALW. PER 100 EQ/IP. CTY/QTY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1086					SECTION 6 - SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE PART I												
1088					GROUP 26 - TOOLS AND TEST EQUIPMENT												
1089					2604 - SPECIAL TOOLS												
1090	P	O		6675-353-4105	PIN, CASE: CAPSTAN ADJUSTING SCREW	09905	3A55	EA		2	*	2	2	20	100	26	12
1091	P	O		5120-376-9520	WRENCH, TRIPOD	09905	3A29	EA		1	*	*	2	10	50	26	2

LINE NO.	(1) SOURCE, MAINT. AND REC'D. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS, GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTYCTY. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR SYM. NO.
1092					SECTION 6 - SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE PART II												
1093					GROUP 26 - TOOLS AND TEST EQUIPMENT												
1094					2604 - SPECIAL TOOLS												
1095	P	O		5120-180-0705	SCREWDRIVER, FLAT TIP			EA		1	*	*	2	10	50	3	15
1096	P	O		5120-378-9303	SCREWDRIVER, FLAT TIP	89905	1441-3	EA		1	*	*	2	10	50	3	14

LINE NO.	(1) SOURCE, MAINT. AND RECOV. CODE (a) SOURCE	(b) MAINT.	(c) RECOV.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	MANUFACTURER'S CODE	MANUFACTURER'S PART NUMBER	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS/GS MAINT. ALW. (a) 1-20	(b) 21-50	(c) 51-100	(8) 1-YR. ALW. PER 100 EQUIP. CTY DCTV. PLANNING	(9) DEPOT MAINT. ALW. PER 100 EQUIP.	(10) ILLUSTRATION (a) FIG. NO.	(b) ITEM OR STA. NO.
1097					SECTION 6 - SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE PART III												
1098					GROUP 26 - TOOLS AND TEST EQUIPMENT												
1099					2604 - SPECIAL TOOLS												
1100	P	O		5120-429-2948	SCREWDRIVER	89905	HDW1-5	EA		1	*	*	2	10	50	3	13
1101	P	O		5120-446-2660	SCREWDRIVER	89905	HDW1-10	EA		1	*	*	2	10	50	3	14

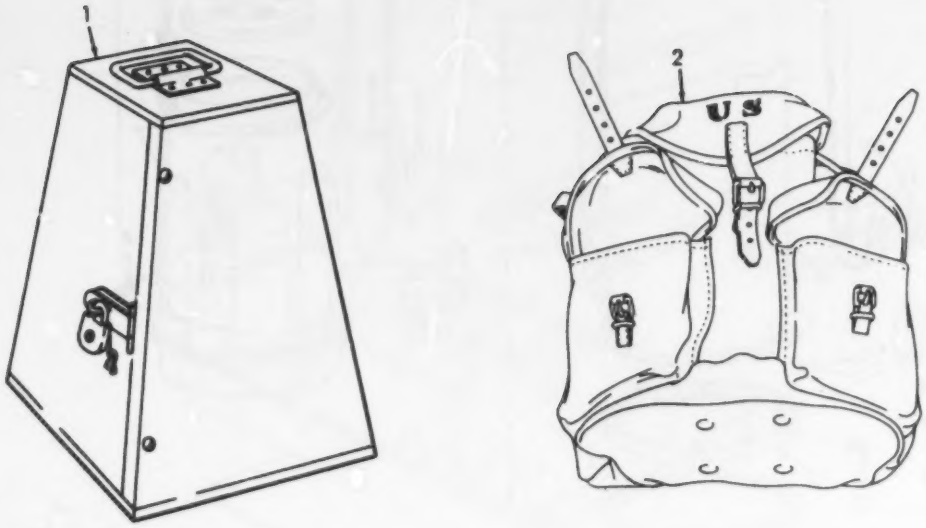

EMC 8875-200-15P/28

Figure 1. Shipping Case and Field Pack.

INDEX TO PARTS FIGURE 1

REF NO.	FUNCT GROUP	ITEM NAME
1	1808	CASE
2	1808	HAVER SACK

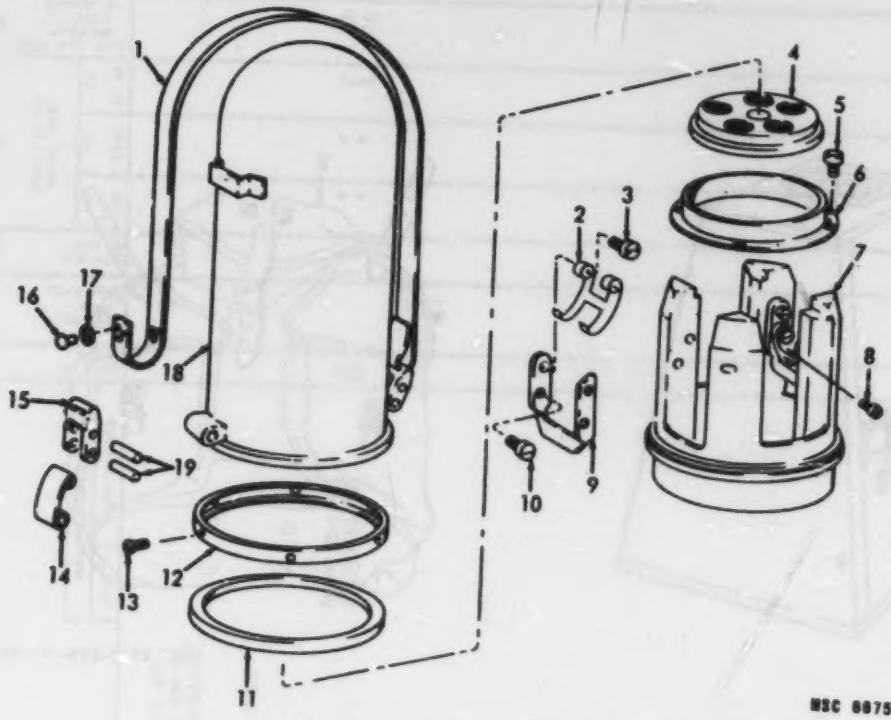

NSC 6675-208-25P/2

Figure 2. Theodolite Hood and Base.

INDEX TO PARTS. FIGURE 2

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	1808	BOLT	11	1808	WASHER
2	1808	HOOK	12	1808	COLLAR
3	1808	SCREW	13	1808	SCREW
4	1808	CONTAINER	14	1808	SPRING
5	1808	SCREW	15	1808	LEVER
6	1808	PLATE	16	1808	RIVET
7	1808	BASE	17	1808	WASHER
9	1808	LEVER	18	1808	HOOD
10	1808	SCREW	19	1808	PIN

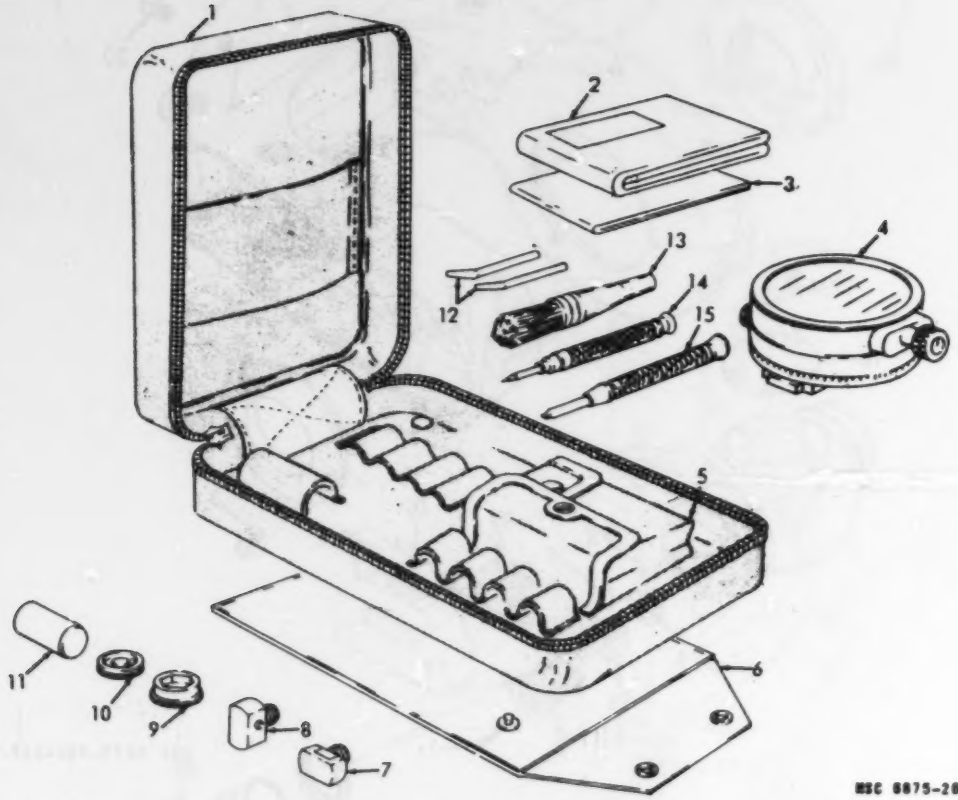

MSC 6875-200-25P/3

Figure 3. Accessories and Case.

INDEX TO PARTS, FIGURE 3

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	2202	CASE	9	6702	SUNGLASS AY
2	2202	COVER	10	6702	LENS
3	2202	CHAMOIS	11	2202	CONTAINER
4	6718	COMPASS AY	12	2202	PIN
5	2202	HOLDER	13	2202	BRUSH
6	2292	BAG	14	2202	SCREWDRIVER
7	6702	PRISM AY	15	2202	SCREWDRIVER
8	6702	PRISM AY			

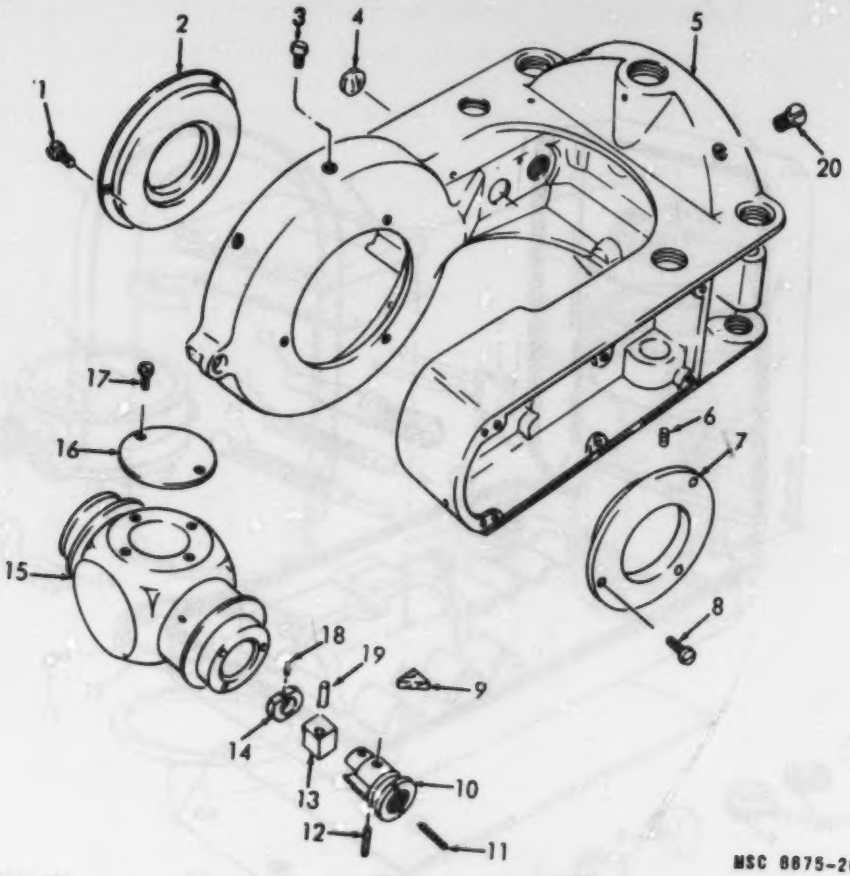

MSC 8675-200-25P/4

Figure 4. Alidade.

INDEX TO PARTS, FIGURE 4

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6701	SCREW	11	6701	SCREW
2	6701	BEARING	12	6701	SETSCREW
3	6709	SCREW	13	6702	MOUNT
4	6702	WINDOW	14	6701	FRAME
5	6709	U STANDARD	15	6701	AXIS
6	6701	SETSCREW	16	6701	COVER
7	6701	BEARING	17	6701	SCREW
8	6701	SCREW	18	6701	SCREW
9	6702	PRISM	19	6701	PIN
10	6701	SLEEVE	20	6702	SCREW

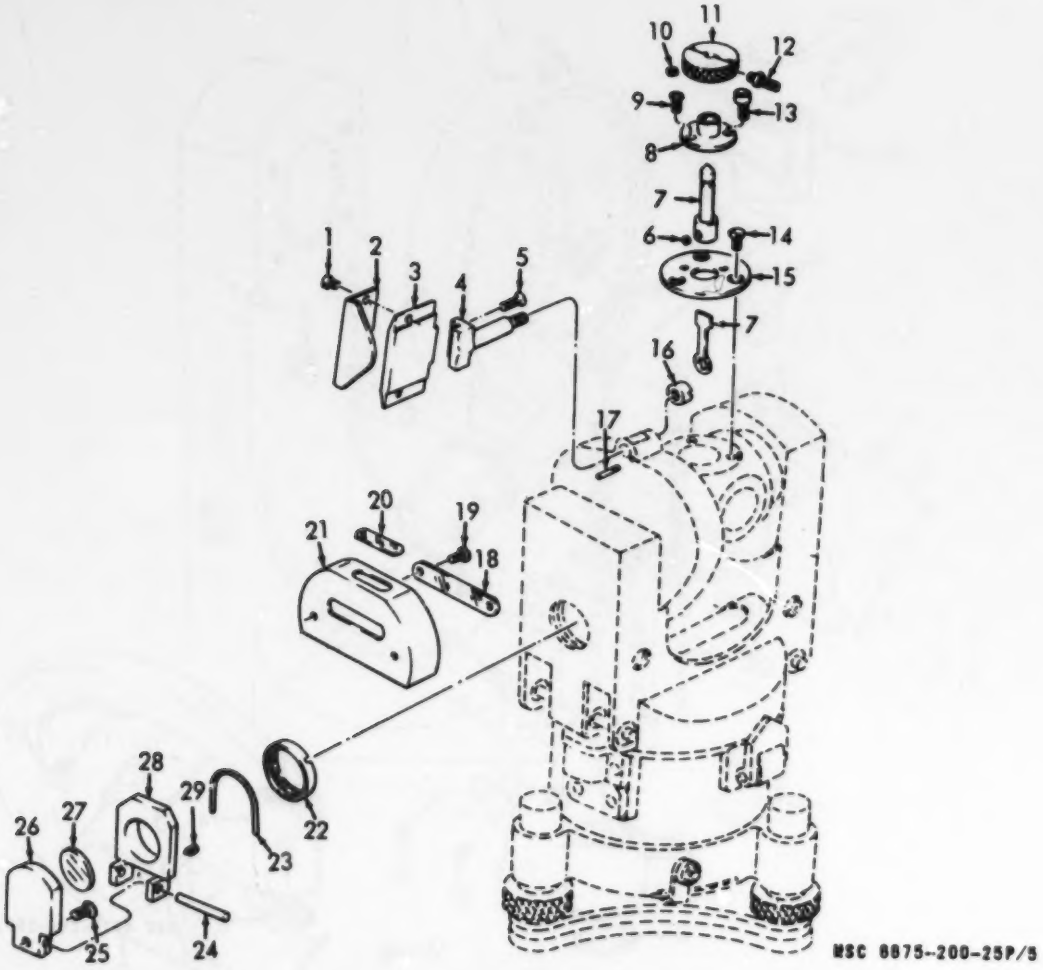

Figure 5. Collumation Level Cover and Illumination Mirror.

INDEX TO PARTS, FIGURE 5

REF NO.	FUNCT GROUP	ITEM NAME
1	6709	SCREW
2	6709	COVER
3	6702	MIRROR
4	6709	AXIS
5	6709	SCREW
6	6701	SETSCREW
7	6702	MIRROR
8	6701	BEARING
9	6701	SCREW
10	6701	SCREW
11	6701	KNOB
12	6701	STOP
13	6701	SCREW
14	6701	SCREW
15	6701	COVER
16	6709	NUT
17	6709	SCREW
18	6702	WINDOW
19	6709	SCREW
20	6702	WINDOW
21	6709	COVER
22	6702	BUSHING
23	6702	CLIP
24	6702	PIN
25	6702	SCREW
26	6702	HOUSING
27	6702	MIRROR
28	6702	SLEEVE
29	6702	SETSCREW

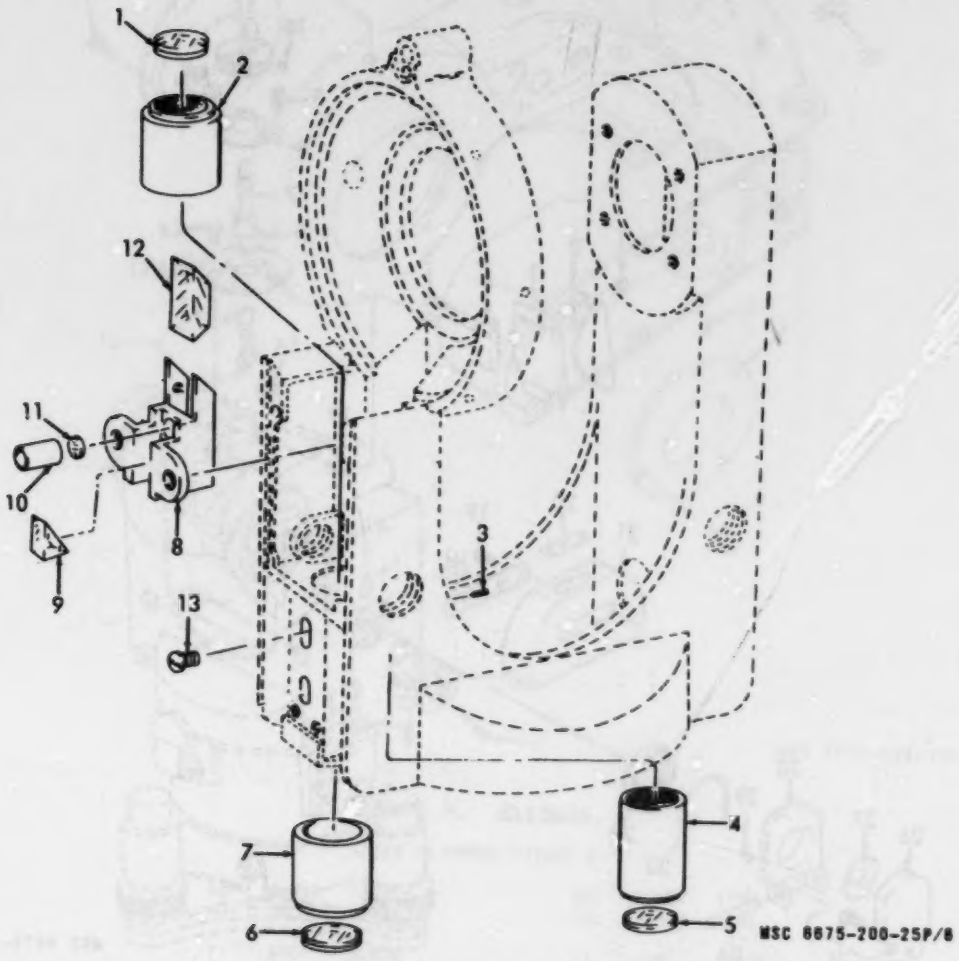

Figure 6. Alidade Lens and Mounts.

INDEX TO PARTS, FIGURE 6

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6702	LENS	8	6702	MOUNT
2	6702	MOUNT	9	6702	PRISM
3	6703	SETSCREW	10	6702	HOUSING
4	6702	MOUNT	11	6702	LENS
5	6702	LENS	12	6702	PRISM
6	6702	LENS	13	6702	SCREW
7	6702	MOUNT			

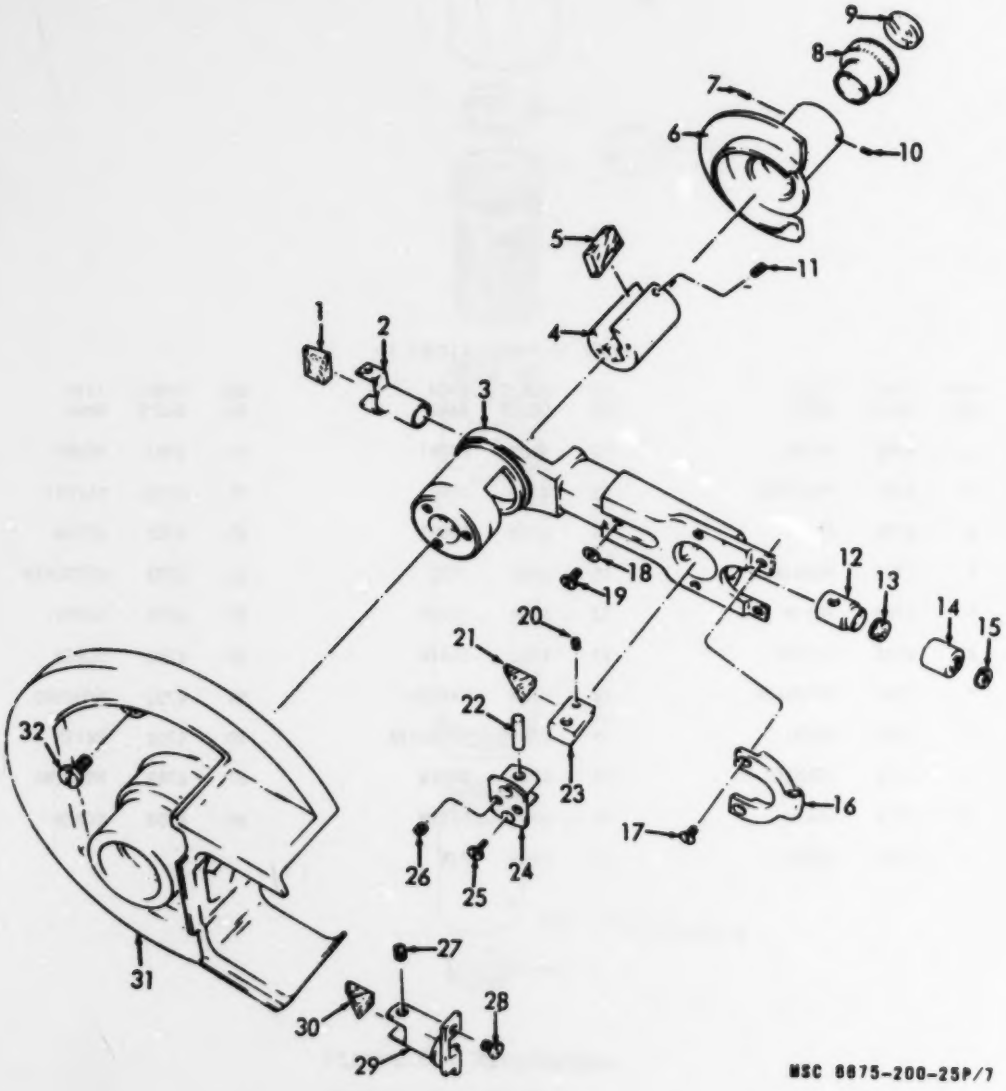

Figure 7. Vertical Collimation Prism, and Housings.

INDEX TO PARTS, FIGURE 7

REF NO.	FUNCT GROUP	ITEM NAME
1	6702	PRISM
2	6702	HOUSING
3	6709	SHELL
4	6702	HOUSING
5	6702	PRISM
6	6709	SLEEVE
7	6709	SETSCREW
8	6702	MOUNT
9	6702	VERNIER
10	6709	SCREW
11	6709	SCREW
12	6702	MOUNT
13	6702	LENS
14	6702	MOUNT
15	6702	LENS
16	6709	LEVER
17	6709	SCREW
18	6709	WASHER
19	6702	SETSCREW
20	6702	SCREW
21	6702	PRISM
22	6702	PIN
23	6702	MOUNT
24	6709	SLEEVE
25	6702	SCREW
26	6709	SETSCREW
27	6709	SCREW
28	6709	SCREW
29	6702	HOUSING
30	6702	PRISM
31	6709	HOUSING
32	6709	SCREW

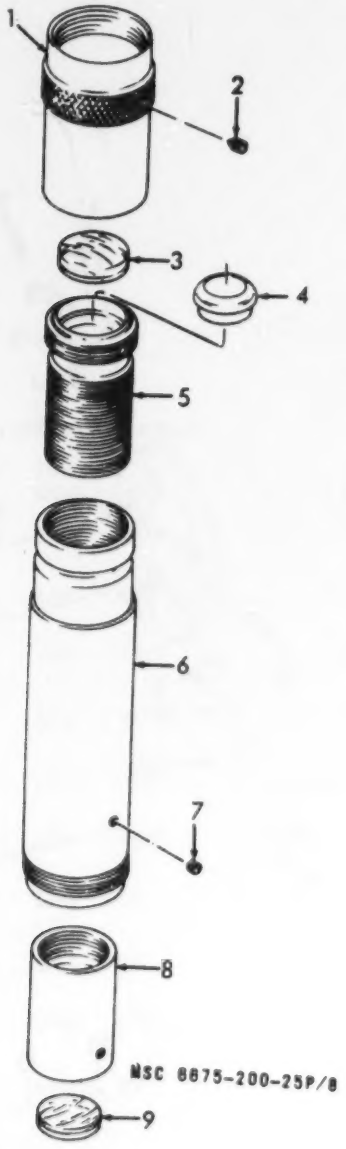

Figure 8. Microscope.

INDEX TO PARTS, FIGURE 8

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6702	TUBE	6	6702	TUBE
2	6702	SETSCREW	7	6702	SETSCREW
3	6702	LENS	8	6702	MOUNT
4	6702	WASHER	9	6702	LENS
5	6702	HOUSING			

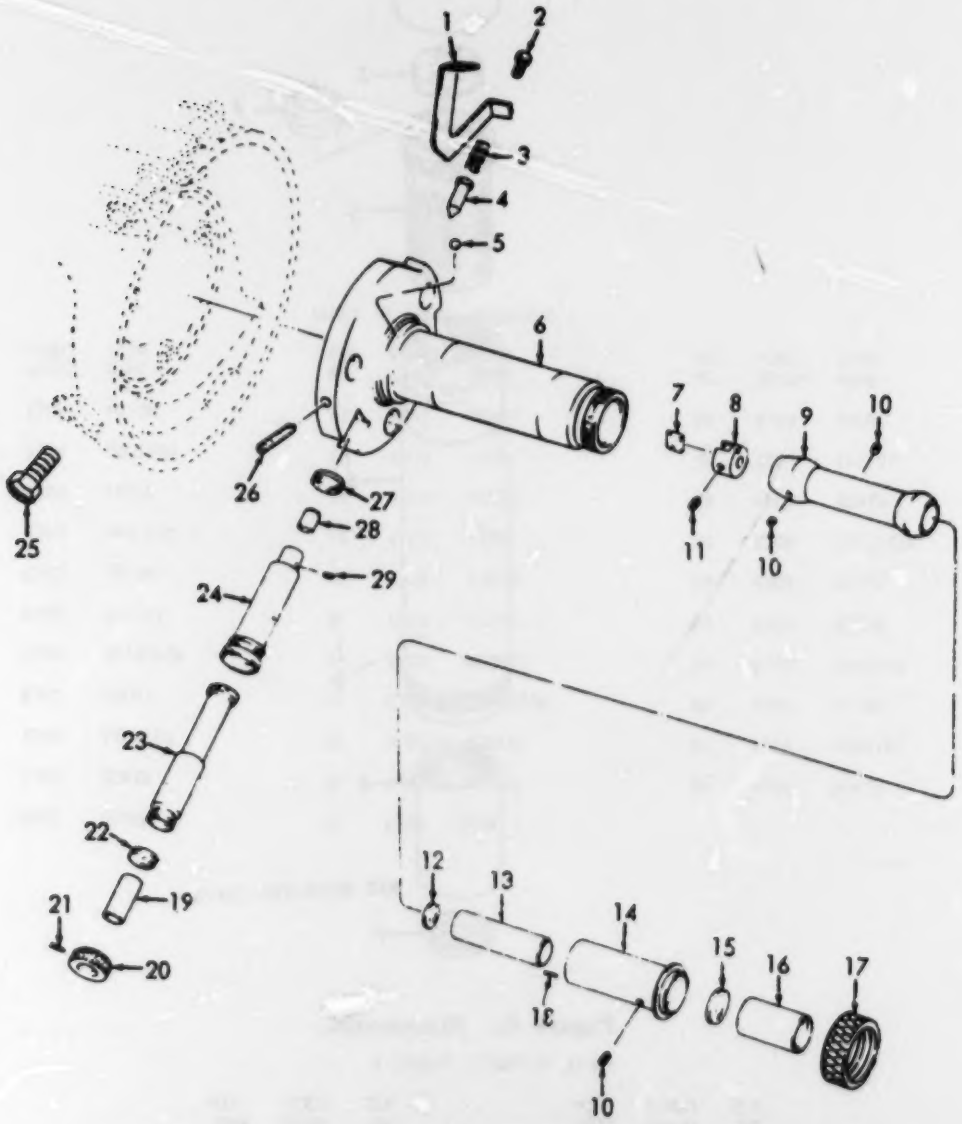

Figure 9. Plumb Device.

INDEX TO PARTS, FIGURE 9

REF NO.	FUNCT GROUP	ITEM NAME
1	6702	STOP
2	6702	SCREW
3	6702	SPRING
4	6702	PIN
5	6703	BALL
6	6703	AXIS
7	6702	PRISM
8	6702	HOUSING
9	6702	SLEEVE
10	6702	SETSCREW
11	6702	SCREW
12	6702	RETICLE
13	6702	MOUNT
14	6702	SLEEVE
15	6702	LENS
16	6702	MOUNT
17	6703	NUT
18	6702	PIN
19	6702	TUBE
20	6702	NUT
21	6702	SCREW
22	6702	LENS
23	6702	TUBE
24	6702	SLEEVE
25	6702	SCREW
26	6702	SCREW
27	6702	LENS
28	6702	HOUSING
29	6702	SCREW

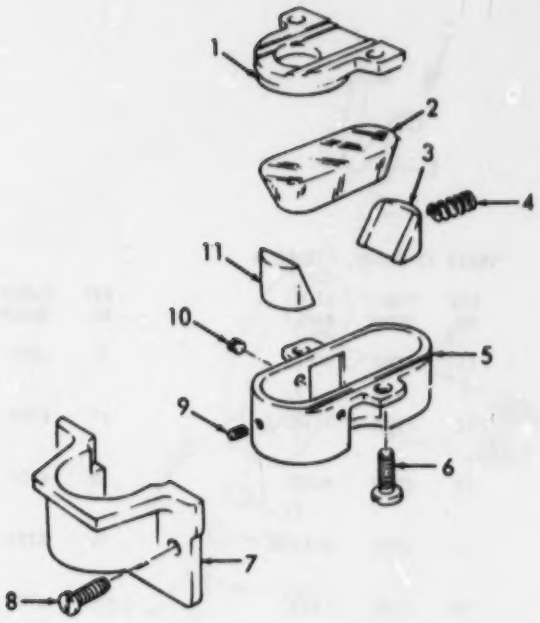

EMC 6675-200-15/27

Figure 10. Horizontal Prisms and Housing.

INDEX TO PARTS, FIGURE 10

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6709	HOUSING	7	6709	COVER
2	6702	PRISM	8	6709	SCREW
3	6702	PRISM	9	6702	SCREW
4	6702	SPRING	10	6702	SETSCREW
5	6702	HOUSING	11	6702	PRISM
6	6702	SCREW			

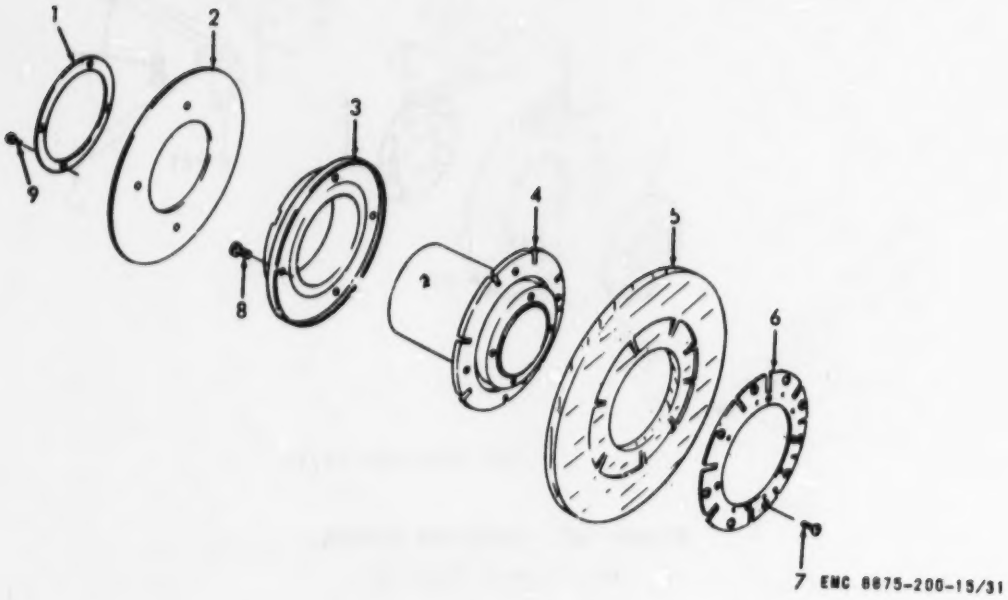

Figure 11. Vertical Axis.

INDEX TO PARTS, FIGURE 11

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6703	WASHER	6	6703	SPRING
2	6703	DISK	7	6703	SCREW
3	6703	BEARING	8	6703	SCREW
4	6703	AXIS	9	6703	SCREW
5	6702	CIRCLE			

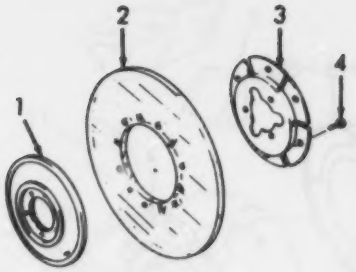

EMC 6675-200-15/41

Figure 12. Vertical Circle.

INDEX TO PARTS, FIGURE 12

REF NO.	FUNCT GROUP	ITEM NAME
1	6703	SLEEVE
2	6702	CIRCLE
3	6703	DISK
4	6703	SCREW

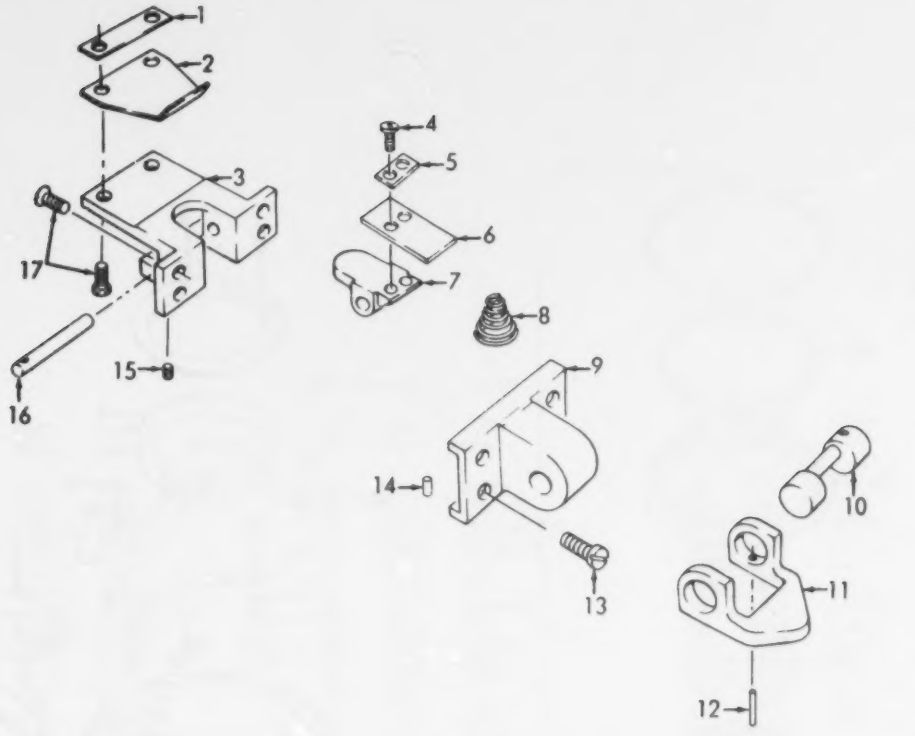

EMC 6675-200-15/25

Figure 13. Horizontal Clamp.

INDEX TO PARTS, FIGURE 13

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6703	PLATE	10	6703	AXIS
2	6703	SPRING	11	6703	LEVER
3	6703	BUSHING	12	6703	PIN
4	6703	SCREW	13	6703	SCREW
5	6703	COVER	14	6703	PIN
6	6703	SPRING	15	6703	SCREW
7	6703	LEVER	16	6703	PIN
8	6703	SPRING	17	6703	SCREW
9	6703	BEARING			

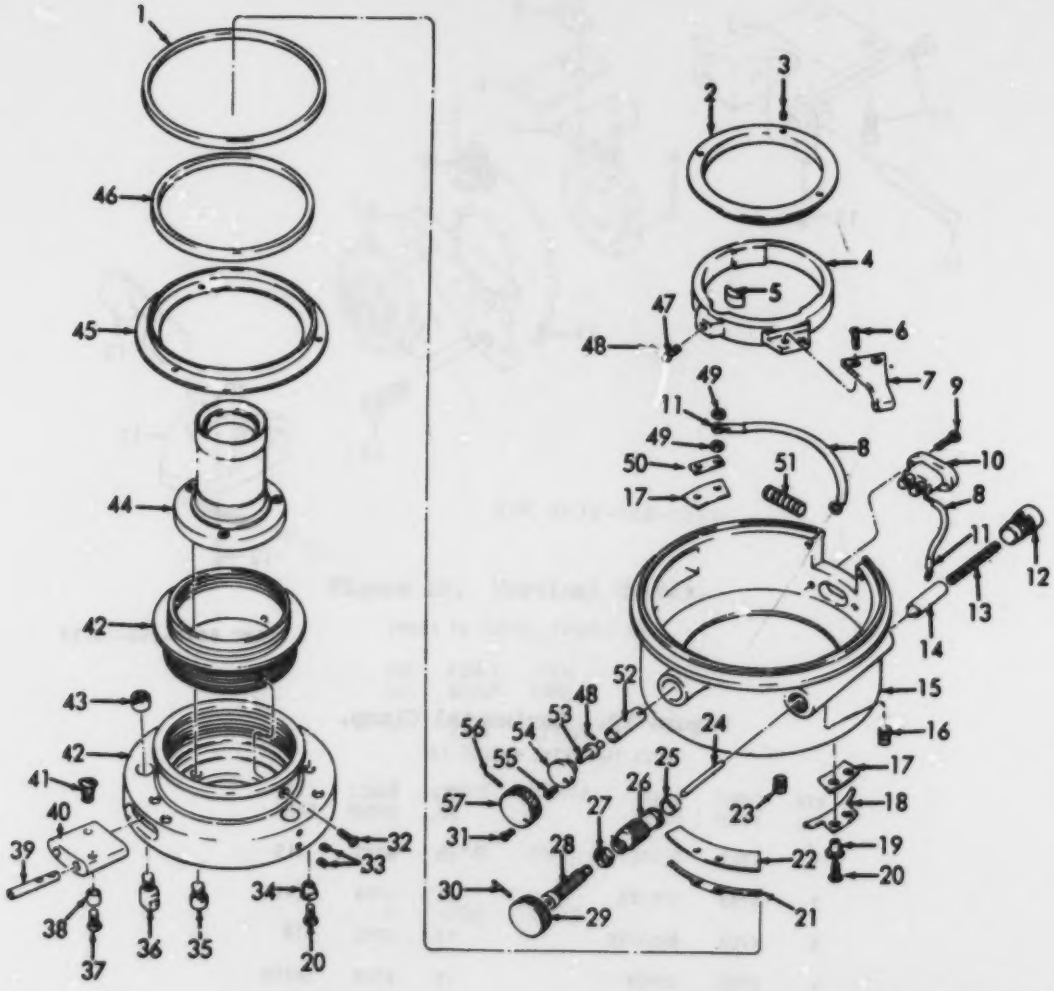

NSC 6875-200-25P/14

Figure 14. Horizontal and Inner Base Housings.

INDEX TO PARTS, FIGURE 14

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6712	RING	20	6703	SCREW	39	6703	BUSHING
2	6703	RING	21	6712	CONTACT	40	6712	PLUG
3	6703	SETSCREW	22	6703	INSULATION	41	6703	SCREW
4	6703	CLAMP	23	6703	SETSCREW	42	6703	BASE AY
5	6703	JAW	24	6703	PIN	43	6703	NUT
6	6703	SCREW	25	6703	NUT	44	6703	AXIS
7	6703	LEVER	26	6703	BUSHING	45	6703	GASKET
8	6717	CABLE	27	6703	NUT	46	6712	RING
9	6703	SCREW	28	6703	SCREW	47	6703	SCREW
10	6712	PLUG	29	6703	KNOB	48	6703	PIN
11	6717	CLIP	30	6703	PIN	49	6703	NUT
12	6703	HOUSING	31	6703	SCREW	50	6703	PLATE
13	6703	SPRING	32	6703	SCREW	51	6703	SETSCREW
14	6703	HOUSING	33	6703	SETSCREW	52	6703	CONNECTOR
15	6703	HOUSING	34	6703	BUSHING	53	6703	PIN
16	6703	SCREW	35	6703	SCREW	54	6703	BUSHING
17	6703	PLATE	36	6703	BOLT	55	6703	SCREW
18	6712	CONTACT	37	6703	SCREW	56	6703	PIN
19	6703	GASKET	38	6703	BUSHING	57	6703	CLAMP KNOB

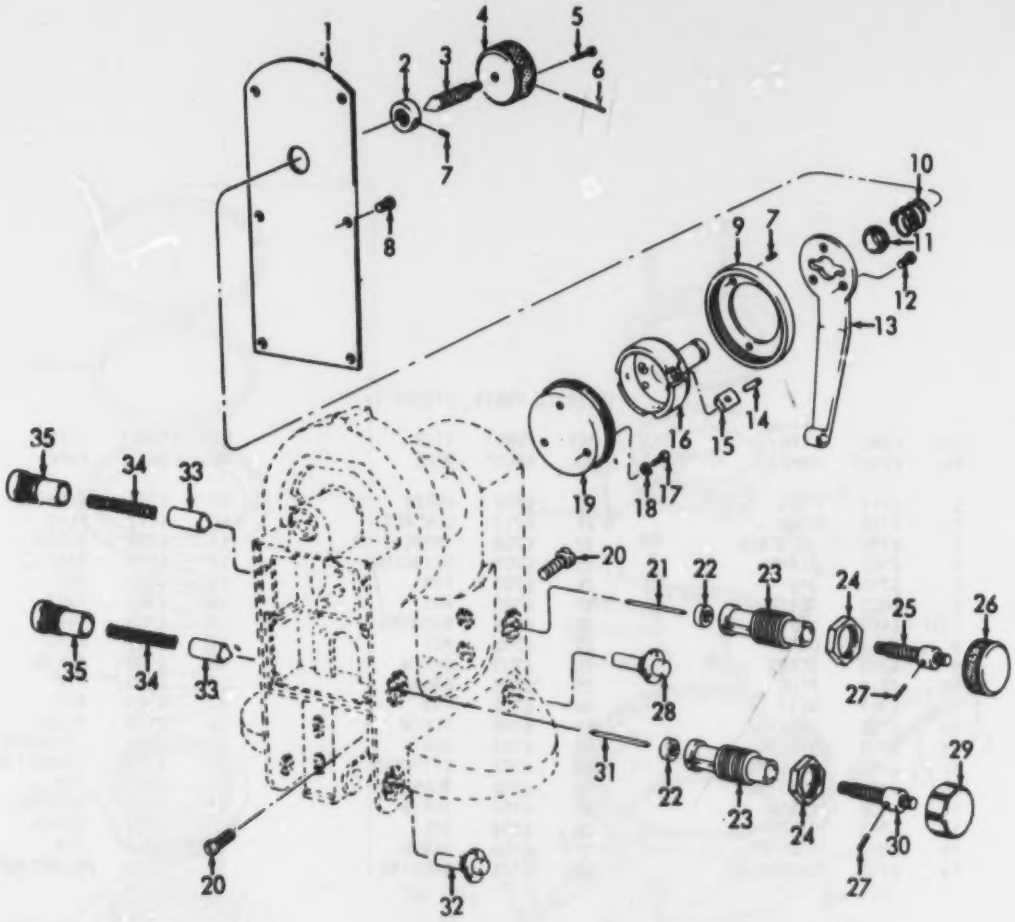

MSC 8875-200-25P/15

Figure 15. Vertical Slow Motion Screw and Clamp.

INDEX TO PARTS, FIGURE 15

REF NO.	FUNCT GROUP	ITEM NAME
1	6703	COVER
2	6703	RING
3	6703	SCREW
4	6703	KNOB
5	6703	SCREW
6	6703	PIN
7	6703	SETSCREW
8	6703	SCREW
9	6703	BUSHING
10	6703	SPRING
11	6703	WASHER
12	6703	SCREW
13	6703	LEVER
14	6703	PIN
15	6703	JAW
16	6703	CLAMP
17	6703	SCREW
18	6703	WASHER
19	6703	HOUSING
20	6703	SCREW
21	78-3	PIN
22	6703	NUT
23	6703	BUSHING
24	6703	NUT
25	6703	SCREW
26	6703	KNOB
27	6703	PIN
28	6703	PIN
29	6703	KNOB
30	6703	SCREW
31	6703	PIN
32	6703	PIN
33	6703	HOUSING
34	6703	SPRING
35	6703	HOUSING

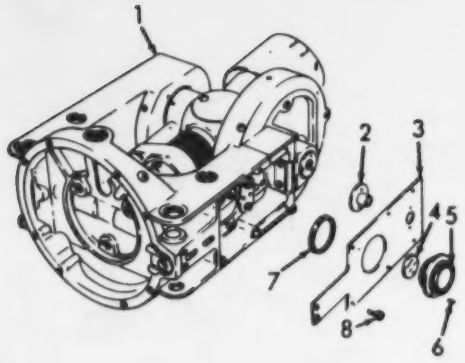

MSC 6875-200-25P/18

Figure 16. "U" Standard and Illumination Light Mounting.

INDEX TO PARTS, FIGURE 16

REF NO.	FUNCT GROUP	ITEM NAME
1	6703	STANDARD AY
2	6703	BUSHING
3	6703	COVER
4	6702	WINDOW
5	6703	MOUNT
6	6703	SETSCREW
7	6703	NUT
8	6703	SCREW

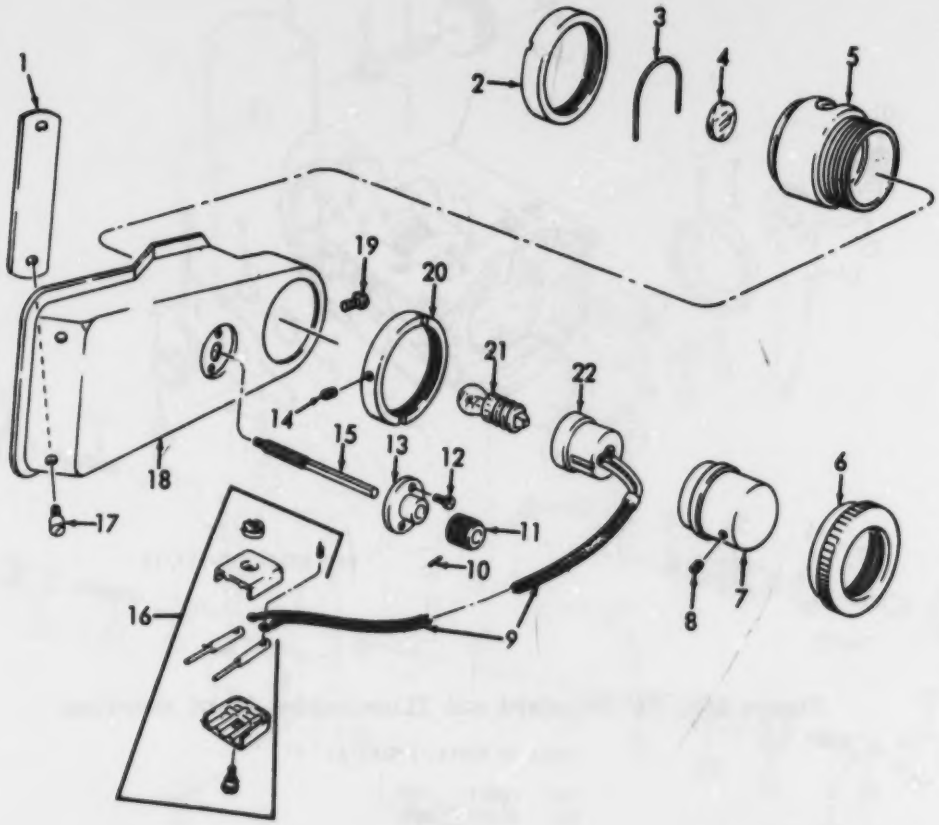

MSC 8875-200-25P/17

Figure 17. Illumination Light.

INDEX TO PARTS, FIGURE 17

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6712	MIRROR	9	6712	LEAD	16	6712	CONNECTOR
2	6712	BUSHING	10	6712	PIN	17	6712	SCREW
3	6712	CLIP	11	6712	KNOB	18	6712	COVER
4	6712	LENS	12	6712	SCREW	19	6712	SCREW
5	6712	BUSHING	13	6712	SLEEVE	20	6712	RING
6	6712	NUT	14	6712	SETSCREW	21	6709	LAMP
7	6712	LAMPHOLDER	15	6712	BOLT	22	6712	BUSHING
8	6712	PIN						

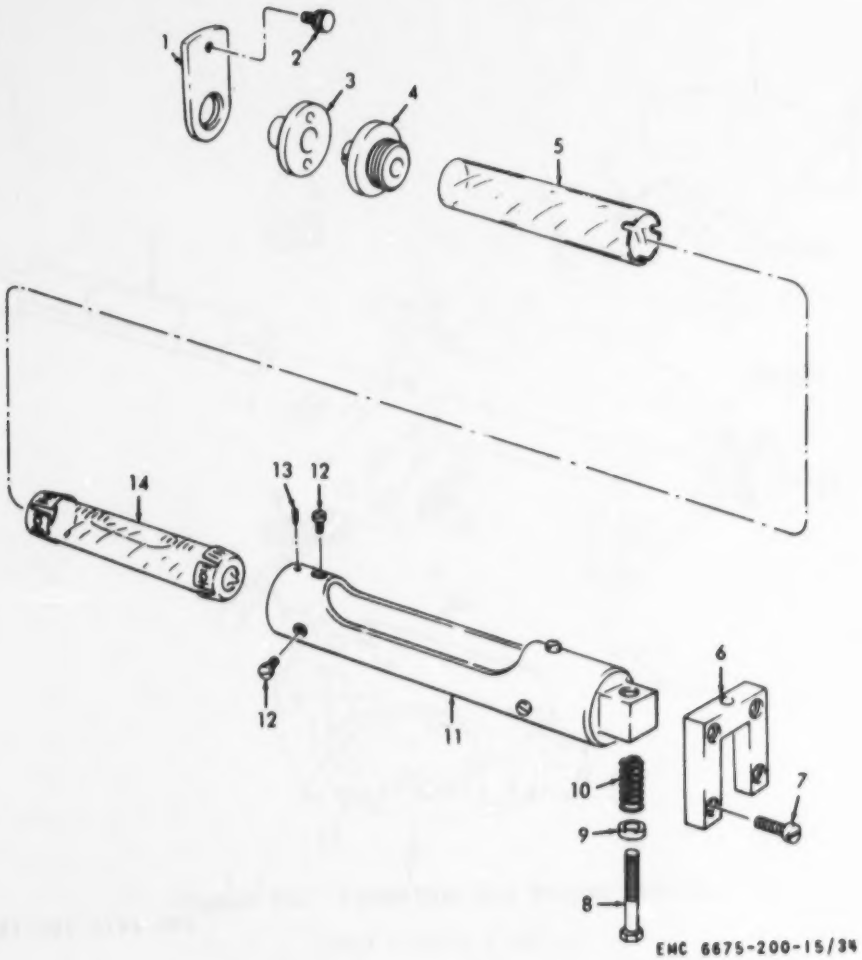

Figure 18. Plate Level.

INDEX TO PARTS, FIGURE 18

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6718	COVER	8	6718	SCREW
2	6718	KNOB	9	6718	WASHER
3	6718	BEARING	10	6718	SPRING
4	6718	SLEEVE	11	6718	TUBE
5	6718	COVER	12	6718	SCREW
6	6718	BEARING	13	6718	SETSCREW
7	6718	SCREW	14	6718	LEVEL

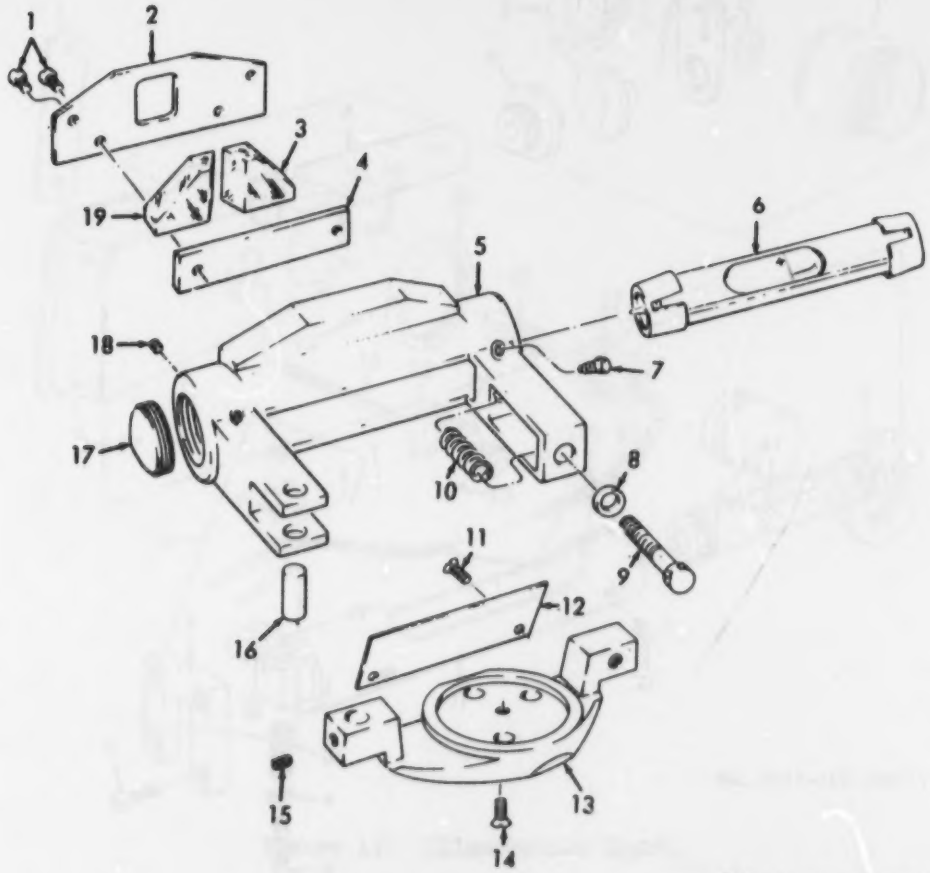

EMC 6675-200-15/37

Figure 19. Vertical Collimation Level.

INDEX TO PARTS, FIGURE 19

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6718	SCREW	11	6718	SCREW
2	6702	PLATE	12	6702	WINDOW
3	6702	PRISM	13	6718	HOUSING
4	6702	PRISM	14	6718	SCREW
5	6718	BEAM	15	6718	SCREW
6	6718	VIAL	16	6718	PIN
7	6718	SCREW	17	6718	COVER
8	6718	WASHER	18	6718	SCREW
9	6718	SCREW	19	6702	PRISM
10	6718	SPRING			

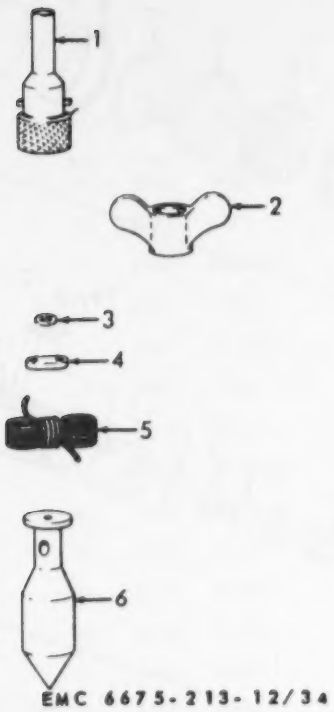

Figure 20. Plumb Bob and Tripod Wrench.

INDEX TO PARTS FIGURE 20

REF NO.	FUNCT GROUP	ITEM NAME
1	2202	TUBE
2	2604	WRENCH
3	2202	RING
4	2202	SLIDE
5	2202	CORD
6	2202	PLUMB BOB

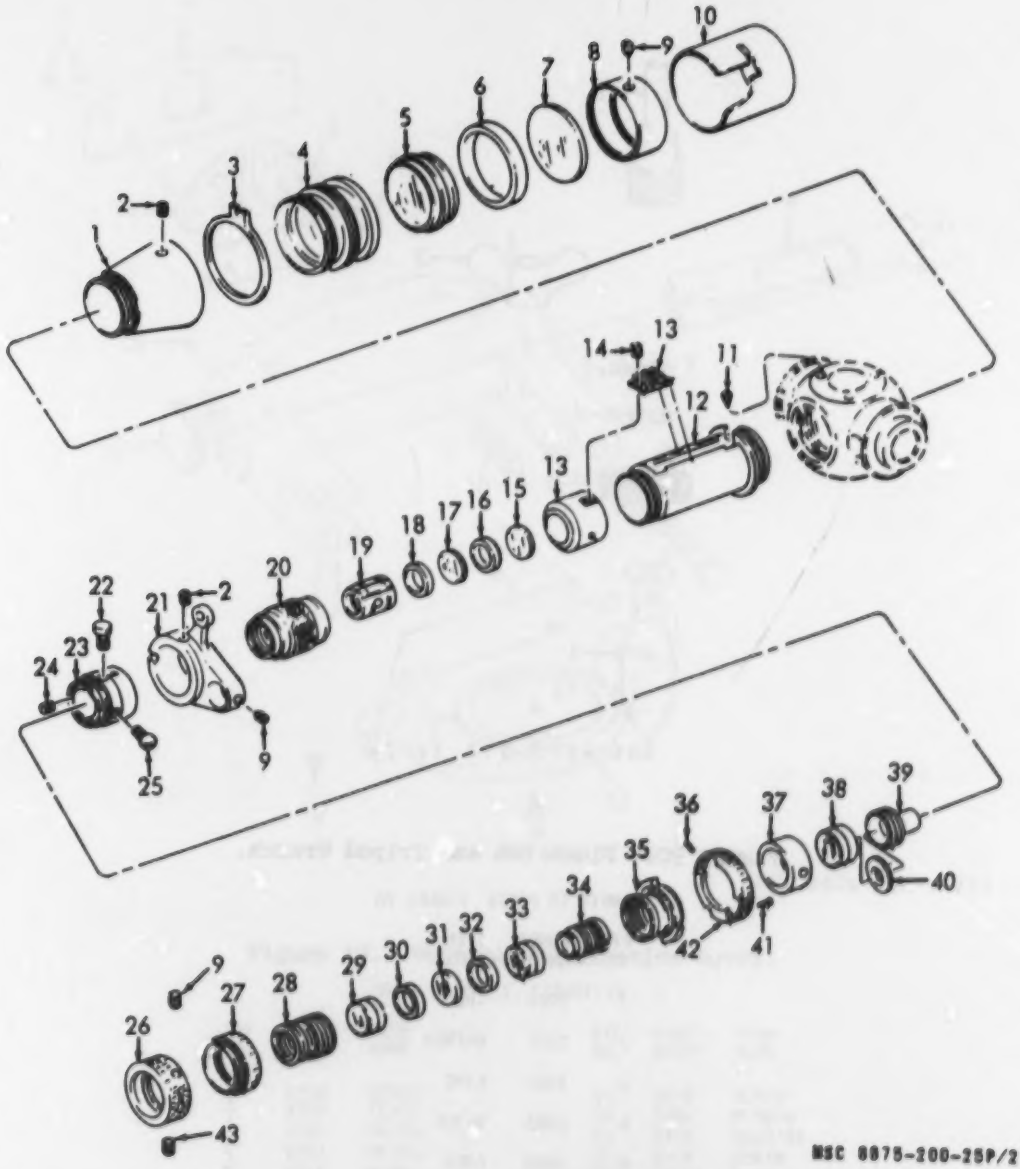

Figure 21. Telescope.

INDEX TO PARTS FIGURE 21

REF NO.	FUNCT GROUP	ITEM NAME
1	6701	TUBE
2	6701	SCREW
2	6702	SCREW
3	6701	WASHER
4	6702	LENS AY
5	6702	HOUSING
6	6702	WASHER
7	6702	LENS
8	6702	RING
9	6702	SETSCREW
10	6702	SUNSHADE
11	6702	SETSCREW
12	6702	HOUSING
13	6702	SEGMENT
14	6702	SCREW
15	6702	LENS
16	6702	WASHER
17	6702	LENS
18	6702	WASHER
19	6702	TUBE
20	6702	SHELL
21	6702	BRIDGE
22	6702	SCREW
23	6702	SLEEVE
24	6702	SCREW
25	6702	SCREW
26	6702	KNOB
27	6702	RING
28	6702	BUSHING
29	6702	LENS
30	6702	WASHER
31	6702	LENS
32	6702	WASHER
33	6702	LENS
34	6702	HOUSING
35	6702	NUT
36	6702	SCREW
37	6702	SLEEVE
38	6702	RETICLE
39	6702	HOUSING
40	6702	RING
41	6701	SETSCREW
42	6702	CAP
43	6702	SCREW

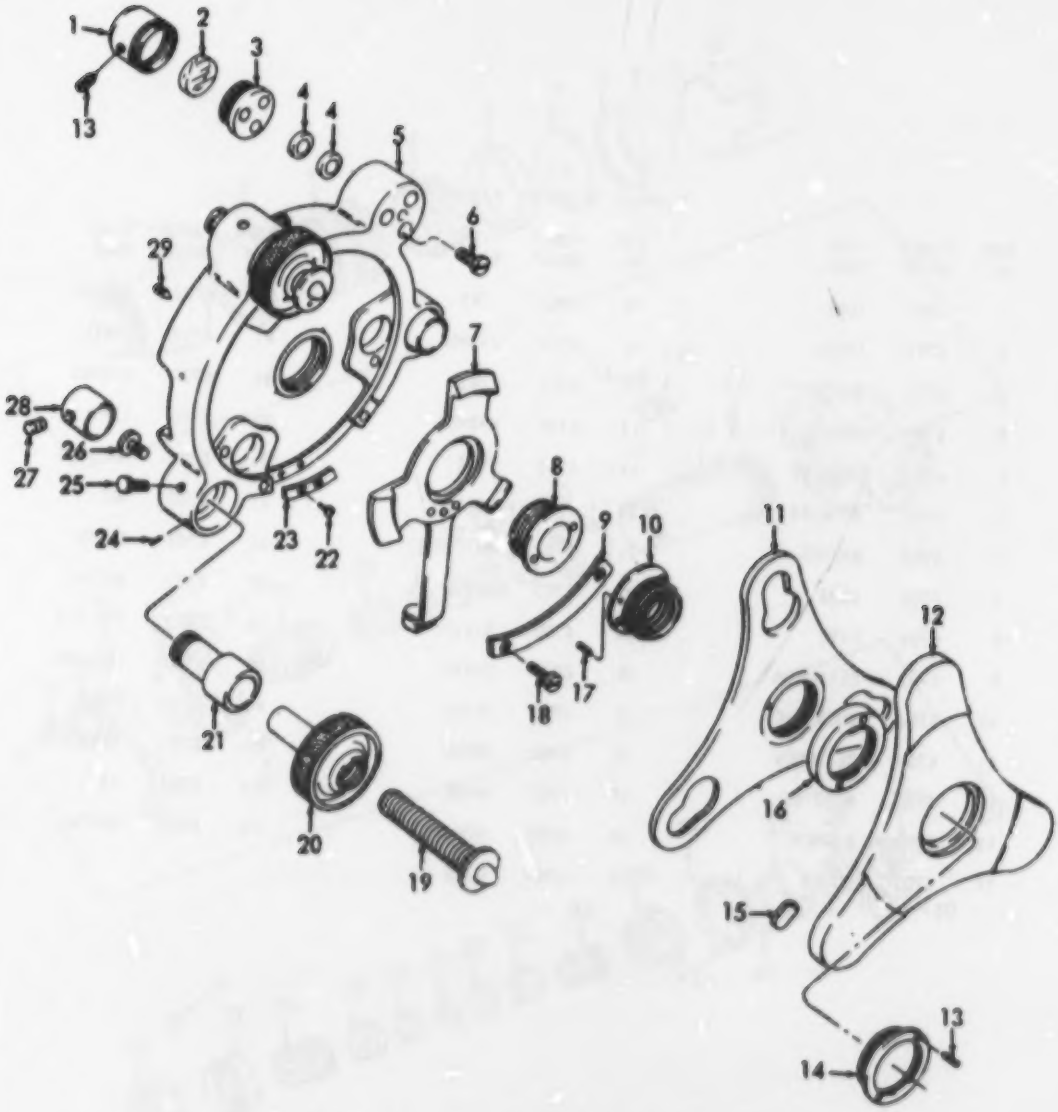

NSN 6675-200-2597/22

Figure 22. Tribrach, Footscrew and Starplate.

INDEX TO PARTS. FIGURE 22

REF NO.	FUNCT GROUP	ITEM NAME
1	6718	HOUSING
2	6718	LEVEL
3	6718	BASE
4	6718	WASHER
5	6703	TRIBRACH
6	6718	SCREW
7	6703	SPRING
8	6703	NUT
9	6703	LOCK
10	6703	NUT
11	6703	PLATE
12	6703	PLATE
13	6703	SCREW
13	6718	SCREW
14	6703	NUT
15	6703	PAD
16	6703	NUT
17	6703	SETSCREW
18	6703	SCREW
19	6703	FOOTSCREW AY
20	6703	KNOB
21	6703	NUT
22	6703	SCREW
23	6703	STOP
24	6703	SETSCREW
25	6703	SCREW
26	6703	SCREW
27	6703	SETSCREW
28	6703	COVER
29	6703	SCREW

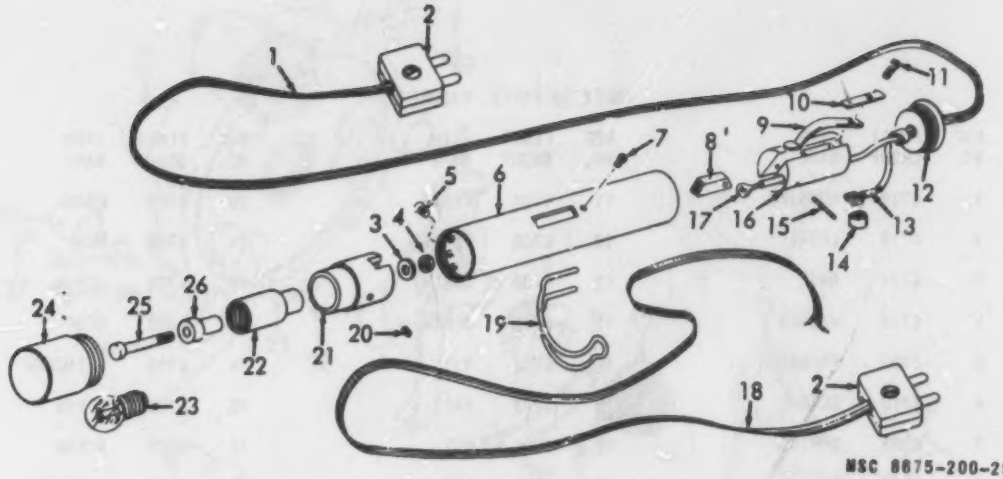

Figure 23. Handlight.

INDEX TO PARTS, FIGURE 23

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6709	CABLE	9	6709	SPRING	18	6717	LEAD
2	6709	CONNECTOR	10	6709	SPRING	19	6709	LEVER
2	6717	CONNECTOR	11	6709	SCREW	20	6709	SCREW
3	6709	INSULATION	12	6709	CAP	21	6709	ADAPTER
4	6709	NUT	13	6709	SLEEVE	22	6709	HOUSING
5	6709	SCREW	14	6709	TUBE	23	6709	LAMP
6	6709	TUBE	15	6709	PIN	24	6709	TUBE
7	6709	SCREW	16	6709	INSULATION	25	6709	CONTACT
8	6709	LEVER	17	6709	TERMINAL	26	6709	TUBE

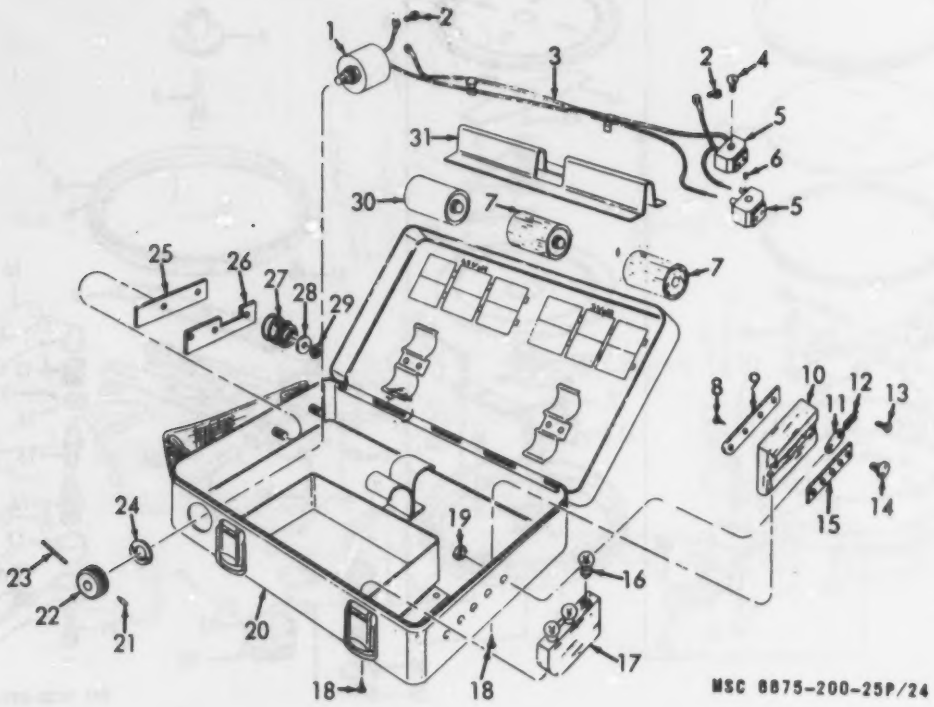

Figure 24. Battery Box.

INDEX TO PARTS, FIGURE 24

REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME	REF NO.	FUNCT GROUP	ITEM NAME
1	6717	RHEOSTAT	12	6717	SPRING	22	6717	KNOB
2	6717	SCREW	13	6717	SPRING	23	6717	PIN
3	6717	LEAD	13	6717	SCREW	24	6717	WASHER
4	6717	SCREW	14	6717	KNOB	25	6717	INSULATION
5	6717	SOCKET	15	6717	CONTACT	26	6717	CONTACT
6	6717	SCREW	16	6709	BUMPER	27	6717	SPRING
7	6717	DUMMY AY	17	6717	TRUNK	28	6717	WASHER
8	6717	SCREW	18	6717	SCREW	29	6717	NUT
9	6717	CONTACT	19	5717	NUT	30	6704	BATTERY
10	6717	TRUNK	20	6717	CASE	31	6717	WASHER
11	6717	LEVER	21	6717	SCREW			

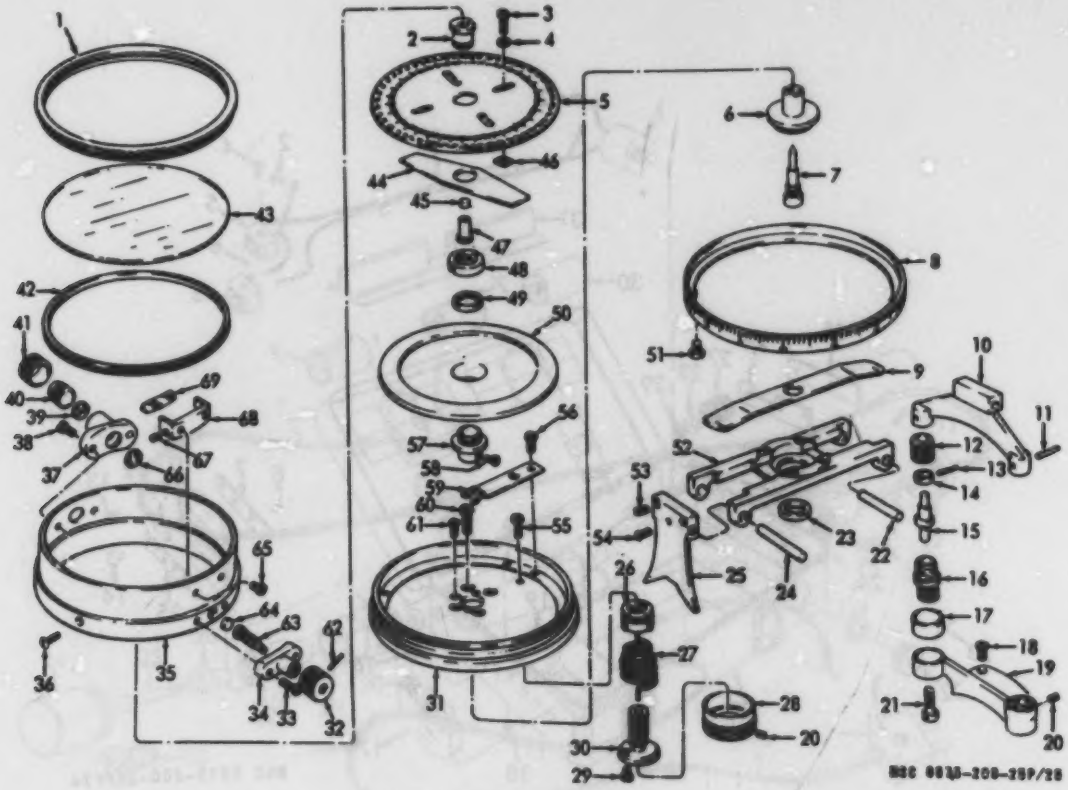

Figure 25. Compass.

INDEX TO PARTS, FIGURE 25

REF NO.	FUNCT GROUP	ITEM NAME
1	6718	HOUSING
2	6718	SLEEVE
3	6718	SCREW
4	6718	WASHER
5	6718	CIRCLE
6	6718	SLEEVE
7	6718	SCREW
8	6718	RING
9	6718	SPRING
10	6718	LEG
11	6718	PIN
12	6718	KNOB
13	6718	PIN
14	6718	RING
15	6718	PIN
16	6718	SLEEVE
17	6718	COVER
18	6718	SCREW
19	6718	BRIDGE
20	6718	SCREW
21	6718	SCREW
22	6718	PIN
23	6718	NUT
24	6718	PIN
25	6718	LEG
26	6718	BUSHING
27	6718	SPRING
28	6718	KNOB
29	6718	SCREW
30	6718	PIN
31	6718	BASE
32	6718	KNOB
33	6718	SCREW
34	6718	SLEEVE
35	6718	HOUSING
36	6718	SCREW
37	6718	BRIDGE
38	6718	SCREW
39	6718	LENS
40	6718	HOUSING
41	6718	KNOB
42	6718	RING
43	6718	WINDOW
44	6718	NEEDLE
45	6718	BEARING
46	6718	WEIGHT
47	6718	HOUSING
48	6718	RING
49	6718	NUT
50	6718	DISK
51	6718	SCREW
52	6718	SLEEVE
53	6718	SETSCREW
54	6718	SCREW
55	6718	SCREW
56	6718	SCREW
57	6718	SLEEVE
58	6718	SCREW
59	6718	SPRING
60	6718	SCREW
61	6718	SCREW
62	6718	PIN
63	6718	PIN
64	6718	WASHER
65	6718	SCREW
66	6718	LENS
67	6718	SETSCREW
67	6718	SCREW
68	6718	HOUSING
69	6719	PRISM

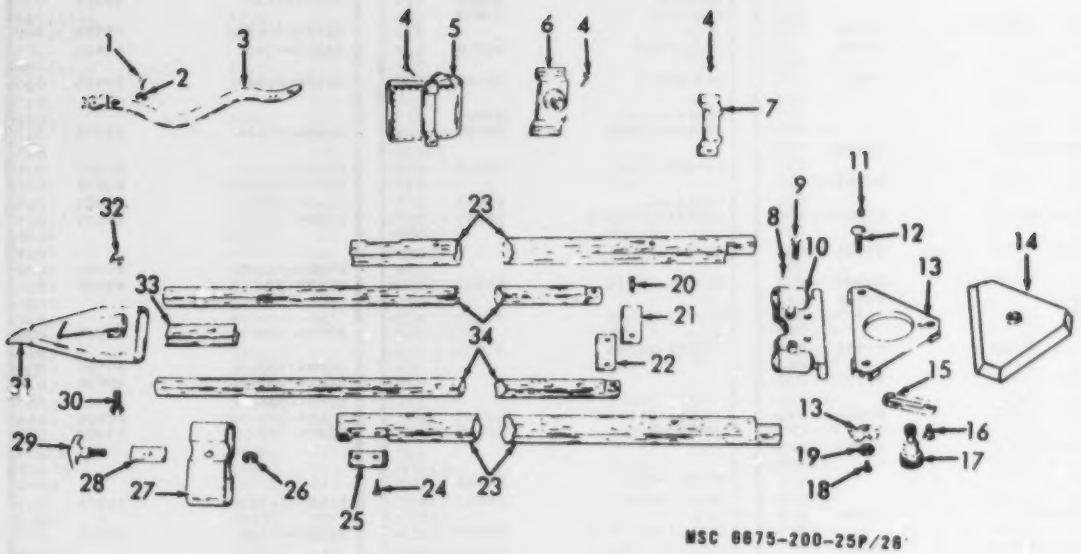

Figure 26. Tripod.

INDEX TO PARTS, FIGURE 26

REF NO.	FUNCT GROUP	ITEM NAME
1	6719	SCREW
2	6719	WASHER
3	6719	LEATHER STRAP
3	6719	BELT
4	2202	SCREW
4	6719	SCREW
5	2202	CASE AY
5	2202	KIT AY
6	6719	BRACKET
7	6719	BRACKET
8	6719	SCREW
9	6719	BOLT
10	6719	CLAMP
11	6719	PIN
12	6719	SCREW
13	6719	HEAD AY
14	6719	COVER
15	6719	BRACKET
16	6719	SCREW
17	6719	SCREW
18	6719	SCREW
19	6719	NUT
20	6719	SCREW
21	6719	PLATE
22	6719	PLATE
23	6719	LEG
24	6719	SCREW
25	6719	GUIDE
26	6719	LOCK
27	6719	CLAMP
28	6719	SHOE
29	6719	SCREW
30	6719	SCREW
31	6719	SHOE
32	6719	NUT
33	6719	WEDGE
34	6719	LEG

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
ABS3-2X2-6	89905	022
AB2-1-7X0-8	89905	017
AB2-2X1-3	89905	040
AB3-2-6X5	89905	032
		040
AC1-1-4X1-5	89905	028
		029
		036
AC1-1X1-4X1-5	89905	037
AC4-2X1-5	89905	028
		037
BA1-8X17	89905	003
		005
		025
		033
BA3-8X34-5	89905	006
		034
BA30	80063	002
		021
BA5-8X30	89905	003
		026
B3-10B	89905	031
		038
B3-10BT16-574	89905	038
B3-11	89905	031
B3-27	89905	032
		039
B3-60	89905	033
		040
B3-74	89905	033
		040
B3-92	89905	033
		040
CAA1-6X10	89905	003
		005
		025
		034
CA1-2X1-2	89905	013
		019
CA11-2-6X5-5	89905	030
		038
CA17-5X8-5	89905	016
CA18-2-6X5	89905	013
CA18-2X3	89905	023
CA19-5X6	89905	001
		012
CA4-1-7X4	89905	032
		040
CA6-2-6X8-5	89905	024
		031
CBZ2-2X2	89905	032
		040
CB27-3X3-8	89905	032
		039
CB1-2-6X2-7	89905	032
		040
CB1-3LX4-7	89905	003
		005
		025
		030
		034
		038
CB14-3X8	89905	018
CB16-2X3	89905	023
CB2-2-6X3-8	89905	016
CB2-2X2-5	89905	017
		024
CB2-3X6	89905	013
CB23-2X2-2	89905	016
		021
		024
		029
		037
CB3-2-6X4-7	89905	024
		029
		037
CB4-2X3	89905	025
CB5-1-7X1-6	89905	015
CB5-2-6X6	89905	019
CB6-2-6X4	89905	032
		040
CB6-3X4	89905	032

NUMBER	CODE	PAGE
		040
CB9-5X0-5X2-5	89905	015
CDK3-3X15	89905	024
		025
CD10-3X12	89905	032
		039
CD2-3X4	89905	019
CD3-3X10	89905	020
		021
CD4-2-6X7	89905	029
		037
CD9-3X5-5	89905	030
		038
DIN12782-6	89905	017
DIN404A2X3-5	89905	016
		020
DIN439-2-6	89905	023
		031
DIN439A2	89905	019
DIN551-1-7X1-5	89905	017
		020
		029
		036
DIN551-1-7X2	89905	024
		031
DIN551-2-6X8	89905	013
		020
DIN551-2X1-5	89905	016
		016
		020
		033
DIN551-2X2	89905	013
DIN551-2X3	89905	016
		016
		016
DIN551-2X4	89905	013
DIN551-3X6	89905	023
		031
DIN553-1-7X1-2	89905	038
DIN553-1-7X1-5	89905	014
		015
		019
		021
		021
		023
		025
		028
		028
		028
		036
		036
		037
DIN553-1-7X2	89905	030
		033
		040
DIN553-1-7X2-5	89905	015
		028
		036
DIN553-2-6X3	89905	019
DIN553-2-6X4	89905	038
DIN553-2X1-5	89905	013
		017
		024
DIN553-2X2	89905	032
		040
DIN553-2X2-5	89905	017
		020
		027
		030
		035
		038
DIN553-2X2-52	89905	014
DIN553-2X3	89905	015
		019
		020
		027
		028
		030
		035
		037
		038
DIN553-2X4	89905	018

NUMBER	CODE	PAGE
		032
		040
DIN553-2X5	89905	028
		037
DIN553-2X7	89905	021
DIN553-2X8	89905	013
DIN553-3X5	89905	030
		038
DIN63-2-6X4	89905	020
DIN674-3X8	89905	007
		035
DIN84-2-6X4	89905	016
		017
		020
DIN84-2-6X6	89905	017
		019
DIN84-2-6X7	89905	025
DIN84-2-6X8	89905	022
DIN84-2X11	89905	019
DIN84-2X3	89905	019
		020
		040
DIN84-2X3-5	89905	032
DIN84-2X4	89905	015
		016
		017
DIN84-2X6	89905	016
		019
DIN84-2X7	89905	019
DIN84-2X9	89905	019
DIN84-3X5	89905	013
DIN84-3X6	89905	013
DIN84-3X7	89905	030
		033
		038
		040
DIN85-1-7X2-5	89905	032
		040
DIN85-2-6X4	89905	023
		031
DIN85-2X3	89905	023
DIN85-2X4	89905	013
DIN85-3X5	89905	032
		040
DIN85-3X8	89905	032
		040
DIN87-1-7X3-5	89905	014
DIN87-2-6X4	89905	019
DIN87-3X8	89905	023
		031
DIN87-4X15	89905	003
		025
DIN88-2-6X7	89905	019
DIN88-2X5	89905	022
DIN88-3X28	89905	003
		026
DIN88-4X26	89905	006
		034
DIN91-2-6X6	89905	017
DIN91-2X5	89905	019
DIN91-2X7	89905	017
DIN920-1-7X2-5	89905	013
DIN920-2X4	89905	018
DIN920-3X6	89905	032
		040
DIN921-3X4	89905	029
		037
DIN926-2X1-6X2	89905	016
DIN927-2X2	89905	029
		037
DIN934-3	89905	022
		023
		030
DIN551-2X1-5	89905	020
DIN674-3X7	89905	001
		012
DIN84-2-6X6	89905	001
		012
DIN87-2X5	89905	001
		012
EA2-2-6X3-5	89905	030
		038

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
EA2-2X5-2	89905	036
EA2-2X5-3	89905	029
EA4-1-7X3-5	89905	024
		029
		037
EA5-2X2-4	89905	029
		037
EA6-2X3-6	89905	018
EA7-2X3-3	89905	016
		016
EB1-2X2-5	89905	022
EB10	89905	018
		023
EB125	89905	002
		022
		022
		024
EB131	89905	022
EB132	89905	022
EB133A	89905	022
EB134	89905	022
EB135	89905	022
EB136	89905	022
EB137	89905	022
EB139	89905	022
EB140A	89905	022
EB141	89905	022
EB142	89905	022
EB151	89905	022
EB152	89905	022
EB153	89905	022
EB154	89905	022
EB224-227	89905	022
EB301C	89905	030
EB3010	89905	023
EB302	89905	023
		030
EB303	89905	023
		030
EB306A	89905	023
		030
EB307A	89905	023
		030
EB309	89905	024
		031
EB310	89905	023
		030
EB315	89905	024
		031
EB316	89905	023
		030
EB319R	89905	002
		023
EB321	89905	024
		031
EB322	89905	024
		031
EB323	89905	005
		030
EB327	89905	030
EB327A	89905	023
EB328	89905	031
EB328A	89905	024
EB329	89905	002
		023
EB55A	89905	024
		031
EB6-3X3	89905	024
EB6-3X3	89905	021
HDB1-66	89905	007
		035
HDF3-4	89905	007
		035
HDW1-10	89905	011
		044
HDW1-5	89905	011
		044
HD2-21	89905	030
		033
HD2-6	89905	004
		027
HD6-63	89905	004

NUMBER	CODE	PAGE
		027
HD7-17	89905	004
		027
HED1132-9	89905	022
HEG3-64	89905	002
		002
		002
		002
		002
		021
		021
		022
		022
		023
HEJ1-28-11	89905	023
HEK1-1	89905	023
HEW2-13	89905	023
HE4-106	89905	018
		023
HE4-79	89905	022
HE5-21	89905	031
HM1-23	89905	005
		033
HM4-3	89905	010
		043
K2-418	89905	019
MZ25-0215	89905	024
N104918	89905	031
NT1-517	89905	001
		012
NT1-530	89905	030
		038
NT1-535	89905	033
		040
NT1-536	89905	038
		041
NT1-549AE	89905	017
NT1-554	89905	018
NT1-555	89905	018
NT1-573	89905	020
NT1-574A	89905	019
		021
NT1-585	89905	019
NT1-586	89905	018
NT1-591C	89905	019
		020
		021
NT1-592	89905	019
		021
NT1-593A	89905	020
		021
NT1-594	89905	019
		020
		021
NT1-605	89905	015
NT1-609	89905	015
NT1-634	89905	024
		025
		026
NT1-636A	89905	024
NT1-666	89905	024
		025
NT1-669	89905	029
		037
NT1-684	89905	019
		020
		021
NT1-685	89905	020
NT1-721	89905	013
NT1-727	89905	013
NT1-742	89905	028
		036
NT1-744	89905	028
		036
NT1-784	89905	001
		012
NT1-821	89905	016
NT1-893	89905	001
		012
NT1-901	89905	028
		036
NT1-913	89905	028

NUMBER	CODE	PAGE
		036
NT1-914	89905	029
		037
NT1-915	89905	026
		037
NT1-920	89905	029
		037
NT16-64	89905	018
NT2-160-1618	89905	029
		039
NT2-163A	89905	030
		038
NT2-164A	89905	029
		038
NT2-244	89905	023
NT2-3A2	89905	028
		036
NT2-3A4	89905	029
		037
NT2-3A5	89905	029
		037
NT2-3A6A	89905	029
		037
NT2-3A6B	89905	029
		037
NT2-3A6C	89905	029
NT2-3A6D	89905	037
NT2-3A7	89905	016
NT2-3A8	89905	016
NT2-390	89905	029
NT2-471	89905	028
NT2-471LII	89905	036
NT2-475	89905	028
NT2-475LII	89905	036
NT2-4A1	89905	028
		036
NT2-4A2	89905	028
		036
NT2-4A6TAF	89905	029
		036
NT2-549	89905	001
		012
NT2-551	89905	004
		027
NT2-60	89905	014
RDH1-297-298	89905	014
RDH1-299	89905	014
RDS1-244	89905	018
RDS1-252A	89905	018
RDS1-253	89905	019
RDS1-254	89905	018
RDS1-292	89905	001
		012
RDS1-293	89905	001
		012
RDS1-294	89905	001
		012
RDS1-295	89905	001
		012
RDS1-40	89905	016
		021
RDS1-41	89905	021
RDS1-51A	89905	014
RDS1-52A	89905	014
RDS1-53B	89905	014
		022
RDS1-54	89905	014
		022
TO-195AT16-591	89905	039
TO-198A	89905	039
TO-462	89905	001
		012
TO-63A	89905	038
TO-195A	89905	031
		039
TO-197A	89905	032
		039
TO-198A	89905	032
TO-199	89905	032
		039
TO-464A	89905	001
		012

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
T0-63A	89905	030
T0197A199	89905	039
T1-135	89905	020
T1-178	89905	019
T1-21	89905	030
T1-22	89905	030
T1-23	89905	030
		038
T1-24	89905	030
T1-25	89905	030
T1-250	89905	013
T1-325	89905	019
		020
		021
T1-338A	89905	021
		021
		026
T1-357A	89905	001
		012
T1-358B	89905	001
		012
T1-418	89905	028
		037
T1-433	89905	028
		036
T1-47-48	89905	015
T1-49	89905	015
T1-55	89905	015
T1A91	89905	038
T1A92	89905	038
T1A94	89905	038
T1A95	89905	038
T12-213	89905	017
T16-102A	89905	021
T16-105A106A	89905	014
T16-107A108A	89905	014
T16-111C	89905	021
T16-112	89905	014
T16-113	89905	014
T16-115B	89905	014
T16-118R	89905	014
T16-119	89905	021
T16-119AE	89905	021
T16-121	89905	021
T16-122A	89905	021
T16-123A	89905	016
		021
T16-131	89905	024
T16-132A	89905	025
T16-133	89905	025
T16-137	89905	024
T16-141	89905	013
T16-142	89905	013
T16-143	89905	013
T16-144	89905	013
T16-145	89905	013
T16-146	89905	013
		014
T16-147	89905	013
		015
T16-148	89905	013
T16-149A150A	89905	013
		014
T16-151	89905	013
T16-161	89905	027
		036
T16-162	89905	027
		036
T16-171-172	89905	028
		037
T16-173	89905	028
		037
T16-175	89905	028
		037
T16-183	89905	029
		037
T16-185	89905	028
		036
T16-187	89905	029
		036
T16-201	89905	014
T16-202-203	89905	014

NUMBER	CODE	PAGE
T16-204	89905	014
T16-205	89905	014
T16-206	89905	014
T16-21A	89905	030
		038
T16-211	89905	017
T16-212	89905	017
T16-214	89905	017
T16-215	89905	017
T16-216	89905	017
T16-217A	89905	017
T16-218	89905	017
T16-219	89905	017
T16-22-23-24	89905	030
		038
T16-220	89905	017
T16-221	89905	017
T16-231	89905	020
		021
		026
T16-241TC	89905	013
		017
T16-242	89905	017
T16-243	89905	017
T16-244	89905	014
T16-245	89905	015
T16-246	89905	014
T16-247	89905	014
T16-248	89905	015
T16-25	89905	030
		038
T16-260	89905	030
		038
T16-262B	89905	017
T16-263A	89905	016
T16-264TC	89905	016
T16-266A	89905	013
		017
T16-267	89905	015
		017
T16-268	89905	013
		017
T16-269	89905	015
		017
T16-27	89905	030
		038
T16-271A	89905	020
T16-272	89905	020
T16-273	89905	014
		020
T16-274	89905	015
		020
T16-276A	89905	014
T16-279	89905	014
T16-280A	89905	013
		020
T16-281	89905	015
		020
T16-283	89905	020
T16-284-285	89905	014
T16-286-287	89905	014
T16-291A	89905	024
T16-292	89905	024
T16-294	89905	015
		024
T16-295	89905	015
		024
T16-296	89905	015
		024
T16-297	89905	015
		024
T16-298	89905	016
		024
T16-299	89905	024
T16-311B	89905	029
T16-311C	89905	037
T16-311C317	89905	037
T16-312	89905	029
		029
		037
		037
T16-313	89905	029

NUMBER	CODE	PAGE
		029
		037
		037
T16-315	89905	029
		037
T16-316	89905	029
T16-317	89905	037
T16-321	89905	020
T16-322	89905	020
T16-331	89905	018
T16-332	89905	018
T16-333	89905	018
T16-334	89905	018
T16-335	89905	018
T16-336	89905	018
T16-337	89905	018
T16-338	89905	018
T16-340	89905	018
T16-351A	89905	001
		012
T16-361	89905	001
		012
T16-42	89905	018
T16-43A	89905	018
T16-44A	89905	018
		023
T16-45A	89905	018
		023
T16-46	89905	018
T16-47	89905	018
T16-48	89905	018
		023
T16-49	89905	018
T16-50	89905	018
T16-503	89905	023
T16-504	89905	023
T16-505	89905	022
T16-506	89905	002
		022
T16-507	89905	023
T16-51F	89905	018
T16-574	89905	038
T16-575	89905	039
T16-576	89905	039
T16-577	89905	038
T16-583TA	89905	032
		039
T16-584	89905	031
		039
T16-585	89905	033
		040
T16-586	89905	031
		039
T16-587	89905	032
		039
T16-588	89905	032
		039
T16-591	89905	031
		038
T16-593	89905	033
		040
T16-595P	89905	005
		008
		032
		040
T16-618	89905	018
T16-63	89905	019
		023
T16-64	89905	022
T16-65	89905	018
		022
T16-66B	89905	019
T16-67	89905	018
T16-68	89905	019
T16-698	89905	018
T16-70B	89905	013
		018
T16-701	89905	033
T16-702	89905	015
T16-703	89905	015
T16-704	89905	015
T16-705N	89905	015

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
T16-706-707	89905	015
T16-708	89905	015
T16-709	89905	015
T16-71A	89905	015
		019
T16-710-711	89905	015
T16-712	89905	015
T16-713	89905	015
T16-714	89905	015
T16-715	89905	021
T16-716	89905	021
T16-717T1-75	89905	025
T16-718	89905	024
T16-719	89905	024
T16-72	89905	018
		024
T16-720	89905	004
		004
		007
		008
		027
		029
		035
		037
T16-721	89905	028
		036
T16-722	89905	028
		036
T16-723	89905	028
		036
T16-724	89905	028
		036
T16-725-726	89905	028
T16-726L11	89905	036
T16-727	89905	028
		036
T16-728-729	89905	028
T16-729L11	89905	036
T16-73A	89905	019
T16-730	89905	028
		036
T16-731	89905	028
		036
T16-733	89905	029
		036
T16-734N	89905	017
T16-735T1-75	89905	024
T16-736	89905	028
		029
		036
		037
T16-737	89905	029
		037
T16-738	89905	001
		012
T16-739	89905	022
T16-74	89905	015
		019
T16-740P	89905	022
T16-741	89905	023
T16-742	89905	022
T16-743	89905	022
T16-744	89905	022
T16-75	89905	015
		019
T16-76	89905	016
		020
T16-761	89905	001
		012
T16-762	89905	028
		036
T16-763	89905	028
		036
T16-781	89905	031
		038
T16-782	89905	033
		040
T16-783	89905	033
		040
T16-784	89905	032
		039
T16-785	89905	033
		040
T16-786	89905	031
		039
T16-787	89905	031
		039
T16-788	89905	032
		039
T16-789	89905	032
		039
T16-790	89905	031
		039
T16-791	89905	033
		040
T16-792	89905	031
		038
T16-794	89905	031
T16-794G	89905	039
T16-795	89905	032
T16-795GB	89905	039
T16-796	89905	033
		040
T16-797	89905	031
		039
T16-798	89905	033
T16-799	89905	032
T16-800	89905	031
		039
T16-801TR	89905	031
		039
T16-802	89905	032
		039
T16-803	89905	031
		038
T16-804	89905	032
		039
T16-805	89905	031
		039
T16-806A	89905	033
		040
T16-807	89905	033
		040
T16-808	89905	032
		039
T16-809	89905	031
		039
T16-81	89905	016
T16-81-82-83	89905	016
T16-81Q	89905	033
		040
T16-811	89905	032
		039
T16-812	89905	007
		035
T16-82	89905	016
T16-83	89905	016
T16-84TC	89905	013
		016
T16-85	89905	016
T16-86	89905	016
T16-87	89905	016
T16-88	89905	017
T16-91	89905	015
T16-93TB	89905	015
T16-95	89905	015
T2-135	89905	020
		021
T2-501	89905	004
		027
T21-232	89905	040
VSM12770-0-8X8	89905	023
VSM12770-1	89905	023
		031
VSM12770-1-5X12	89905	018
VSM12770-1-5X18	89905	017
VSM12770-1-5X6-5	89905	019
VSM12770-1X10	89905	032
		039
VSM12770-1X6	89905	032
		039
VSM12770-1X8	89905	032
		039
VSM12771-0-8X4	89905	015
VSM12771-1-5X6-5	89905	018
		019
VSM12771-2-5X11	89905	013
VSM12771-2-5X19	89905	018
VSM12771-2-5X6	89905	003
		005
		025
		033
VSM12771-2-5X8	89905	014
		020
VSM12771-2X14	89905	022
VSM12771-2X2	89905	023
VSM12771-2X20	89905	014
VSM12771-2X3	89905	018
VSM12771-4X13	89905	024
VSM12771-4X32	89905	032
		032
		039
		039
VSM12800-3-5X1A	89905	003
		006
		026
		034
VSM12801-2-3X12	89905	023
		031
VSM12801-2X7	89905	023
VSM12801-3X20	89905	001
		012
VSM12801-3X20	89905	003
		006
		026
		034
VSM12801-4X18	89905	005
		033
VSM12802-2-6X12	89905	003
		007
		026
		035
VSM12802-2-6X1A	89905	003
		025
VSM12802-6X18	89905	005
		034
VSM12811-2X7	89905	031
XT16-101	89905	018
X16-102	89905	027
		028
		035
		036
XT16-103	89905	027
		028
		035
		036
XT16-104	89905	014
XT16-105	89905	021
XT16-106	89905	020
XT16-107	89905	001
		012
XT16-108	89905	001
		012
XT16-109	89905	029
		038
XT16-110	89905	030
XT16-110A	89905	038
XT16-111	89905	019
XT16-112	89905	002
		014
XT16-113	89905	002
		022
XT16-115	89905	004
		028
XT16-115A	89905	007
—		036
XT16-116	89905	004
		029
XT16-116A	89905	007
		037
XT16-117	89905	002
		016
XT16-118	89905	005
		031
XT16-118AM1L	89905	008
		038

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
XT16-121	89905	029
XT16-121A	89905	038
XT16-122	89905	018
XT16-123	89905	017
XT16-124	89905	015
XT16-125	89905	021
XT16-126	89905	024
XT16-127	89905	013
XT16-128	89905	027
XT16-128A	89905	035
XT16-129	89905	027
		028
XT16-129A	89905	035
		036
XT16-130	89905	027
		029
		035
		036
XT16-131	89905	014
XT16-132	89905	017
XT16-133	89905	021
XT16-134	89905	017
XT16-135	89905	017
XT16-136	89905	020
XT16-138	89905	029
XT16-138A	89905	037
XT16-139	89905	020
XT16-140	89905	019
XT16-150	89905	030
		033
XT16-150A	89905	038
		040
XT16-151	89905	015
XT16-152	89905	015
XT16-153	89905	015
XT16-154	89905	014
		021
XT16-155	89905	014
		021
XT16-156	89905	014
		021
XT16-157	89905	029
		036
XT16-158	89905	014
XT16-159	89905	013
XT16-160	89905	016
		017
XT16-161	89905	014
		020
XT16-162	89905	014
		020
XT16-163	89905	031
XT16-164	89905	031
XT16-165	89905	039
XT16-166	89905	038
XT16-170	89905	016
XT2-27	89905	023
		030
XT2-29	89905	001
		012
XT2-35	89905	004
		027
XT2-35A	89905	007
		035
XT2-72	89905	002
		024
XT2-73	89905	002
		022
XT2-74	89905	005
		030
XT2-75	89905	005
		033
XT2-75A	89905	003
		025
XT2-92	89905	002
		013
XT21-100	89905	005
		034
XT21-335	89905	003
		025
XT21-337	89905	003
		025

NUMBER	CODE	PAGE
1A10	89905	003
		005
		025
		034
1A33C	89905	005
		034
1A37	89905	003
		025
1A6	89905	005
		033
1A6A	89905	003
		025
1B15A	89905	002
		025
1118	89905	005
		033
12-3-2X1	89905	007
		035
12B27A	89905	007
		035
12B27A28	89905	007
		035
12B28	89905	007
		035
12415-3	89905	001
		012
16813	89905	003
		025
2A20A	89905	007
		035
2A20A23A	89905	007
		035
2A23A	89905	007
		035
2A36A	89905	005
		034
2A36B	89905	003
		025
218	89905	002
		025
21B11	89905	003
		025
21B12	89905	003
		025
21B12-13	99905	003
		025
21B13	89905	003
		025
21B14	89905	003
		025
21B15	89905	003
		025
21B16	89905	003
		025
21B18S	89905	003
		026
21B19	89905	002
		025
21B32-16B13	89905	002
		025
21B32A5	89905	002
		025
21B52S	89905	002
		025
25PM	89905	016
3A11	89905	002
		005
		025
		033
3A29	89905	004
		007
		009
		027
		035
		042
3A32A	89905	004
		027
3A39A	89905	004
		007
		027
		035
3A40	89905	004

NUMBER	CODE	PAGE
		007
		027
		035
3A50851A	89905	003
		005
		025
		033
3A528	89905	003
		025
3A54A	89905	004
		027
3A548	89905	007
		035
3A55	89905	009
		042
3A56	89905	007
		035
3A57	89905	005
		033
3A59	89905	001
		012
3A63	89905	002
		025
3B12R	89905	005
		034
3B13A	89905	005
		034
3B14R	89905	005
		033
3B14R16A17A	89905	005
		033
3B16A	89905	005
		033
3B17A	89905	005
		033
3821	89905	006
		034
3823	89905	005
		034
3830	89905	006
		034
3831	89905	006
		034
3B35A36	89905	004
		027
3840A	89905	005
		033
3842	89905	006
		034
3845	89905	005
		033
3875	89905	005
		033
4020-270-1659		004
		006
		007
		008
		027
		034
		035
		041
446-1983		003
5X2-1X0-5	89905	020
5120-180 0705		010
		043
5120-378-9303		010
		043
5120-378-9520		004
		007
		009
		027
		035
		042
5120-429-2948		011
		044
5120-446-2860		011
		044
5210-353-4130		004
		007
		027
		035
5210-974-7394		004

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
		027
5305-353-4146		024
		029
		037
5305-378-2539		019
5305-378-9223		022
5305-378-9228		040
5305-378-9230		028
		037
5305-378-9235		013
5305-378-9236		023
5305-378-9252		032
		032
		039
5305-378-9253		003
		025
5305-378-9259		016
5305-378-9260		017
		024
5305-378-9261		013
5305-378-9267		019
5305-378-9269		032
		040
5305-378-9274		030
		038
5305-378-9277		036
5305-378-9281		016
		016
5305-378-9283		022
5305-378-9518		005
		034
5305-378-9529		024
		031
5305-378-9532		030
		033
		040
5305-378-9533		015
		028
		036
5305-378-9534		014
5305-378-9535		038
5305-378-9537		013
		017
		024
5305-378-9538		040
5305-378-9539		015
		020
		027
		028
		030
		035
		037
		038
5305-378-9540		032
5305-378-9544		016
		017
		020
5305-378-9545		022
5305-378-9547		015
		016
5305-378-9548		030
		038
5305-378-9550		023
		031
5305-418-9676		003
		007
		026
		035
5305-420-9619		030
		038
5305-423-4240		017
5305-423-4243		028
		029
		036
5305-425-1202		032
		040
5305-425-2506		015
5305-429-2517		014
		019
		023
		025
		028

NUMBER	CODE	PAGE
		028
		028
		036
		036
		037
5305-429-2534		013
		020
5305-429-2585		016
		016
		020
		020
		033
5305-429-2617		014
		017
		020
		027
		030
		038
5305-429-2731		001
		012
		017
		019
5305-429-2844		019
5305-492-2517		021
5305-492-2617		035
5305-560-6326		020
5305-560-6327		025
5305-560-6330		032
		040
5305-560-6343		014
5305-560-6345		017
5305-560-6364		016
5305-647-0935		005
		033
5305-786-5222		005
		008
		032
		040
5305-831-0147		003
		005
		025
		034
5305-956-7036		038
5305-956-7037		032
5305-956-7038		019
5306-220-5685		018
5306-353-4141		003
		005
		029
		033
5306-429-2517		021
5310-426-7267		017
5310-560-1986		005
		033
5310-647-0924		003
		005
		025
		034
553-1-7X3	89905	014
5905-955-1210		023
5935-378-9285		002
		022
		022
		024
5975-789-0743		022
6X3-2X0-5	89905	001
		012
6130-831-0183		024
		031
6135-120-1020		002
		021
6135-378-9308		031
6145-353-4121		023
		023
		030
6150-378-9500		002
		024
6650-624-3686		002
		013
6675-069-8059		001
		012
6675-353-4103		009

NUMBER	CODE	PAGE
		042
6675-353-4123		001
		012
6675-377-4907		014
6675-378-9286		022
6675-378-9287		022
6675-378-9288		022
6675-378-9289		022
6675-378-9290		022
6675-378-9291		022
6675-378-9292		022
6675-378-9293		022
6675-378-9294		022
6675-378-9297		024
		031
6675-378-9301		022
6675-378-9302		031
6675-378-9386		028
6675-378-9390		028
		036
6675-378-9391		028
		036
6675-378-9401		001
		012
6675-378-9443		028
		037
6675-378-9501		002
		022
6675-378-9502		002
		023
6675-378-9503		005
		033
6675-378-9510		001
		012
6675-378-9517		014
6675-378-9525		002
		025
6675-404-4400		002
		014
6675-404-4494		039
6675-404-4502		014
6675-404-4507		014
6675-404-4509		013
		014
6675-404-4510		028
		037
6675-404-4526		014
6675-404-4533		030
		038
6675-404-4534		014
6675-404-4535		014
6675-404-4538		037
6675-404-9658		015
6675-404-9664		015
6675-411-2024		025
6675-411-2032		024
6675-411-2034		016
6675-411-2035		023
6675-411-2049		018
6675-411-2050		019
6675-411-2053		032
		032
		039
		039
6675-413-2271		015
6675-413-2425		016
		020
6675-413-2427		024
		029
		037
6675-413-2441		029
		038
6675-416-2678		014
6675-416-5933		015
6675-416-6726		018
		019
6675-416-7733		013
6675-416-7735		018
6675-416-7736		014
		020
6675-416-7901		022
6675-416-8647		023

FEDERAL STOCK NUMBER AND PART NUMBER INDEX

NUMBER	CODE	PAGE
6675-416-8866		018
6675-416-8870		024
6675-416-8882		002
		025
6675-439-8034		023
6675-446-1762		007
		035
6675-446-1768		007
		037
6675-446-1969		032
		039
6675-446-1970		032
		039
6675-446-1972		032
		039
6675-446-1977		023
		031
6675-446-1983		001
		006
		012
		026
		034
6675-446-1986		023
		031
6675-560-5461		038
6675-560-5462		004
		004
		007
		008
		027
		029
		035
		037
6675-560-5463		007
		035
6675-560-5472		001
		012
6675-560-5586		007
		036
6675-560-5587		002
		016
6675-560-5649		002
		022
6675-560-6082		013
6675-859-5936		002
		022
6675-641-3572		042
		025
6675-647-0914		002
		025
6675-647-0925		006
		034
6675-647-0926		005
		034
6675-647-0927		005
		034
6675-677-0914		005
		033
6675-786-5210		031
6675-789-0568		022
6675-804-7340		017
6675-804-7341		003
		006
		026
		034
6675-804-7342		003
		025
6675-805-3156		030
		038
6675-806-0211		024
		031
6675-830-8689		001
		012
6675-859-5936		002
		002
		002
		002
		003
		021
		021
		022
		023

NUMBER	CODE	PAGE
		026
6675-860-0168		038
6675-860-0169		003
		005
		025
		033
6675-862-2583		017
		020
		029
		036
6675-862-2584		013
6675-862-2585		019
6675-887-5561		005
		008
		031
		038
6675-897-9074		005
		033
6675-953-0028		032
		039
6675-956-6950		005
		033
6675-962-4522		031
		039
6675-962-4523		032
		039
6675-966-5793		004
		027
6675-974-7362		004
		027
6675-974-7363		004
		027
6675-974-7365		025
6675-974-7366		004
		028
6675-974-7367		004
		029
6675-991-6455		033
		040
6675-996-1725		040
6675-996-3692		030
6675-996-3694		003
		025
6675-996-3712		033
7920-205-0565		001
		012
8X3-3X1	89905	031
8X4-2X0-5	89905	003
		006
		026
		034
8105-974-7393		004
		027
8330-634-0084		004
		027
8330-965-1722		006
		007
		008
		034
		035
		041

NUMBER	CODE	PAGE

TM 5-6675-200-25P

By Order of the Secretary of the Army:

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

Official.

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

Active Army:

USASA (2)
ACSI (1)
DCSLOG (1)
CNGB (1)
TSG (1)
CofEngrs (3)
CC-E (1)
Dir of Trans (1)
CofSptS (1)
USAMB (1)
USAARTYBD (2)
USAARENBD (2)
USAIB (2)
USAADBD (2)
USAAESWBD (2)
USAAVNTBD (2)
USCONARC (3)
OS Maj Comd (5)
USAMC (1)
MDW (1)
Armies (2)
Corps (2)
USAC (1)
Div (2)
Engr Bde (1)
USMA (2)
Svc Colleges (2)
Br Svc Sch (2)
Gen Dep (10)
Engr Dep (10)
Army Dep (2) except
TOAD (3)
USA Tml Comd (2)
Army Tml (1)
Div Engr (2)
Engr Dst (2)
USA Engr RD Lab (3)
USAMEC (46)
USACDCEC (10)
USAECFB (5)
USAREUR Engr Proc
Cen (2)
USAREUR Engr Sup
Con Agcy
Engr FLDMS (2)
Ft Knox FLDMS (10)
Fld Comd, DASA (8)
AMS (3)
USAREURCOMZ (2)
MAAG (1)
JBUSMC (1)
Units org under fol TOE:
(2 cys ea UNOINDC):
1-100
1-101
5-5
5-6
5-16
5-48
5-237 (5)
5-262 (5)
5-267 (1)
o-278 (5)
5-279
5-500(EG)
6-100
6-115
6-116
6-134
6-155
6-165
6-166
6-175
6-176
6-185
6-186
6-204
6-215
6-216
6-228
6-285
6-286
6-300
6-345
6-346
6-355
6-356
6-365
6-366
6-385
6-386
6-405
6-406
6-415
6-416
6-425
6-426
6-436
6-435
6-445
6-465
6-466
6-525
6-526
6-565
6-585
6-700
6-705
6-706
7-100
17-100
17-51
17-55
29-16
29-17
29-27
29-36
29-37
29-79
29-56
29-57
37-100
39-51
39-61
39-65
44-114
44-116
57-100
77-100

NG: State AG (3).
USAR: Same as Active Army except allowance is one copy to each unit.
For explanation of abbreviations used see AR 320-50.

* U. S. GOVERNMENT PRINTING OFFICE : 1989 - O 245-466 (08425)

PIN : 028256-000

best copy available